



TEST EQUIPMENT FACILITY

INSTRUCTION MANUAL

FM SUBCARRIER DEMODULATOR MODEL GFD-13



DATA-CONTROL SYSTEMS, INC., EAST LIBERTY STREET, DANBURY, CONNECTICUT



Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_10452

INSTRUCTION MANUAL

FM SUBCARRIER DEMODULATOR

MODEL GFD-13

COMPOSITION PAGE

INSTRUCTION MANUAL

FM SUBCARRIER DEMODULATOR

MODEL GFD-13

This instruction manual consists
of the following pages:

Title Page	
Composition Page	A
Front Matter	i to vi
Section I	1-1 to 1-23
Section II	2-1 to 2-8
Section III	3-1 to 3-9
Section IV	4-1 to 4-37
Section V	5-1 to 5-47
Section VI	6-1

This material is the property of Data Control Systems, Inc., and is furnished for the installation and operation of DCS products only. Reproduction of these contents or use for any commercial purpose without prior permission is forbidden. All rights in the material are reserved.

DOCUMENT NO.: 660215
660215-A

PUBLICATION DATE: 2/15/66
6/30/66

TABLE OF CONTENTS

Section		Page
I	DESCRIPTION AND LEADING PARTICULARS	
1-1	Purpose and Scope	1-1
1-5	FM Subcarrier Demodulator, Model GFD-13	1-1
1-8	Physical Characteristics	1-3
1-16	Electrical Characteristics	1-6
1-17	Drift Characteristics	1-6
1-20	Sensitivity	1-6
1-22	Low Modulation Index Signal Handling	1-7
1-23	Output Amplifier	1-8
1-25	Metering Provisions	1-8
1-26	Tape Speed Compensation	1-8
1-27	Tuning Units	1-8
1-28	Low Pass Filters	1-12
1-29	Housing	1-12
1-30	Performance Characteristics	1-12
II	INSTALLATION	
2-1	General	2-1
2-3	Unpacking and Handling	2-1
2-6	Mounting	2-1
2-10	Cooling	2-1
2-12	Connectors	2-3
III	OPERATION	
3-1	General	3-1
3-3	Operating Instructions	3-1
3-4	Tuning Unit and Low Pass Filters	3-2
3-6	Choice of Low Pass Filter	3-2
3-11	Controls and Indicators (Figure 3-1)	3-6

APPENDIX B

1998

APPENDIX B.1: THE 1998 BUDGET

1998	1997	1996	1995	1994	1993	1992	1991	1990	1989	1988	1987	1986	1985	1984	1983	1982	1981	1980	1979	1978	1977	1976	1975	1974	1973	1972	1971	1970	1969	1968	1967	1966	1965	1964	1963	1962	1961	1960	1959	1958	1957	1956	1955	1954	1953	1952	1951	1950	1949	1948	1947	1946	1945	1944	1943	1942	1941	1940	1939	1938	1937	1936	1935	1934	1933	1932	1931	1930	1929	1928	1927	1926	1925	1924	1923	1922	1921	1920	1919	1918	1917	1916	1915	1914	1913	1912	1911	1910	1909	1908	1907	1906	1905	1904	1903	1902	1901	1900	1899	1898	1897	1896	1895	1894	1893	1892	1891	1890	1889	1888	1887	1886	1885	1884	1883	1882	1881	1880	1879	1878	1877	1876	1875	1874	1873	1872	1871	1870	1869	1868	1867	1866	1865	1864	1863	1862	1861	1860	1859	1858	1857	1856	1855	1854	1853	1852	1851	1850	1849	1848	1847	1846	1845	1844	1843	1842	1841	1840	1839	1838	1837	1836	1835	1834	1833	1832	1831	1830	1829	1828	1827	1826	1825	1824	1823	1822	1821	1820	1819	1818	1817	1816	1815	1814	1813	1812	1811	1810	1809	1808	1807	1806	1805	1804	1803	1802	1801	1800	1799	1798	1797	1796	1795	1794	1793	1792	1791	1790	1789	1788	1787	1786	1785	1784	1783	1782	1781	1780	1779	1778	1777	1776	1775	1774	1773	1772	1771	1770	1769	1768	1767	1766	1765	1764	1763	1762	1761	1760	1759	1758	1757	1756	1755	1754	1753	1752	1751	1750	1749	1748	1747	1746	1745	1744	1743	1742	1741	1740	1739	1738	1737	1736	1735	1734	1733	1732	1731	1730	1729	1728	1727	1726	1725	1724	1723	1722	1721	1720	1719	1718	1717	1716	1715	1714	1713	1712	1711	1710	1709	1708	1707	1706	1705	1704	1703	1702	1701	1700	1699	1698	1697	1696	1695	1694	1693	1692	1691	1690	1689	1688	1687	1686	1685	1684	1683	1682	1681	1680	1679	1678	1677	1676	1675	1674	1673	1672	1671	1670	1669	1668	1667	1666	1665	1664	1663	1662	1661	1660	1659	1658	1657	1656	1655	1654	1653	1652	1651	1650	1649	1648	1647	1646	1645	1644	1643	1642	1641	1640	1639	1638	1637	1636	1635	1634	1633	1632	1631	1630	1629	1628	1627	1626	1625	1624	1623	1622	1621	1620	1619	1618	1617	1616	1615	1614	1613	1612	1611	1610	1609	1608	1607	1606	1605	1604	1603	1602	1601	1600	1599	1598	1597	1596	1595	1594	1593	1592	1591	1590	1589	1588	1587	1586	1585	1584	1583	1582	1581	1580	1579	1578	1577	1576	1575	1574	1573	1572	1571	1570	1569	1568	1567	1566	1565	1564	1563	1562	1561	1560	1559	1558	1557	1556	1555	1554	1553	1552	1551	1550	1549	1548	1547	1546	1545	1544	1543	1542	1541	1540	1539	1538	1537	1536	1535	1534	1533	1532	1531	1530	1529	1528	1527	1526	1525	1524	1523	1522	1521	1520	1519	1518	1517	1516	1515	1514	1513	1512	1511	1510	1509	1508	1507	1506	1505	1504	1503	1502	1501	1500	1499	1498	1497	1496	1495	1494	1493	1492	1491	1490	1489	1488	1487	1486	1485	1484	1483	1482	1481	1480	1479	1478	1477	1476	1475	1474	1473	1472	1471	1470	1469	1468	1467	1466	1465	1464	1463	1462	1461	1460	1459	1458	1457	1456	1455	1454	1453	1452	1451	1450	1449	1448	1447	1446	1445	1444	1443	1442	1441	1440	1439	1438	1437	1436	1435	1434	1433	1432	1431	1430	1429	1428	1427	1426	1425	1424	1423	1422	1421	1420	1419	1418	1417	1416	1415	1414	1413	1412	1411	1410	1409	1408	1407	1406	1405	1404	1403	1402	1401	1400	1399	1398	1397	1396	1395	1394	1393	1392	1391	1390	1389	1388	1387	1386	1385	1384	1383	1382	1381	1380	1379	1378	1377	1376	1375	1374	1373	1372	1371	1370	1369	1368	1367	1366	1365	1364	1363	1362	1361	1360	1359	1358	1357	1356	1355	1354	1353	1352	1351	1350	1349	1348	1347	1346	1345	1344	1343	1342	1341	1340	1339	1338	1337	1336	1335	1334	1333	1332	1331	1330	1329	1328	1327	1326	1325	1324	1323	1322	1321	1320	1319	1318	1317	1316	1315	1314	1313	1312	1311	1310	1309	1308	1307	1306	1305	1304	1303	1302	1301	1300	1299	1298	1297	1296	1295	1294	1293	1292	1291	1290	1289	1288	1287	1286	1285	1284	1283	1282	1281	1280	1279	1278	1277	1276	1275	1274	1273	1272	1271	1270	1269	1268	1267	1266	1265	1264	1263	1262	1261	1260	1259	1258	1257	1256	1255	1254	1253	1252	1251	1250	1249	1248	1247	1246	1245	1244	1243	1242	1241	1240	1239	1238	1237	1236	1235	1234	1233	1232	1231	1230	1229	1228	1227	1226	1225	1224	1223	1222	1221	1220	1219	1218	1217	1216	1215	1214	1213	1212	1211	1210	1209	1208	1207	1206	1205	1204	1203	1202	1201	1200	1199	1198	1197	1196	1195	1194	1193	1192	1191	1190	1189	1188	1187	1186	1185	1184	1183	1182	1181	1180	1179	1178	1177	1176	1175	1174	1173	1172	1171	1170	1169	1168	1167	1166	1165	1164	1163	1162	1161	1160	1159	1158	1157	1156	1155	1154	1153	1152	1151	1150	1149	1148	1147	1146	1145	1144	1143	1142	1141	1140	1139	1138	1137	1136	1135	1134	1133	1132	1131	1130	1129	1128	1127	1126	1125	1124	1123	1122	1121	1120	1119	1118	1117	1116	1115	1114	1113	1112	1111	1110	1109	1108	1107	1106	1105	1104	1103	1102	1101	1100	1099	1098	1097	1096	1095	1094	1093	1092	1091	1090	1089	1088	1087	1086	1085	1084	1083	1082	1081	1080	1079	1078	1077	1076	1075	1074	1073	1072	1071	1070	1069	1068	1067	1066	1065	1064	1063	1062	1061	1060	1059	1058	1057	1056	1055	1054	1053	1052	1051	1050	1049	1048	1047	1046	1045	1044	1043	1042	1041	1040	1039	1038	1037	1036	1035	1034	1033	1032	1031	1030	1029	1028	1027	1026	1025	1024	1023	1022	1021	1020	1019	1018	1017	1016	1015	1014	1013	1012	1011	1010	1009	1008	1007	1006	1005	1004	1003	1002	1001	1000	999	998	997	996	995	994	993	992	991	990	989	988	987	986	985	984	983	982	981	980	979	978	977	976	975	974	973	972	971	970	969	968	967	966	965	964	963	962	961	960	959	958	957	956	955	954	953	952	951	950	949	948	947	946	945	944	943	942	941	940	939	938	937	936	935	934	933	932	931	930	929	928	927	926	925	924	923	922	921	920	919	918	917	916	915	914	913	912	911	910	909	908	907	906	905	904	903	902	901	900	899	898	897	896	895	894	893	892	891	890	889	888	887	886	885	884	883	882	881	880	879	878	877	876	875	874	873	872	871	870	869	868	867	866	865	864	863	862	861	860	859	858	857	856	855	854	853	852	851	850	849	848	847	846	845	844	843	842	841	840	839	838	837	836	835	834	833	832	831	830	829	828	827	826	825	824	823	822	821	820	819	818	817	816	815	814	813	812	811	810	809	808	807	806	805	804	803	802	801	800	799	798	797	796	795	794	793	792	791	790	789	788	787	786	785	784	783	782	781	780	779	778	777	776	775	774	773	772	771	770	769	768	767	766	765	764	763	762	761	760	759	758	757	756	755	754	753	752	751	750	749	748	747	746	745	744	743	742	741	740	739	738	737	736	735	734	733	732	731	730	729	728	727	726	725	724	723	722	721	720	719	718	717	716	715	714	713	712	711	710	709	708	707	706	705	704	703	702	701	700	699	698	697	696	695	694	693	692	691	690	689	688	687	686	685	684	683	682	681	680	679	678	677	676	675	674	673	672	671	670	669	668	667	666	665	664	663	662	661	660	659	658	657	656	655	654	653	652	651	650	649	648	647	646	645	644	643	642	641	640	639	638	637	636	635	634	633	632	631	630	629	628	627	626	625	624	623	622	621	620	619	618	617	616	615	614	613	612	611	610	609	608	607	606	605	604	603	602	601	600	599</
------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	------	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-----	-------

TABLE OF CONTENTS (continued)

Section		Page
IV	THEORY OF OPERATION	
4-1	General	4-1
4-3	A Radio Telemetry System	4-1
4-7	Data Demodulator	4-1
4-17	Phase-Locked Loop Demodulator	4-5
4-27	Low Pass Output Filter and Amplifier	4-7
4-33	Detailed Circuit Description	4-9
4-34	Band Pass Filter	4-9
4-36	Limiters	4-9
4-42	Third Limiter	4-13
4-44	Input Signal Level Meter	4-13
4-51	Phase-Locked Loop Demodulator	4-17
4-65	Phase-Locked Loop Demodulator Operation	4-21
4-72	Loss of Lock Indicator	4-24
4-75	Low Pass Output Filter	4-26
4-83	Power Supply	4-31
4-84	Adjustable Loop Filter, GFD-13/TUA	4-31
4-94	Tape Speed Compensation	4-35
V	MAINTENANCE	
5-1	General	5-1
5-3	Test Equipment	5-1
5-4	Preventive Maintenance	5-1
5-5	Visual Inspection	5-1
5-6	Weekly Inspection	5-1
5-7	Semi-Annual Inspection	5-2
5-8	Performance Test	5-3
5-9	Troubleshooting	5-4
5-10	General	5-4

TABLE OF CONTENTS (continued)

Section		Page
5-11	Test Procedure	5-5
5-15	Location of Components	5-5
5-16	Repair	5-15
VI	DRAWINGS	
6-1	General	6-1

LIST OF ILLUSTRATIONS

Figure		Page
1-1	FM Subcarrier Demodulator, Model GFD-13	1-0
1-2	Outline Drawing of GFD-13 FM Subcarrier Demodulator and GMH-13 Housing	1-4
1-2A	Identification of Subassemblies	1-5
1-3	Multi-Pole Band Pass Filter Characteristics	1-7
1-4	Conventional and Simplified Tape Speed Compensation Systems	1-9
1-5	Tuning Unit, Model GFD-13/TU	1-10
1-6	Combined Response of Band Pass and Loop Filters in GFD-13 for various demodulation noise bandwidths (switch-selectable in GFD-13/TUA Adjustable Loop Filter Tuning Unit)	1-17
1-7	Characteristics of Constant Amplitude and Linear Phase GFD-13/TU/L Standard Low Pass Filters	1-21
1-8	Characteristics of Constant Amplitude and Linear Phase GFD-13/ TU/LSM Standard Switchable Low Pass Filters	1-23
2-1	Mounting Angles, Type I and Type II	2-2
2-2	Typical Example of Rack Cooling	2-4
2-3	Assembly of Male and Female Contacts	2-5
3-1	Low Pass Output Filter Amplitude Characteristics	3-4
3-2	Low Pass Output Filter Phase Characteristics	3-5
3-3	Step Function Response of Linear Phase and Constant Amplitude Low Pass Output Filters	3-3
3-4	Controls and Indicators	3-8
4-1	Radio Telemetry System, Block Diagram	4-2
4-2	Data Demodulator, Block Diagram	4-3
4-3	Low Pass Output Filter and Amplifier, Schematic	4-8
4-4	Band Pass Filter, Schematic	4-10
4-5	First and Second Limiter Stages	4-12
4-6	Third Limiter, Schematic	4-14
4-7	Input Signal Level Meter, Schematic	4-15
4-8	Phase-Locked Loop Demodulator, Schematic	4-18
4-9	Waveforms in the Phase-Locked Loop Demodulator	4-20

LIST OF ILLUSTRATIONS (continued)

Figure		Page
4-10	VCO Waveforms	4-23
4-11	Loss of Lock Indicator, Schematic	4-25
4-12	Phase Comparator Waveforms	4-27
4-13	Broad Band DC Amplifier, Schematic	4-28
4-14	Tape Speed Compensation	4-36
5-1	Location of DC Voltages on Main Connector Board	5-2
5-2	Waveforms	5-8 thru 5-12
5-3	Location of Emitter-Base-Collector Terminals	5-13 & 5-14
5-4	Limiter Board Assembly	5-16
5-5	Tuning Unit Assembly (Band Pass, Loop Filter and VCO Low Pass)	5-17
5-6	VCO Board Assembly (3rd Limiter, Phase Splitter and Demodulator)	5-18
5-7	DC Amplifier and Power Output Board Assembly	5-19
5-8	Power Supply Section	5-20
5-9	Rear View	5-21

LIST OF TABLES

Table		Page
1-1	GFD-13 and Subassemblies	1-2
1-2	Standard Tuning Unit and Low Pass Filter Frequencies	1-11
1-3	Maximum Intelligence Capacity of the Standard IRIG Channels for various GFD-13 Demodulator Noise Bandwidths	1-23
2-1	Data Demodulator Housing Connections	2-6
2-2	Reference Demodulator Housing Connections	2-7
2-3	Signal Interconnection	2-8
3-1	Standard Tuning Unit and Low Pass Filter Frequencies	3-7
4-1	Typical Channel Characteristics	4-35
5-1	Test Equipment	5-1
5-2	Test Points (referenced to Figure 5-2 and Schematic drawing EW-013819)	5-6 & 5-7
5-3	Subassembly Numbering System	5-15
5-4	Recommended Spare Parts List, Model GFD-13	5-22
5-5	Replacement Parts List	5-23 thru 5-47



Figure 1-1. FM Subcarrier Demodulator, Model GFD-13

SECTION I

DESCRIPTION AND LEADING PARTICULARS

1-1. PURPOSE AND SCOPE.

1-2. This publication contains a general description with installation, operation and maintenance instructions for the Model GFD-13 FM Subcarrier Demodulator, designed and manufactured by Data Control Systems, Inc., East Liberty Street, Danbury, Connecticut.

1-3. A general discussion of electrical and physical characteristics is covered in Section I. Installation (II) and Operation (III) should be of practical value to personnel not familiar with the equipment. Section IV covers theory and detailed function description referencing schematics and other diagrams. Maintenance (V) includes component location, troubleshooting and tabular data required for requisition of parts. Section VI lists and contains drawings.

1-4. Material requiring clarification is illustrated with line drawings, halftones or listed in tabular form.

1-5. FM SUBCARRIER DEMODULATOR, MODEL GFD-13.

1-6. The Model GFD-13 is a phase-locked loop FM demodulator compatible with all ground based systems where selection and demodulation of single wide band carriers or multiplexed signals is performed.

1-7. This unit represents a substantial advancement in electrical performance, quality, reliability and flexibility as compared to contemporary demodulators. In its design, quality has not been compromised for economy. The GFD-13 contains its own integral power supply, complete input and output metering provisions, and utilizes only silicon transistors. Design emphasis has been placed upon achieving simple and reliable circuitry in conjunction with rugged and precise mechanical construction. It has been designed to comply fully with MIL-I-26600 and similar EMI standards. The GFD-13 is provided with a full range of accessory equipments to adapt it to virtually any application. These include several types of Tuning Units and Low Pass Filters, Modular Housing and Tape Speed Compensation Units. (See Table 1-1.)

Table 1-1. GFD-13 and Subassemblies

Function	Model Designation	Description
Demodulator	GFD-13, FM Subcarrier Demodulator	Main chassis, power supply, and circuit boards. Accepts plug-in tuning units and low pass filters
Housing	GMH-13, Modular Housing	Mounts three demodulators side by side in 3-1/2" panel space. BNC input and output connectors
Tuning Units	GFD-13/TU, Standard Tuning Unit	For use with IRIG or CBW channels. $\pm 4\%$ to $\pm 25\%$ deviation. High adjacent channel rejection
	GFD-13/TU (D)	Similar to above standard but with manual output polarity switching
	GFD-13/TU (E)	Similar to above standard but with remote and manual output
	GFD-13/TUW, Wide Deviation Tuning Unit	For FM magnetic recording or special channels with deviation up to $\pm 40\%$. Not normally used for multiplexed channels
	GFD-13/TUA, Adjustable Loop Filter Tuning Unit	Providing high modulation index loop filter for threshold improvement. 6 loop filter positions
	GFD-13/TUR, High Rejection Tuning Unit	Permits optimum demodulation at 70 kHz with $\pm 30\%$ deviation and provides very high crosstalk rejection
Low Pass Filters	GFD-13/TU/L, Standard Low Pass Filter	For use with any type channel. Specify linear phase or constant amplitude response characteristic
	GFD-13/TU/LSM, Switchable Low Pass Filter	For use with any type channel. Constant amplitude or linear phase characteristic selected by front panel switch
Tape Speed Compensation	GFD-13/RTU, Reference Tuning Unit	Replaces normal tuning unit and converts data demodulator to reference demodulator. No external delay line required
	GDL-13, Delay Line	Required only for special compensation systems where reference frequency is lower than highest data subcarrier frequency. Used in conjunction with GFD-13/ARTU
	GFD-13/ARTU, Reference Tuning Unit Adaptor	Reference tuning unit with adaptor for use with GDL-13 delay line

1-8. **PHYSICAL CHARACTERISTICS.** The GFD-13 is a sturdy and compact unit approximately 3-1/2 inches high. Three units mount side by side in the Model GMH-13 Housing. (See Figure 1-2.) Mating connectors on the Housing and Demodulator facilitate easy removal and replacement of all units.

1-9. All structural portions of the GFD-13 are comprised of heavy-wall aluminum extrusions which result in great strength and ruggedness in addition to a precise mechanical fit of all parts including plug-in units. All circuit boards are guided and supported by grooves which are an integral part of the main chassis extrusion.

1-10. The main chassis is a box section extrusion divided into a front and rear portion by a centrally-located plug-board. The Power Supply, Tuning Unit, Low Pass Filter, and all circuit boards are interconnected through the plug-board. This arrangement permits simplified removal of all electrical portions of the demodulator unit for maintenance or replacement purposes. (See Figure 1-2A.)

1-11. The front portion of the main chassis is divided into an upper and lower section by the tuning unit which plugs into the center of the front panel. An upper and a lower circuit board are mounted in a plane parallel to the tuning unit so that all components are clearly visible and accessible.

1-12. The tuning unit is engaged, extracted, or held in place by a very simple and easily-operated locking handle. With the tuning unit in place, the handle is flush with the front surface of the tuning unit. By pulling gently forward on the handle, the tuning unit is extracted. When the tuning unit is replaced, the handle automatically assumes a position wherein it can be pushed in flush with the tuning unit. This engages the tuning unit and locks it securely in place. The handle also locks the demodulator into its housing. When the handle is pulled forward to extract the tuning unit, the demodulator can also be pulled out of its housing.

1-13. The low pass filter plugs into the front of the tuning unit so that it can be replaced without removing the tuning unit. The low pass filter is removed by pushing a small button on its front panel. When the tuning unit is removed, the low pass filter remains locked into it, but can be removed by activating the pushbutton.

1-14. The rear portion of the main chassis contains the power supply and the output amplifier board. These are plug-in assemblies which may be removed separately or as a unit. The power supply assembly provides all mating connection between the demodulator and the housing.

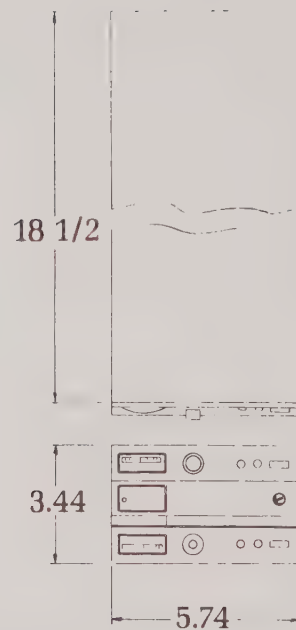
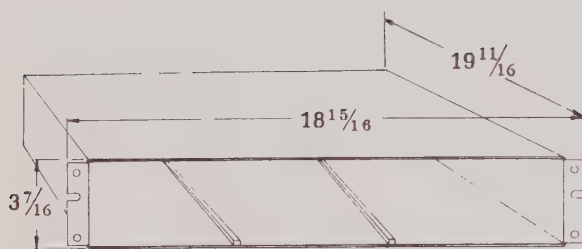


Figure 1-2. Outline Drawing of GFD-13 FM Subcarrier Demodulator and GMH-13 Housing

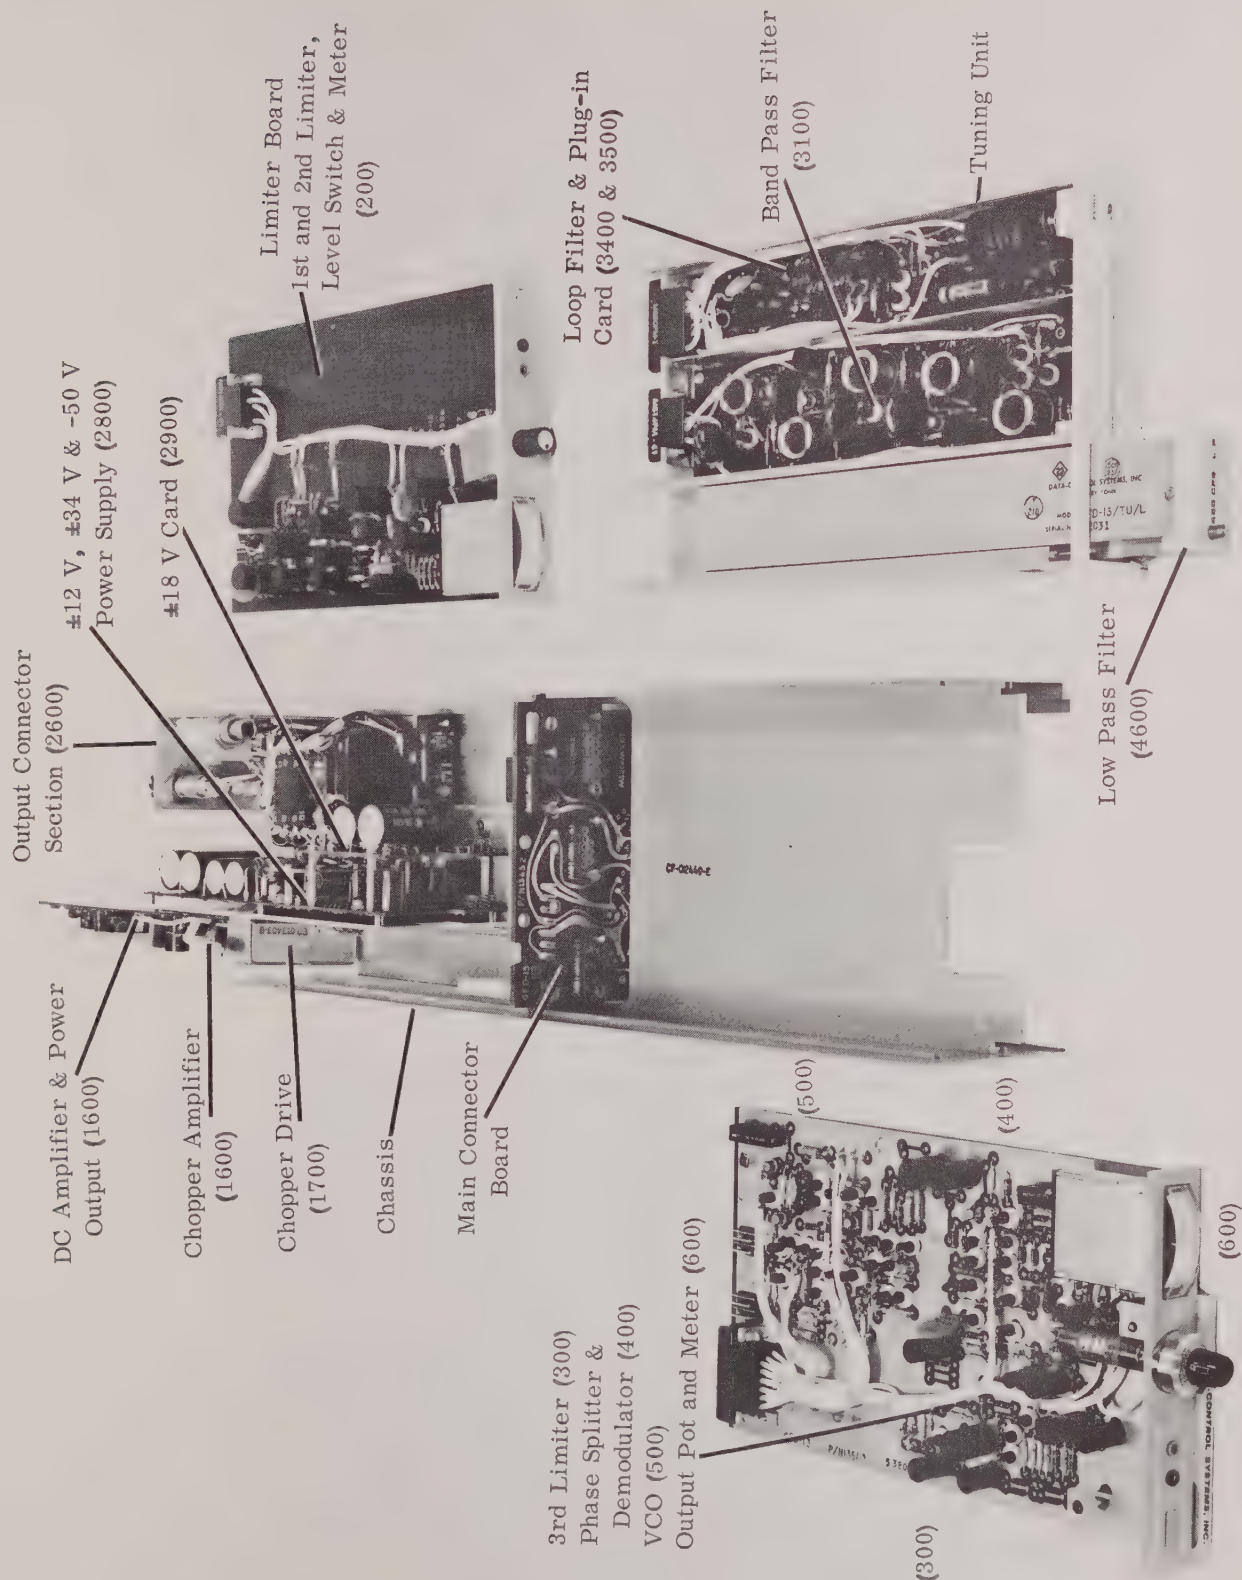


Figure 1-2A. Identification of Subassemblies

1-15. The front panel of the GFD-13 is divided into an upper and lower portion. All indicators, controls and test points associated with the input to the demodulator are on the upper panel and those associated with the output are on the lower panel.

1-16. ELECTRICAL CHARACTERISTICS. The GFD-13 employs the phase-locked loop demodulation technique in order to enhance its flexibility and range of application. The phase-locked loop demodulation technique is at least equivalent in all respects of performance to the pulse area integration technique. It provides, however, the additional capability of narrowing the demodulator noise bandwidth to increase the threshold sensitivity when handling noisy signals.

1-17. Drift Characteristics. The GFD-13 has established a new standard of performance for output stability. It utilizes no ovens, temperature controls, mechanical choppers, crystal oscillators, or other complex circuits to achieve this stability. Its circuits are designed to be inherently stable and remain so for thousands of hours of operation.

1-18. It is somewhat impractical to consider conventional drift characteristics as related to the GFD-13 because all measurable output variation is due to changes in temperature or line voltage. Line voltage and temperature coefficients have been kept extremely small and large variations in either produce only slight output zero and sensitivity changes.


1-19. Because no oven or temperature control is used, the GFD-13 stabilizes in only a few minutes. It is not necessary to wait 30 minutes or even 15 minutes before using the demodulator.

1-20. Sensitivity. The GFD-13 achieves a sensitivity improvement on the order of 6 db to 20 db over other FM demodulators. The unit is fully quieted with an input signal of only 2 millivolts rms, and signals up to 2 volts rms are in the normal operating range. This increased sensitivity provides improved compatibility with modern, solid state magnetic tape recorders and receivers.

1-21. While tube-type electronics of the past produced multiplex levels of 10 volts rms or more, modern solid state electronics operate with typical signal levels of 1 volt rms or even 1 volt peak-to-peak. In a typical frequency multiplex, the peak-to-peak/rms ratio is very large (often 50 : 1) and it is not unusual to find individual subcarrier levels of 20 millivolts or even less where pre-emphasis has been employed. A sensitivity of 10 millivolts or even 5 millivolts provides an insufficient fade margin to contend with tape

dropouts and similar effects. No known solid state recorder or receiver manufactured today is capable of producing a multiplexed signal with individual subcarrier levels sufficient to exceed the input capabilities of the GFD-13.

1-22. Low Modulation Index Signal Handling. The GFD-13 has been optimized for operation with constant bandwidth subcarriers or special wideband subcarriers in addition to standard IRIG subcarriers. While IRIG subcarriers conventionally operate at modulation indices of 5 or more, subcarriers with modulation indices as low as one are frequently encountered with constant bandwidth and special wideband channels. Under these circumstances, conventional demodulators experience a substantial increase in distortion and interchannel crosstalk. Through a new band pass filter design technique, the GFD-13, operated at a modulation index of 2, provides distortion and crosstalk rejection characteristics comparable to other demodulators operated at a modulation index of 5. (See Figure 1-3.) The band pass filter is a multi-pole active unit with closely controlled amplitude and phase characteristics. These characteristics also enhance tape speed compensation and interchannel time correlation in low modulation index, constant bandwidth systems.

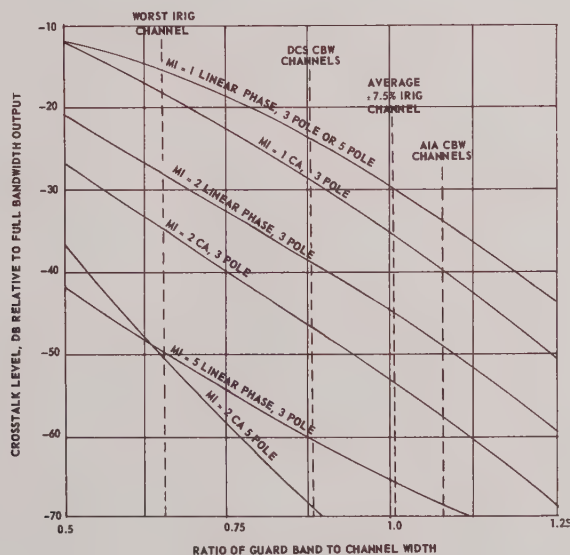

Worst case crosstalk between FM channels of equivalent amplitude with carriers located at adjacent band edges, for various modulation indices and low pass filters.

Figure 1-3. Adjacent Channel Crosstalk Characteristics


1-23. Output Amplifier. The GFD-13 output amplifier provides an exceptionally wide bandwidth in conjunction with low noise and true current limiting. It can utilize DCS low pass filters with cutoff frequencies as high as 100 kHz without a reduction in the specified output current and voltage. Output noise from the GFD-13 is exceptionally low and is specified in terms of peak-to-peak noise as well as rms noise. Peak-to-peak noise is more meaningful to the system engineer particularly when output signals are digitized for computer processing.

1-24. Most demodulator output amplifiers employ voltage limiting. This has been found to be inadequate for galvanometer protection. The GFD-13 employs true current limiting in addition to voltage limiting. Current is limited to 150% of maximum bandedge output current regardless of the output level setting.


1-25. Metering Provisions. The GFD-13 is provided with complete and accurate input/output metering. The input meter is provided with switchable full scale ranges of 20 millivolts, 200 millivolts, and 2 volts rms. A fourth switch position converts the input meter to a phase error indicator connected to the phase-locked loop. This indication is a necessary adjunct to the use of extremely narrow loop filters to achieve maximum signal/noise threshold improvement. The output meter indicates percent of bandedge deviation of the subcarrier.

1-26. Tape Speed Compensation. A great deal of simplicity and economy has been achieved in the tape speed compensation system by eliminating the need for a tape speed compensation unit and its plug-in delay line. (See Figure 1-4.) The only additional component required to obtain tape speed compensation for a system is a reference tuning unit, Model GFD-13/RTU. For changing from the use of one reference frequency to another, it is necessary to change only the reference tuning unit. Any GFD-13 FM demodulator functions as a reference demodulator when the reference tuning unit is inserted. The system is completely automatic in that it requires no phase or amplitude adjustments to achieve specified performance. A switch on the reference tuning unit permits disabling of the tape speed compensation system when desired.

1-27. Tuning Units. (See Figure 1-5.) Three types of standard tuning units are supplied to optimize the demodulator for a wide range of applications. Standard frequencies are listed in Table 1-2. The standard tuning unit, Model GFD-13/TU, is used for conventional IRIG and constant bandwidth applications with subcarrier deviation bandwidths from $\pm 4\%$

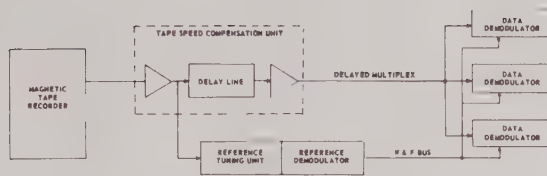

Conventional Tape Speed Compensation System

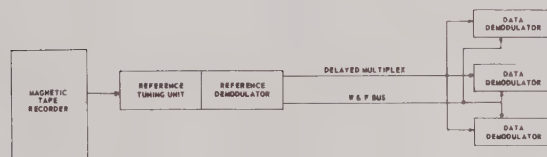

Simplified Tape Speed Compensation System



The low pass filter may be removed by pushbutton without removing the Tuning Unit from the Demodulator.

Figure 1-5. Tuning Unit, Model GFD-13/TU

Table 1-2. Standard Tuning Unit and Low Pass Filter Frequencies

STANDARD TUNING UNIT FREQUENCIES

	Channel			Channel			Channel		
	Channel	Center Freq.	Deviation	Channel	Center Freq.	Deviation (Percent)	Channel	Center Freq.	Deviation (Percent)
IRIG FM/FM STANDARDS GFD-13/TU GFD-13/TUA	1	400 Hz	$\pm 7\frac{1}{2}\%$	11	7350Hz	$\pm 7\frac{1}{2}\%$	21	165,000 Hz	$\pm 7\frac{1}{2}\%$
	2	560	$\pm 7\frac{1}{2}\%$	12	10,500	$\pm 7\frac{1}{2}\%$	A	22,000	$\pm 15\%$
	3	730	$\pm 7\frac{1}{2}\%$	13	14,500	$\pm 7\frac{1}{2}\%$	B	30,000	$\pm 15\%$
	4	960	$\pm 7\frac{1}{2}\%$	14	22,000	$\pm 7\frac{1}{2}\%$	C	40,000	$\pm 15\%$
	5	1300	$\pm 7\frac{1}{2}\%$	15	30,000	$\pm 7\frac{1}{2}\%$	D	52,500	$\pm 15\%$
	6	1700	$\pm 7\frac{1}{2}\%$	16	40,000	$\pm 7\frac{1}{2}\%$	E	70,000	$\pm 15\%$
	7	2300	$\pm 7\frac{1}{2}\%$	17	52,500	$\pm 7\frac{1}{2}\%$	F	93,000	$\pm 15\%$
	8	3000	$\pm 7\frac{1}{2}\%$	18	70,000	$\pm 7\frac{1}{2}\%$	G	124,000	$\pm 15\%$
	9	3900	$\pm 7\frac{1}{2}\%$	19	93,000	$\pm 7\frac{1}{2}\%$	H	165,000	$\pm 15\%$
	10	5400	$\pm 7\frac{1}{2}\%$	20	124,000	$\pm 7\frac{1}{2}\%$			
DCS CONSTANT BANDWIDTH STANDARDS GFD-13/TU	MARK 1000	6.25 kHz	± 1 kHz	MARK 2000	12.5 kHz	± 2 kHz	MARK 4000	25 kHz	± 4 kHz
		10.0	± 1 kHz		20.0	± 2 kHz		40	± 4 kHz
		13.75	± 1 kHz		27.5	± 2 kHz		55	± 4 kHz
		17.5	± 1 kHz		35.0	± 2 kHz		70	± 4 kHz
		21.25	± 1 kHz		42.5	± 2 kHz		85	± 4 kHz
		25.0	± 1 kHz		50.0	± 2 kHz		100	± 4 kHz
		28.75	± 1 kHz		57.5	± 2 kHz		115	± 4 kHz
		32.5	± 1 kHz		65.0	± 2 kHz		130	± 4 kHz
		36.25	± 1 kHz		72.5	± 2 kHz		145	± 4 kHz
		40.0	± 1 kHz		80.0	± 2 kHz		160	± 4 kHz
DCS CONSTANT BANDWIDTH STANDARDS GFD-13/TU	MARK 8000	50 kHz	± 8 kHz	MARK 16,000	100 kHz	± 16 kHz	MARK 32,000	200 kHz	± 32 kHz
		80	± 8 kHz		160	± 16 kHz		320	± 32 kHz
		110	± 8 kHz		220	± 16 kHz		440	± 32 kHz
		140	± 8 kHz		280	± 16 kHz		560	± 32 kHz
		170	± 8 kHz		340	± 16 kHz		680	± 32 kHz
		200	± 8 kHz		400	± 16 kHz		800	± 32 kHz
		230	± 8 kHz		460	± 16 kHz		920	± 32 kHz
		260	± 8 kHz		520	± 16 kHz		1040	± 32 kHz
		290	± 8 kHz		580	± 16 kHz		1160	± 32 kHz
		320	± 8 kHz		640	± 16 kHz		1280	± 32 kHz
AIA CONSTANT BANDWIDTH STANDARDS GFD-13/TU	1 C	12.5 kHz	± 2 kHz	2 CW	20.8 kHz	± 4 kHz			
	2 C	20.8	± 2 kHz	4 CW	37.5	± 4 kHz			
	3 C	29.2	± 2 kHz	6 CW	54.2	± 4 kHz			
	4 C	37.5	± 2 kHz	8 CW	70.8	± 4 kHz			
	5 C	45.8	± 2 kHz	10 CW	87.5	± 4 kHz			
	6 C	54.2	± 2 kHz	12 CW	104.2	± 4 kHz			
	7 C	62.5	± 2 kHz	14 CW	120.8	± 4 kHz			
	8 C	70.8	± 2 kHz	16 CW	137.5	± 4 kHz			
	9 C	79.2	± 2 kHz	18 CW	154.2	± 4 kHz			
	10 C	87.5	± 2 kHz	20 CW	170.8	± 4 kHz			
	11 C	95.8	± 2 kHz	22 CW	187.5	± 4 kHz			
MAGNETIC RECORDING STANDARDS GFD-13/TUW	27				54 kHz	$\pm 40\%$			
					108	$\pm 40\%$			
					216	$\pm 40\%$			
REFERENCE FREQUENCIES GFD-13/RTU	(800 kHz, 400 kHz), 200 kHz, 100 kHz, 50 kHz, 25 kHz and 17 kHz								

STANDARD LOW PASS FILTER FREQUENCIES

	Band			Band			Band		
	Band	MI-5 Freq. (Hz)	MI-1 Freq. (Hz)	Band	MI-5 Freq. (Hz)	MI-1 Freq. (Hz)	Band	MI-5 Freq. (Hz)	MI-1 Freq. (Hz)
IRIG FM/FM STANDARDS GFD-13/TU/L GFD-13/TU/LSM	1	6	30	11	110	550	21	2500	12,500
	2	8.4	42	12	160	800	A	660	3300
	3	11	55	13	220	1100	B	900	4500
	4	14	70	14	330	1650	C	1200	6000
	5	20	100	15	450	2250	D	1600	8000
	6	25	150	16	600	3000	E	2100	10,500
	7	35	175	17	790	3950	F	2800	14,000
	8	45	225	18	1050	5250	G	3700	18,500
	9	59	295	19	1400	7000	H	5000	25,000
	10	81	405	20	1900	9500			
CONSTANT BANDWIDTH AND OTHERS GFD-13/TU/L GFD-13/TU/LSM				250 Hz	2000	5000	16,000	40,000	
				500	2500	8000	20,000	50,000	
				1000	4000	10,000	25,000		

to $\pm 25\%$. The loop filter has a cutoff frequency corresponding to a modulation index of 1 for the channel, so that a full deviation step function will not cause loss of lock. For channels with deviation bandwidths from $\pm 25\%$ to $\pm 40\%$, the wide deviation tuning unit, Model GFD-13/TUW, is utilized. It, too, is provided with a modulation index of 1 loop filter. Only a rudimentary band pass filter is included unless otherwise specified. The GFD-13/TUA is an adjustable loop filter tuning unit of the type pioneered by DCS. It provides six switch selectable loop filters having noise bandwidths of 100%, 75%, 50%, 30%, 15%, and 7% of the channel bandwidth. The unit also includes a loop "phase error" control which permits optimizing S/N threshold and noise immunity regardless of the subcarrier location within the band. The control is used in conjunction with the input meter when it is switched to its "phase error" position. This control is necessary for all true phase-locked loop demodulators whose loops can be narrowed sufficiently to achieve significant threshold improvement. Model GFD-13/TUR is a special tuning unit for optimum demodulation at the 70 kHz subcarrier frequency with $\pm 30\%$ deviation. It is typically multiplexed with other channels including adjacent channel 15 and is modulated by a 3600 pps PAM signal. This unit has very high crosstalk rejection with outstanding transient characteristics of the output waveform.

1-28. Low Pass Filters. The standard low pass filter, Model GFD-13/TU/L, is available with either constant amplitude (Butterworth) or linear phase (constant delay) response characteristics. Both types of filters are available in three- or five-pole configurations. The GFD-13/TU/LSM is a switchable mode low pass filter which permits the selection of either the linear phase or constant amplitude response characteristic. This unit is available only in the three-pole configuration.

1-29. HOUSING. The GMH-13 housing mounts three FM demodulators side by side in 3-1/2 inches of panel space. It provides all electrical connections to the GFD-13 permitting removal from the housing without disturbing system wiring. All demodulator signal input and output connections are BNC and power is applied to the housing via a single connector. The housing also provides RFI shielding and line filtering.

1-30. PERFORMANCE CHARACTERISTICS. Due to the great flexibility of the GFD-13 and the variety of plug-in units available, it is not feasible to describe its performance capabilities in all possible applications and configurations. DCS, therefore, specifies a maximum operating range and a normal operating range for the GFD-13. The normal operating range

relates most directly to conventional IRIG and Constant Bandwidth system usage. Where performance characteristics vary with modulation index, specifications are stated for various modulation indices. When considering applications which exceed the normal operating range, DCS should be consulted regarding individual performance parameters.

Maximum Operating Range

Input Subcarrier Frequencies:	300 Hz to 1 mHz
Subcarrier Dev.:	$\pm 2\%$ to $\pm 40\%$
Output Frequency Response:	DC to 100 kHz

*Normal Operating Range

Input Subcarrier Frequencies:	300 Hz to 300 kHz
Subcarrier Dev.:	$\pm 4\%$ to $\pm 16\%$
Input Impedance:	500,000 ohms minimum shunted by 50 pf maximum
Input Subcarrier Level:	2 millivolts to 2 volts rms
Input Selectivity:	With a standard tuning unit, a subcarrier located at three times the normal channel deviation will be attenuated at least 28 db as measured at the band pass filter output
AM Rejection:	Less than 0.3% of full bandwidth peak transient for a 20 db change in subcarrier level at center frequency, with a channel modulation index of 5 or greater
Static Non-Linearity:	Less than .05% of full bandwidth independent
Harmonic Distortion:	Less than 1% of full bandwidth for all frequencies, with a channel modulation index of 2. Less than 0.3% of full bandwidth for all frequencies, with a channel modulation index of 5
Output Zero Stability:	Less than 0.0075%/°C of center frequency after a 10 minute warmup.
Output Sensitivity Stability:	Less than 0.0025%/°C of center frequency after a 10 minute warmup.

*Normal operating specifications apply when using a standard 3-pole Butterworth Filter in combination with a low pass filter corresponding to an M.I. of 5 unless otherwise stated.

Line Voltage Sensitivity:	Less than $\pm 0.1\%$ of full bandwidth change in zero or sensitivity for a 10 volt change in line voltage.
Output Frequency Response:	DC to 100 kHz
Output Voltage:	Continuously adjustable from ± 1 volt to ± 10 volts for full bandwidth deviation. NOTE: A nine-turn Vernier output control is available to order.
Output Polarity:	An increasing frequency produces a positive-going voltage. (A reversing polarity option is available.)
Output Current:	± 100 ma for full bandwidth deviation.
Output Impedance:	Less than 0.1 ohm.
Output Noise:	Less than 5 mv rms for an input of 2 mv rms and a channel modulation index of 5 or greater. Less than 3 mv rms and 20 mv peak-to-peak for inputs between 10 mv and 2 V rms and a channel modulation index of 5 or greater.
Output Limiter:	Current is limited to ± 150 ma for any setting of output level control. An external load to dissipate a portion of the output current can be used to provide precise galvanometer protection.
Output Capacitive Loading:	0.01 ufd at any setting of output level control.
Tape Speed Compensation:	30 db minimum attenuation of flutter frequencies up to channel modulation indices of 5 or greater. Attenuation is achieved with subcarriers located anywhere within their bands.
Power Required:	105 to 125 volts rms, 55 to 65 Hz, 15 watts maximum per unit.
Operating Temperature Range:	0°C to 60°C with circulating air.

Front Panel Controls and Indicators

Input meter, 4 ranges: 20 MV, 200 MV, and 2 volts rms full scale. Fourth range indicates loop phase error.

Input meter switch: 4 position.

Output meter: $\pm 5\%$ of bandedge deviation from band center.

Output level control: 9 turn.

Power switch: Lighted pushbutton

Lock Loss Indicator light

Input Test Point (output of band pass filter)

Output Test Point

Ground Test Point

Dimensions

3.44" high x 5.8" wide x 18.5" long.

Three units mount side by side in Model GMH-13 Housing which occupies 3-1/2 inches of panel space in standard 19 inch wide relay rack.

Weight

10 pounds maximum.

Front Panel Color

Blue per FED-STD-595.

Chassis Finish

Yellow Chromate.

Ordering Information

Specify FM Subcarrier Demodulator, Model GFD-13.

Model GFD-13/TU Standard Tuning Unit

Channel Frequencies: 300 Hz to 300 kHz for normal operation. Channel frequencies as high as 1 mHz can be supplied for special applications.

Channel Dev.: $\pm 4\%$ to $\pm 16\%$ for normal operation. Channel deviations from $\pm 2\%$ to $\pm 25\%$ can be supplied for special applications.

Attenuation: Less than 3 db at bandedges. More than 28 db at three times the normal channel deviation.

Loop Filter Response: Loop filter cutoff frequency corresponds to a modulation index of 1 for the channel to accommodate a full bandwidth step function without loss of lock.


Tape Speed Compensation:	All necessary networks for Tape Speed Compensation are included.
Controls:	Zero Adjustment.
Weight:	2.5 pounds maximum.
Front Panel Color:	White per FED-STD-595.
Chassis Finish:	Yellow Chromate.
Ordering Information:	Specify Standard Tuning Unit, Model GFD-13/TU (frequency and deviation). Example: GFD-13/TU (70 kHz $\pm$ 7.5%)

Model GFD-13/TUW Wide Deviation Tuning Unit

Channel Frequencies:	300 Hz to 300 kHz for normal operation.
Channel Dev.:	$\pm$ 16% to $\pm$ 40%.
Attenuation:	Less than 3 db at bandedges. A rudimentary filter provides only slight out-of-band attenuation.
Loop Filter Response:	Loop filter cutoff frequency corresponds to a modulation index of 1 for the channel to accommodate a full bandwidth step function without loss of lock.
Tape Speed Compensation:	Necessary networks for Tape Speed Compensation are included in all channels with 30% deviation or less. Above 30% deviations, networks are included in frequencies from 25 kHz to 300 kHz.
Controls:	Zero Adjustment.
Weight:	2.5 pounds maximum.
Front Panel Color:	White per FED-STD-595.
Chassis Finish:	Yellow Chromate.
Ordering Information:	Specify Wide Deviation Tuning Unit, Model GFD-13/TUW (frequency and deviation). Example: GFD-13/TUW (200 kHz $\pm$ 40 kHz)

Model GFD-13/TUA Adjustable Loop Filter Tuning Unit (see Figure 1-6)

Channel Frequencies:	1000 Hz to 300 kHz for normal operation. Channel frequencies from 400 Hz to 1 mHz can be supplied for special applications.
----------------------	---

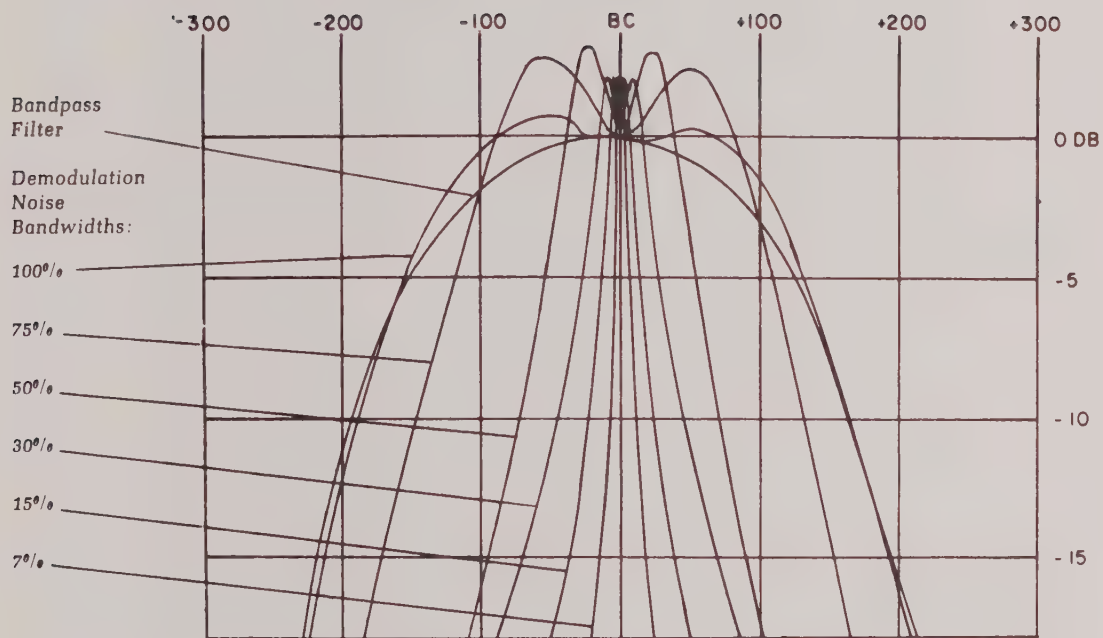

Combined response of bandpass and loop filters in GFD-13 for various demodulation noise bandwidths (switch-selectable in GFD-13/TUA Adjustable Loop Filter Tuning Unit).

Figure 1-6. Combined Response of Band Pass and Loop Filters in GFD-13 for various demodulation noise bandwidths (switch-selectable in GFD-13/TUA Adjustable Loop Filter Tuning Unit)

Table 1-3. Maximum Intelligence Capacity of the Standard
IRIG channels for various GFD-13 Demodulator
Noise Bandwidths

Demodulation Noise Bandwidths		100%	75%	50%	30%	15%	7%
Maximum Intelligence Frequency (Hz) for Full Bandwidth Deviation	IRIG BAND 1	30	7.5	1.20	.300	.075	.012
	2	42	10.5	1.68	.420	.105	.017
	3	55	13.75	2.20	.550	.1375	.022
	4	70	17.5	2.80	.700	.175	.028
	5	100	25.0	4.00	1.00	.250	.040
	6	125	31.25	5.00	1.25	.3125	.050
	7	175	43.75	7.00	1.75	.4375	.070
	8	225	56.25	9.00	2.25	.5625	.090
	9	295	73.75	11.8	2.95	.7375	.118
	10	405	101.25	16.2	4.05	1.012	.162
	11	550	137.5	22.0	5.50	1.375	.220
	12	800	200.0	32.0	8.00	2.00	.320
	13	1100	275.0	44.0	11.00	2.75	.440
	14	1650	412.0	66.0	16.50	4.12	.660
	15	2250	562.5	90.0	22.50	5.62	.900
	16	3000	750.0	120.0	30.00	7.50	1.20
	17	3950	987.5	158.0	39.50	9.87	1.58
	18	5250	1312.5	210.0	52.50	13.12	2.10
	A	3300	825.0	132.0	33.00	8.25	1.32
	B	4500	1125.0	180.0	45.00	11.25	1.80
	C	6000	1500.0	240.0	60.00	15.0	2.40
	D	8000	2000.0	320.0	80.00	20.0	3.20
	E	10500	2625.0	420.0	105.00	26.25	4.20

Channel Dev.:	$\pm 4\%$ to $\pm 16\%$ for normal operation. Deviations from $\pm 2\%$ to $\pm 25\%$ can be supplied for special applications.
Attenuation:	Less than 3 db at bandedges. More than 28 db at three times the normal channel deviation.
Loop Filters:	Six loop filters providing demodulator noise bandwidths of 100%, 75%, 50%, 30%, 15%, and 7% of channel bandwidth.
Loop Filter Switching:	Non-interruptive. Lock is maintained during switch operation.
S/N Threshold Improvement:	10 db for 7% noise bandwidth loop.
Tape Speed Compensation:	All necessary networks for Tape Speed Compensation are included.
Controls:	Loop Filter Switch, six positions, Phase Adjustment, Zero Adjustment.
Weight:	2.5 pounds maximum.
Front Panel Color:	White per FED-STD-595.
Chassis Finish:	Yellow Chromate.
Ordering Information:	Specify Adjustable Loop Filter Tuning Unit, Model GFD-13/TUA (frequency and deviation). Example: GFD-13/TUA (40 kHz $\pm 15\%$)

Model GFD-13/RTU Reference Tuning Unit

Reference Frequencies:	Reference frequencies up to 300 kHz can be accommodated for normal operation. Standard frequencies are 17 kHz, 25 kHz, 50 kHz, 100 kHz and 200 kHz.
Frequency Dev.:	Specified compensation is achieved for tape speed variations of $\pm 3\%$ maximum.
Controls:	Zero Adjustment, Tape Speed Compensation ON-OFF Switch.
Weight:	4 pounds maximum.

Front Panel Color: White per FED-STD-595.
Chassis Finish: Yellow Chromate.
Ordering Information: Specify Reference Tuning Unit, Model GFD-13/RTU
(reference frequency).
Sample: GFD-13/RTU (100 kHz)

Model GFD-13/TU/L Standard Low Pass Filter (see Figure 1-7)

The following specifications apply to the standard three-pole filter configuration utilized in normal applications.



Cutoff Frequencies: 6 Hz to 100 kHz.
Response Characteristics: Constant Amplitude and Linear Phase are standard.

Constant Amplitude Characteristics

Amplitude Response: Cutoff defined as -3 db $\pm$.5 db point. Down 18 db at two times cutoff frequency.
Slope: 18 db per octave.
Overshoot: 15% maximum.

Linear Phase Characteristics

Amplitude Response: Cutoff defined as -3 db $\pm$.5 db point. Down at least 11 db at two times cutoff frequency.
Slope: Asymptotic to 18 db per octave.
Overshoot: 1.5% maximum.
Controls: None
Weight: One pound maximum.
Front Panel Color: White per FED-STD-595.
Chassis Finish: Yellow Chromate.
Ordering Information: Specify Standard Low Pass Filter, Model GFD-13/TU/L (frequency and characteristic). LP and CA are used to indicate Linear Phase and Constant Amplitude characteristics respectively.
Example: GFD-13/TU/L (10.5 kHz CA)

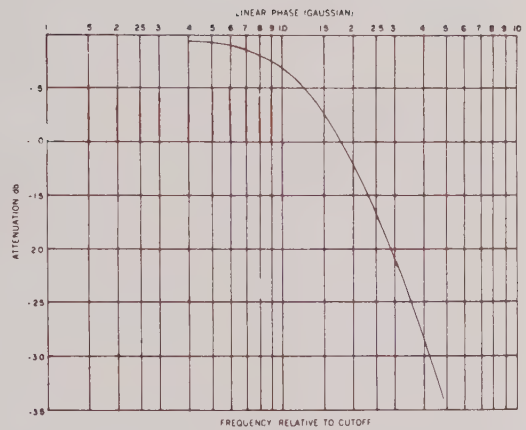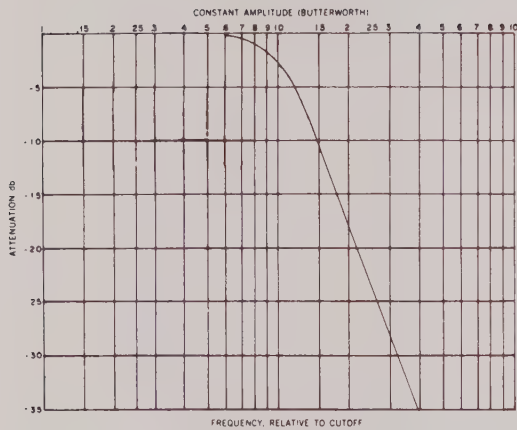

Characteristics of Constant Amplitude and Linear Phase GFD-13/TU/L Standard Low Pass Filters.

Figure 1-7. Characteristics of Constant Amplitude and Linear Phase GFD-13/TU/L Standard Low Pass Filters

Model GFD-13/TU/LSM Switchable Low Pass Filter (see Figure 1-8)

Cutoff Frequencies: 6 Hz to 100 kHz.

Response Characteristics: Constant Amplitude and Linear Phase responses are available by front panel selector switch.

Constant Amplitude Characteristics

Amplitude Response: Cutoff is defined as 0.5 db $\pm$ 0.5 db point. Down 6.5 db $\pm$ 1.5 db at two times cutoff frequency.

Slope: 18 db per octave.

Overshoot: 15% maximum.

Linear Phase Characteristics

Amplitude Response: Cutoff defined as -3 db $\pm$.5 db point. Down at least 10 db at two times cutoff frequency.

Slope: Asymptotic to 18 db per octave.

Overshoot: 1.5% maximum.

Controls: Selector switch, 2 position. Constant Amplitude or Linear Phase.

Weight: One pound maximum.

Front Panel Color: White per FED-STD-595.

Chassis Finish: Yellow Chromate.

Ordering Information: Specify Switchable Low Pass Filter, Model GFD-13/TU/LSM (frequency).
Example: GFD-13/TU/LSM (660 Hz)

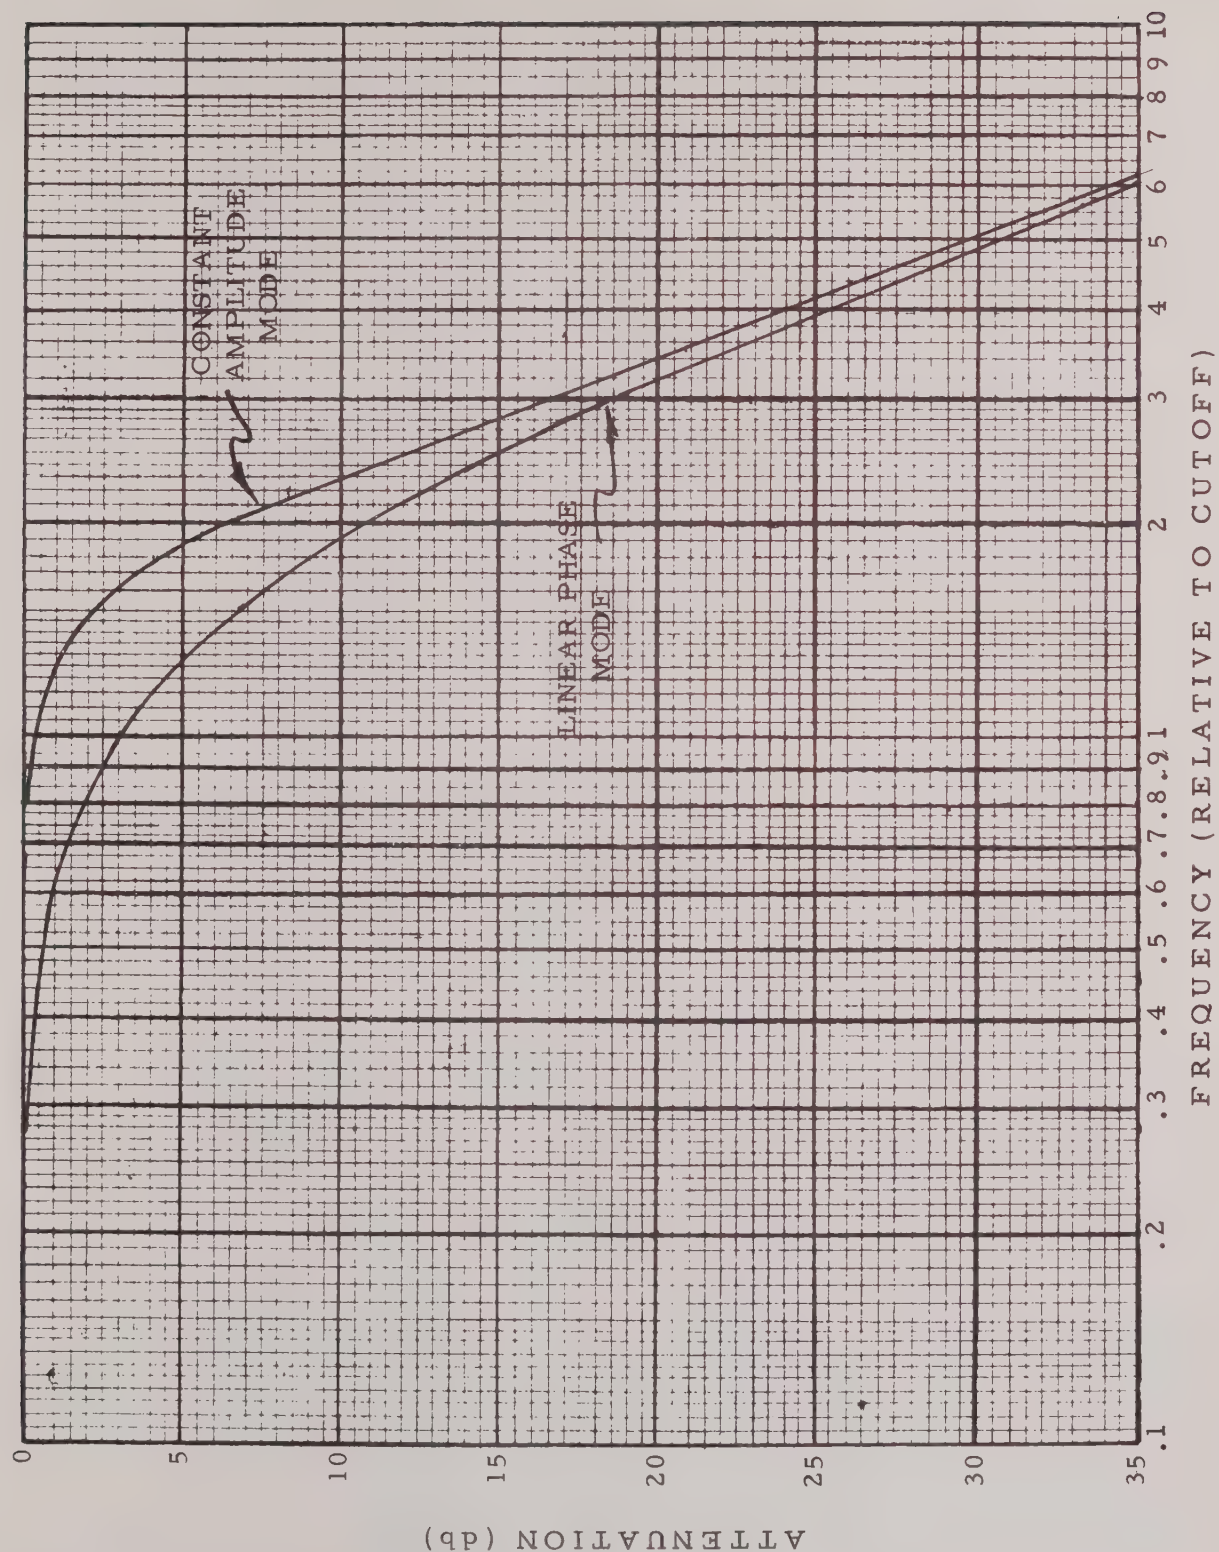


Figure 1-8. Characteristics of Constant Amplitude and Linear Phase GFD-13/TU/LSM Standard Switchable Low Pass Filters

SECTION II

INSTALLATION

2-1. GENERAL.

2-2. This section describes initial instruction and the electrical connections required for a Data or Reference Demodulator. The scope of this information covers functional installation and precludes operation of the unit.

2-3. UNPACKING AND HANDLING.

2-4. The unit is sealed in a polyethelene bag and wrapped in Kimpack insulation to absorb shock during shipment.

2-5. Remove the corrugated carton and protective covering and perform a general visual inspection. Inspect for physical signs of damage such as broken indicators and controls on the front panel and damage to the case. Retain the carton and protective covering until inspection is completed.

2-6. MOUNTING.

2-7. The FM Demodulator is housed in a GMH-13 Modular Housing Assembly which, in turn, may be placed in a standard 19" rack. The housing assembly accommodates three demodulators side by side in 3.5 inches of panel height, 19-3/4 inches deep, and provides all signal and power connections.

2-8. The Emcor enclosure is particularly suitable since vertical angle iron supports are supplied. On each side of the enclosure an aluminum angle support is mounted horizontally, parallel to the rack side panels, and fastened to the vertical angle iron supports. Two types of angle supports are available for fastening to vertical iron supports; one with an ear, one without. (See Figure 2-1.)



2-9. The housing slides in the front of the enclosure and rests upon the aluminum angles. Two tabs at the rear of the housing are fastened to the aluminum angles with screws. Two panel screws fasten the housing panel to the front of the enclosure.

NOTE



Panel mounting without angle support
is not recommended.

2-10. COOLING.

2-11. An adequate supply of cooling air must be provided to maintain temperature

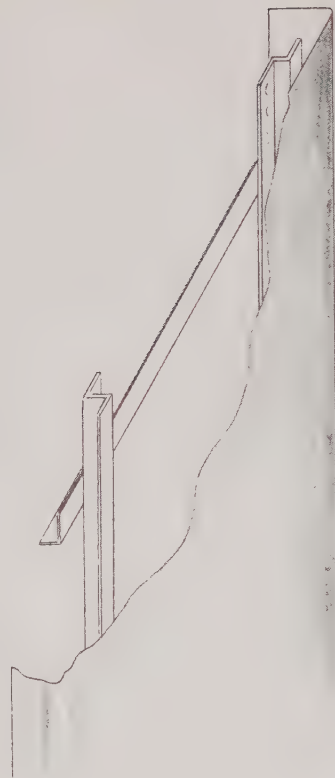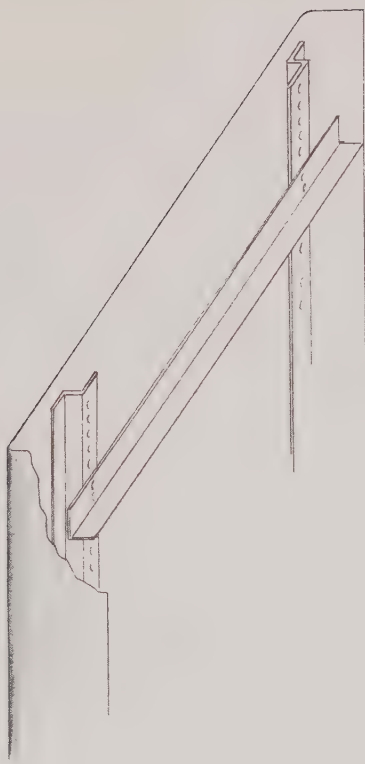

TYPE I

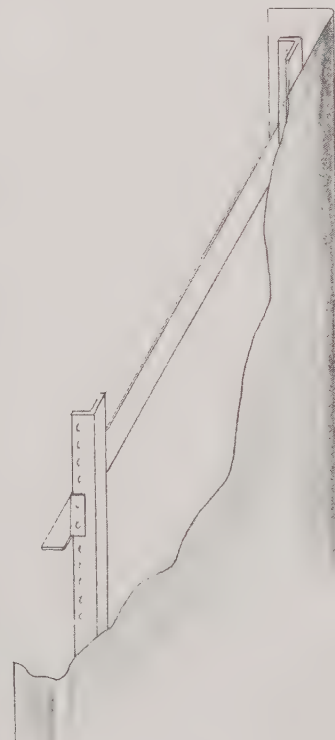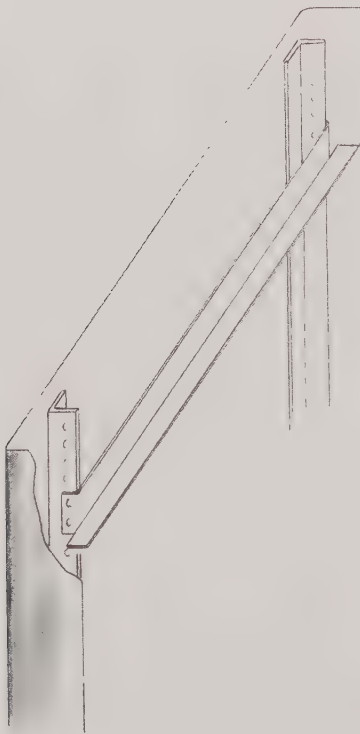

TYPE II


Figure 2-1. Mounting Angles, Type I and Type II

stability (see Figure 2-2). Do not install the GFD-13 in an enclosure containing equipment which dissipates an excessive amount of heat.

2-12. CONNECTORS. The input-output and power connector at the rear of the GFD-13 Demodulator is a Burndy MS-26PM-61 and mates with Burndy MS-26RM-61 which is located in the GMH-13 Modular Housing Assembly. The assembly of male and female contacts which make up these connectors is shown in Figure 2-3. The function of each connector terminal with connections required for normal operation as a data demodulator or a reference demodulator is listed in Tables 2-1 and 2-2.

2-13. A data demodulator may be changed to a reference demodulator by changing its tuning unit. No internal wiring need be changed since the connector pin functions are compensated for by rewiring within the tuning unit. Either a data or a reference demodulator may be inserted in any position of the GMH-13 Modular Housing, however, it must be remembered that the functions of the rear BNC connectors change as listed in Table 2-3. Figure 2-3 illustrates the location of BNC connectors at the rear of the GMH-13 Housing Assembly.

2-14. If the VCO output is required from the reference demodulator for translation or other applications, a GFD-13/RTUC tuning unit must be inserted into the demodulator. This tuning unit has no delay line as the delay line is located in the GFT-6 Frequency Translators. A T-connector is used at the input if the reference signal is recorded with the multiplex. If multiplex and reference signal are separate inputs, eliminate the T-connector and feed the Multiplex directly to an external delay. J103 is the VCO output.

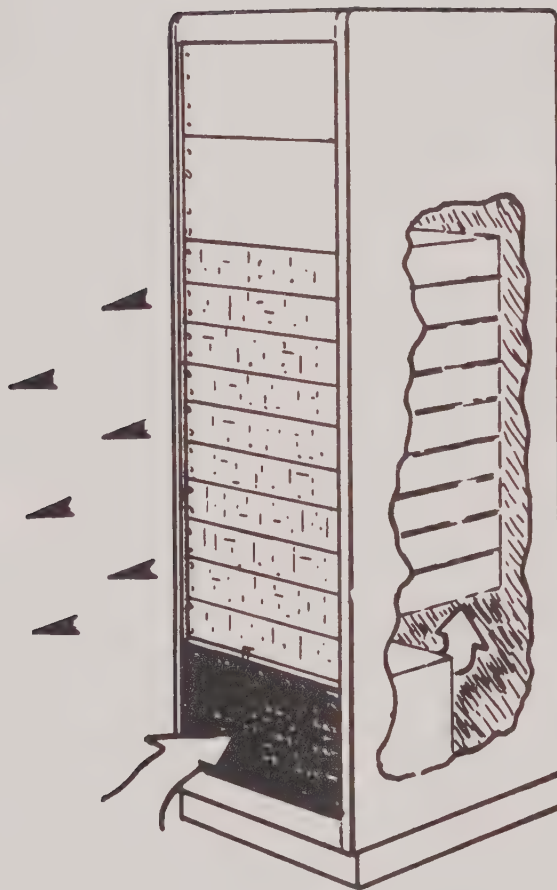

Air flow is 40 cfm per GMH-13. Installation shall be semi-pressurized to approximately 0.2 in. of water to permit cooling by air flow over and around units.

Figure 2-2. Typical Example of Rack Cooling

Table 2-1. Data Demodulator Housing Connections

Subcarrier Input
Voltage Output
VCO Monitor
External Zero Offset
Wow and Flutter Input (when this input is not used it should be terminated with a shorted BNC connector on the rear of the housing)

P1 Plug (Demodulator)		S1 Socket (Housing)	
Pin No.	Pin Connections	Pin No.	Pin Connections
A	Output	A	Output
B	Subcarrier Monitor	B	
C	Output Ground	C	Output Ground
D	Subcarrier Input	D	Subcarrier Input
E	Auto-Cal	E	
F	VCO Output	F	VCO Output
H	Feedback #1	H	Jumper to M & P
J	W & F Input	J	W & F Input
K	Auto-Cal	K	
L	Current Out (+)	L	Jumper to R
M	Feedback #2	M	Jumper to H & P
N	Ext. Zero	N	Ext. Zero Offset (shorted BNC on GMH-13)
P	Feedback	P	Jumper to M & H
R	Current Out (-)	R	Jumper to L
S	No Connection	S	No Connection
AA		AA	
BB	AC Line	BB	115 VAC Input
CC	No Connection	CC	
DD	AC Line	DD	115 VAC Input

DATA DEMODULATOR CONNECTOR CONTACTS

- A. OUTPUT.
Normal voltage output of ± 10 volts maximum for a bandedge signal input.
- B. SUBCARRIER MONITOR.
Output of the band pass filter of the demodulator.
- C. Output Ground.
- D. Subcarrier Input.
- E. Auto-Cal.
Used for external sensitivity adjustment (Figure 2-4).
- F. VCO Output.
The VCO output is a square wave from -5 volts to -15 volts at the subcarrier frequency.
- H. Feedback #1.
Used in conjunction with contacts M & P in selecting between internal sensitivity adjust and external sensitivity adjustment. This external sensitivity adjustment can be used in an automatic calibration adjustment system.
- J. Wow and Flutter.
This is the input to the Data Demodulator VCO. When no wow and flutter input is desired, a shorted cable should be put on the RG-196/U cable output. The input resistance of the wow and flutter input is 5,000 ohms nominal. With a +1.414 peak volts on this contact the demodulator deviates one percent of center frequency lower.
- K. Auto-Cal.
Used for external sensitivity adjustment and will be discussed in a later paragraph of this section titled CONNECTIONS FOR EXTERNAL SENSITIVITY ADJUSTMENT.
- L. Current Output (+).
Used in conjunction with contact R to obtain a demodulator current output. Discussed in a later paragraph of this section titled CONNECTIONS FOR CURRENT OUTPUT.
- M. Feedback #2.
Used in conjunction with contact H and contact P in selecting between internal sensitivity adjustment and external sensitivity adjustment. This external sensitivity adjustment can be used in an automatic calibration adjustment system.

- N. External Zero.
The external zero is an input whose function is to offset the DC component of the output intelligence. This offset should be introduced with a DC voltage. The sensitivity of this input is 12.5 millivolts per percent of bandwidth and the sense is negative. Thus, if the bandedge voltage is set for maximum (± 10 volts), the output from the demodulator will be -2 volts DC when an input of +2.5 volts DC is put on the contact N. The above case is with a center frequency signal into the demodulator.
The input resistance of this contact is greater than 100,000 ohms. This input can also be used for zero adjustment in an automatic calibration system. If this input is not used, it should be grounded with a shorted coax cable, RG-196/U.
- P. Feedback.
Used in conjunction with contacts H & M to select between internal and external sensitivity adjustment. This external sensitivity adjustment can be used in an automatic calibration adjustment system.
- R. Current Output (-).
Used in conjunction with contact L to obtain a demodulator current output and will be discussed in a later paragraph of this section titled CONNECTIONS FOR CURRENT OUTPUT.
- S thru AA. No Connection.
- BB. Power.
One side of the power line input.
- CC. No Connection.
- DD. Power.
One side of the power line input.

Table 2-2. Reference Demodulator Housing Connections

Multiplex Input

Delayed Multiplex Output

Tape Speed Compensation Signal Input

Tape Speed Compensation Signal Output

Wow and Flutter Input should be terminated with a shorted BNC

P1 Plug (Demodulator)		S1 Socket (Housing)	
Pin No.	Pin Connections	Pin No.	Pin Connections
A	Output, Tape Speed Compensation Signal	A	Output, Tape Speed Compensation Signal
B	Subcarrier Monitor	B	
C	Output Ground	C	Output Ground
D	Input, Tape Speed Compensation Signal	D	Input, Tape Speed Compensation Signal
E	Auto-Cal	E	
F	Input, Multiplex	F	Input Multiplex
H	Feedback #1	H	Jumper to M & P
J	W & F Input	J	W & F Input (shorted BNC on GMH-13)
K	Auto-Cal	K	
L	Current Out (+)	L	Jumper to R
M	Feedback #2	M	Jumper to H & P
N	Output, Delayed Multiplex	N	Output, Delayed Multiplex
P	Feedback	P	Jumper to M & H
R	Current Out (-)	R	Jumper to L
S	No Connection	S	No Connection
↓		↓	
AA		AA	
BB	AC Line	BB	115 VAC Input
CC	No Connection	CC	
DD	AC Line	DD	115 VAC Input

REFERENCE DEMODULATOR - CONNECTOR CONTACT DESCRIPTION

Same as Data Demodulator with the following exceptions:

A. Tape Speed Compensation Signal Output.

Output of the Reference Demodulator which is proportional to the Wow and Flutter caused by the tape recorder and is fed to the Wow and Flutter bus of the Data Demodulators.

D. Tape Speed Compensation Signal Input.

Reference frequency input.

F. Multiplex Input.

Input to the delay line amplifier. It is the multiplex signal from the recorder.

N. Delayed Multiplex Output.

Output of the delay line amplifier. It is the delayed multiplex signal that is fed to the Data Demodulators.

Table 2-3. Signal Interconnection

Number	Connector	Mating Connector	Number	Function	
				Data Demodulator	Reference Demodulator
J101*	Dage 30728-1	UG-88C/U	P101	Input	Input, reference frequency signal
J102	Dage 30728-1	UG-88C/U	P102	Wow & Flutter Input	Wow & Flutter input (shorted BNC on GMH-13)
J103	Dage 30728-1	UG-88C/U	P103	VCO Output	Multiplex Input
J104	Dage 30728-1	UG-88C/U	P104	External zero offset (shorted BNC)	Delayed Multiplex Output to J101 of Data Demodulator
J105	Dage 30731-1	UG-88C/U	P105	Output	Output, tape speed compensation signal to J102 of Data Demodulator

*When the reference frequency is in the multiplex a T-connector must be used at J101.

SECTION III

OPERATION

3-1. GENERAL.

3-2. The section describes initial operating procedures and operating instructions for the Model GFD-13 Demodulator. It is assumed that the equipment is set up in accordance with Section II.

3-3. OPERATING INSTRUCTIONS.

- a. Insert the GFD-13 into the housing assembly and connect cables at the rear of the GMH-13 in accordance with Table 2-3, Section II.
- b. Insert the tuning unit corresponding to the channel or reference frequency desired into the demodulator.
- c. Insert the low pass filter which corresponds to the proper frequency and modulation index into the low pass filter.
- d. Depress the POWER switch and allow a 10 minute warmup.
- e. Connect a frequency source to GMH-13 housing assembly BNC input connector(s).
- f. Adjust the frequency source to the tuning unit center frequency designated on the front panel of the tuning unit.
- g. Set the voltage level of the frequency source between 2 mv and 2 volts rms. The level of the incoming signal may be determined by changing the position of the INput level range switch until the INput meter reads on scale. Full scale meter readings are 20 mv, 200 mv and 2 volts rms.
- h. Adjust the band centering screwdriver control on the tuning unit marked ZERO until the OUTput meter reads center scale.
- i. Change the incoming signal to the channel low bandedge frequency. The OUTput meter will indicate low bandedge (left full scale). If the tuning unit has an output polarity control on the front panel, the OUTput meter may read high bandedge. The polarity control must be set in the proper position.
- j. Adjust the OUTput level control of the demodulator and monitor output jack J105 at the rear of the housing or the front panel jack marked OUT located on the lower panel of the unit.

- k. Connect the input to the signal to be measured and the output to the display or recording unit. The demodulator is ready for operation.

3-4. TUNING UNIT AND LOW PASS FILTER. Selection of the desired subcarrier frequency is accomplished by installing the appropriate Model GFD-13/TU tuning unit in the demodulator. A locking lever is located beneath the tuning unit space on the front panel of the demodulator with Data-Control Systems, Inc. printed on its surface. The tuning unit may be extracted by pulling gently forward on the handle. When the tuning unit is relocated the handle automatically assumes a position wherein it can be pushed in flush with the tuning unit. This engages the tuning unit and locks it securely in place. The handle also functions to lock the demodulator into its housing. When the handle is pulled forward to extract the tuning unit, the demodulator can also be pulled out of its housing.

When a standard tuning unit is used an increase in frequency at the input will cause a corresponding increase in output voltage. Tuning units suffixed by designations D and E may be used for reverse polarity switching, manual operation and remote/manual operation, respectively.

Where front panel input level switches are used on the tuning unit the x1 or x5 switch must be multiplied times the demodulator input level setting to arrive at the full scale value for the meter. For example, if the desired input level is 10 V, the toggle switch on the tuning unit is placed in the x5 position which attenuates the input 1/5. For a full scale reading on the meter, the demodulator front panel input level switch must be set at 2 V ($2\text{ V} \times 5 = 10\text{ V}$ input).

3-5. The low pass filter plugs into the front of the tuning unit so that it can be replaced without removing the tuning unit, and is removed by pushing a small button on its front panel. When the tuning unit is removed, the low pass filter remains locked into it, but may be removed by activating the pushbutton.

3-6. CHOICE OF LOW PASS FILTER. Two types of GFD-13/TU/L, low pass filters, are available. These are (1) the constant amplitude (Butterworth) and (2) the linear phase (Gaussian) types.

3-7. The constant amplitude filter maintains a relatively flat amplitude characteristic from low frequencies almost to the cutoff frequency. The linear phase filter amplitude

characteristic falls off gradually as its cutoff frequency is approached. Figure 3-1 compares the amplitude characteristics of the two types. A characteristic of the linear phase filter is that its phase shift increases linearly with frequency. Figure 3-2 compares the phase characteristics of the two types.

3-8. If the data is sinusoidal and its amplitude is important, especially up to the vicinity of filter cutoff, the constant amplitude type should be used. This affords accurate amplitude measurement over the entire data bandwidth, and the sharper cutoff yields a higher data signal-to-noise ratio.

3-9. When the data is represented by a square wave or other transient form containing several frequency components, the phase relationship between the frequency components may be more important to maintain than the amplitude relationship. When the square wave is applied to a constant amplitude filter, its phase distortion misplaces the individual component frequencies so that the output may contain one or more overshoots. In this case the linear phase filter may be more appropriate because it does not introduce phase distortion and hence, its output will not contain large overshoots. The output will be a faithful representation of the input square wave, limited only by the filter rise times. Figure 3-3 illustrates demodulator response to a step function change in subcarrier frequency with both types of filters.

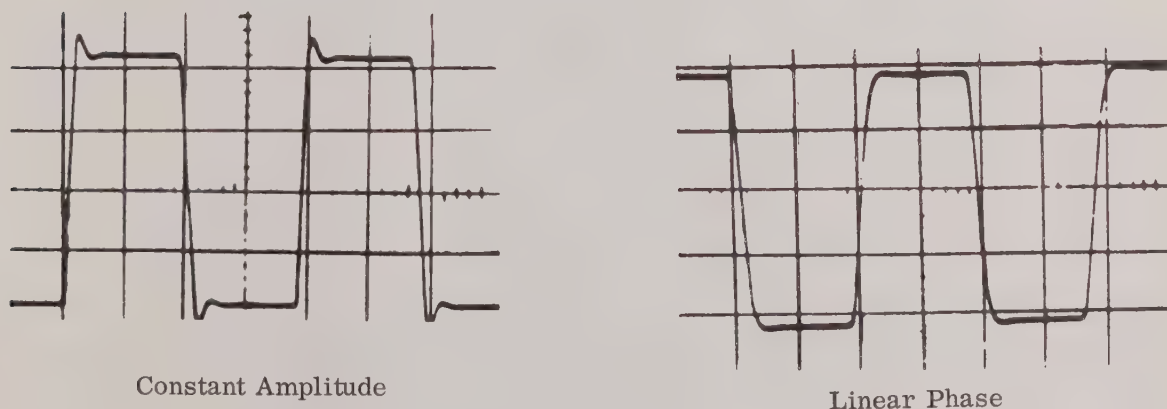


Figure 3-3. Step Function Response of Linear Phase and Constant Amplitude Low Pass Output Filters

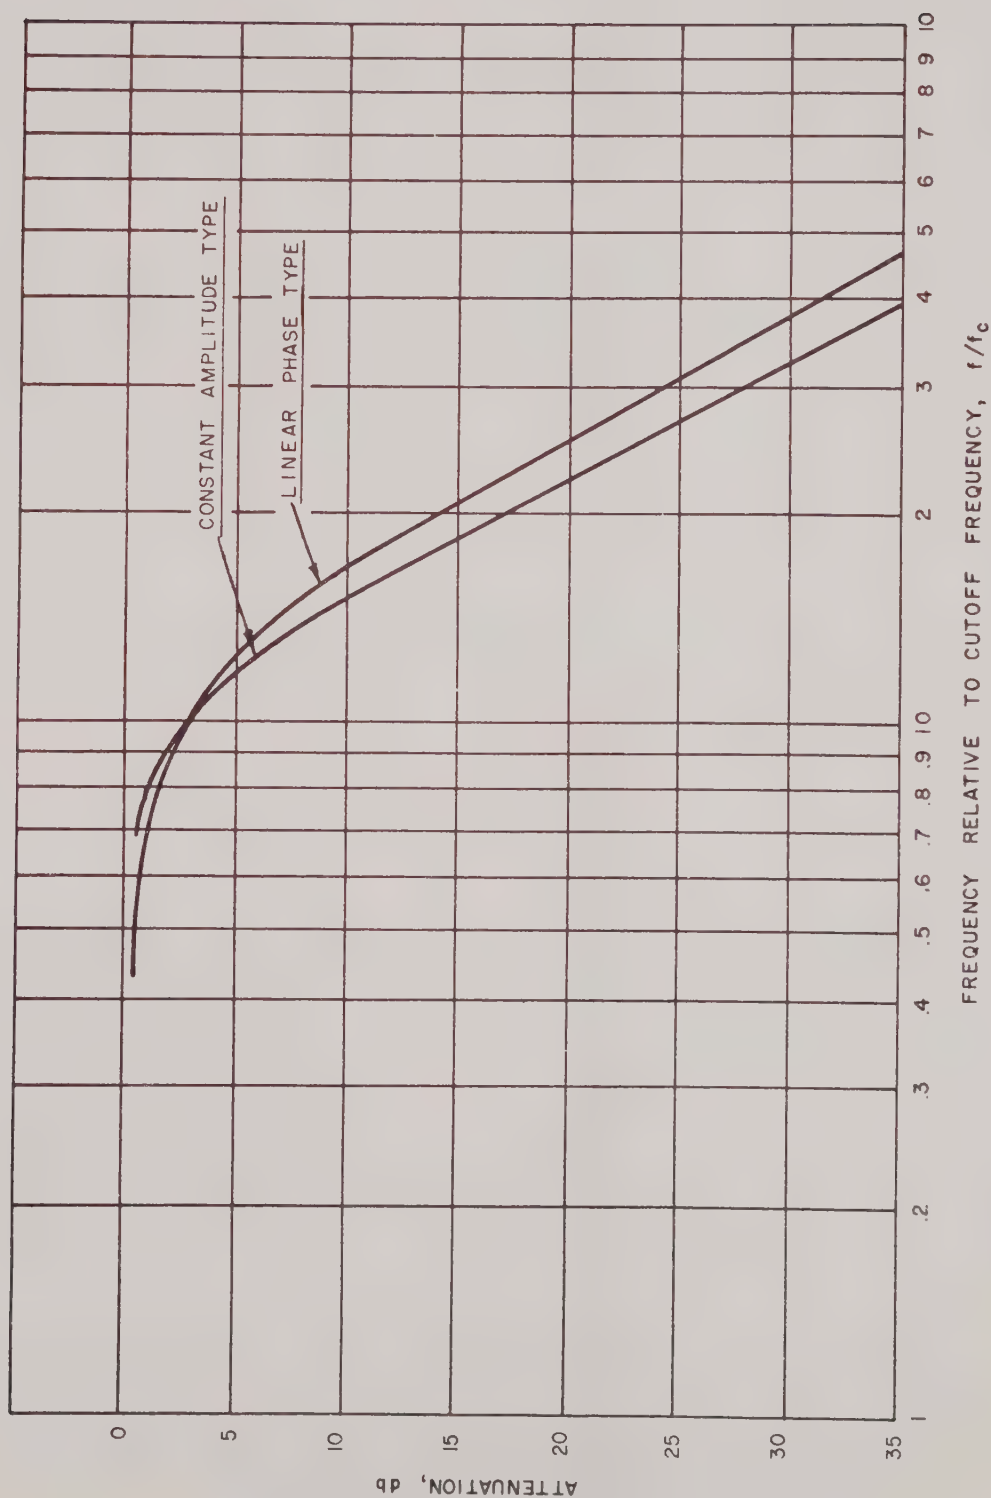


Figure 3-1. Low Pass Output Filter Amplitude Characteristics

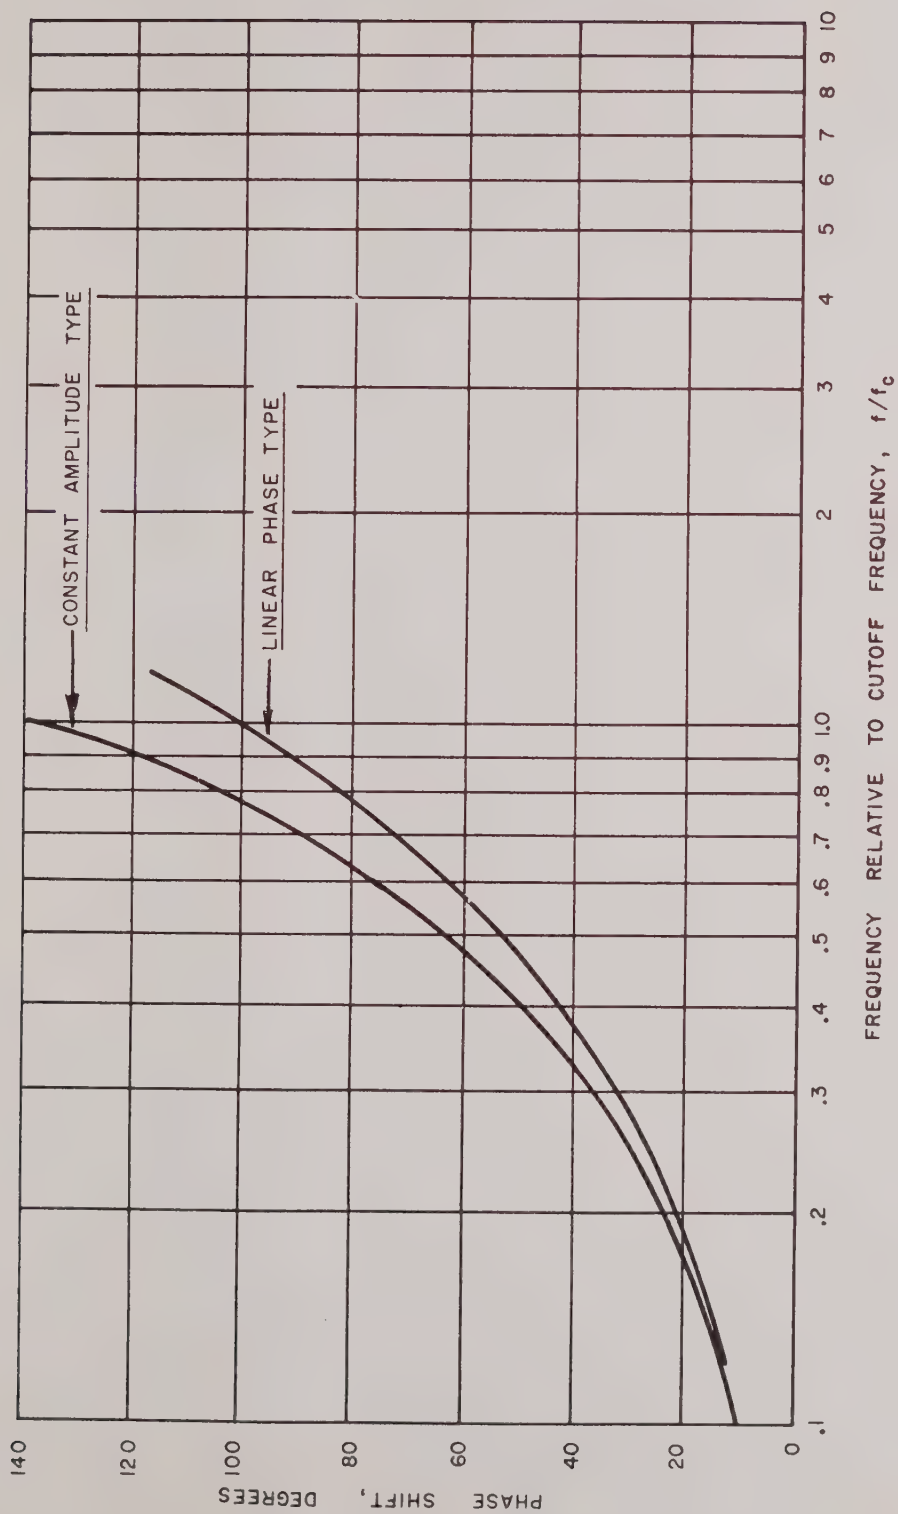


Figure 3-2. Low Pass Output Filter Phase Characteristics

3-10. In both cases the cutoff frequency is specified as the frequency at which the gain is 3 db below its low frequency or d-c value. Cutoff frequencies from 6 Hz to 100 kHz are available in either type. For a particular installation, the cutoff frequency should be chosen no higher than necessary to include the data bandwidth but to exclude high frequency noise. Table 3-1 lists the IRIG, AIA and DCS Constant Bandwidth subcarrier bands, and the recommended data bandwidth for each. Each subcarrier band can accommodate a greater data bandwidth than the value listed at the risk of reduced specifications.

3-11. CONTROLS AND INDICATORS (FIGURE 3-4).

- a. Power Switch. The demodulator is placed in operation by depressing the POWER switch which lights when the unit is in operation.
- b. Band Centering Adjustment. The purpose of the Band Centering Adjustment is to provide zero output voltage when the subcarrier input signal frequency is at band center. The control is a 10-turn screwdriver adjusted potentiometer, located on the front of the tuning unit. Allow at least 10 minutes warmup time before making the final band centering adjustment. At the input terminals apply a sinusoidal signal at band center frequency, having an amplitude between 2 millivolts rms and 2 volts rms. The Input Signal Level Meter should indicate the rms value of the input signal. (See next section.) Rotate the band centering adjustment (ZERO) control until the output meter is at center scale.
- c. Input Signal Level Meter. The demodulator can function satisfactorily using input signals from 2 millivolts rms to 2 volts rms. The input signal level meter has 3 ranges: 20 mv, 200 mv and 2 volts rms full scale. The fourth switch position indicates the average loop phase error. If the input amplitude of the desired subcarrier is less than 2 millivolts rms, the Input Signal Level Meter indicates in the left hand portion of its scale when the input level meter range switch is in its 20 mv range. If the input signal amplitude is greater than 2 volts rms, the meter indicates in the far right hand edge of its scale when the input level meter range switch is in its 2 volt range. When the input signal amplitude is satisfactory for normal operation, the demodulator will operate properly regardless of the setting of the input signal level meter switch.

Table 3-1. Standard Tuning Unit and Low Pass Filter Frequencies

STANDARD TUNING UNIT FREQUENCIES

	Channel	Center Freq.	Deviation	Channel	Center Freq.	Deviation (Percent)	Channel	Center Freq.	Deviation (Percent)
IRIG FM/FM STANDARDS GFD-13/TU GFD-13/TUA	1	400 Hz	$\pm 7\frac{1}{2}\%$	11	7350 Hz	$\pm 7\frac{1}{2}\%$	21	165,000 Hz	$\pm 7\frac{1}{2}\%$
	2	560	$\pm 7\frac{1}{2}\%$	12	10,500	$\pm 7\frac{1}{2}\%$	A	22,000	$\pm 15\%$
	3	730	$\pm 7\frac{1}{2}\%$	13	14,500	$\pm 7\frac{1}{2}\%$	B	30,000	$\pm 15\%$
	4	960	$\pm 7\frac{1}{2}\%$	14	22,000	$\pm 7\frac{1}{2}\%$	C	40,000	$\pm 15\%$
	5	1300	$\pm 7\frac{1}{2}\%$	15	30,000	$\pm 7\frac{1}{2}\%$	D	52,500	$\pm 15\%$
	6	1700	$\pm 7\frac{1}{2}\%$	16	40,000	$\pm 7\frac{1}{2}\%$	E	70,000	$\pm 15\%$
	7	2300	$\pm 7\frac{1}{2}\%$	17	52,500	$\pm 7\frac{1}{2}\%$	F	93,000	$\pm 15\%$
	8	3000	$\pm 7\frac{1}{2}\%$	18	70,000	$\pm 7\frac{1}{2}\%$	G	124,000	$\pm 15\%$
	9	3900	$\pm 7\frac{1}{2}\%$	19	93,000	$\pm 7\frac{1}{2}\%$	H	165,000	$\pm 15\%$
	10	5400	$\pm 7\frac{1}{2}\%$	20	124,000	$\pm 7\frac{1}{2}\%$			
DCS CONSTANT BANDWIDTH STANDARDS GFD-13/TU	MARK 1000	6.25 kHz	± 1 kHz	MARK 2000	12.5 kHz	± 2 kHz	MARK 4000	25 kHz	± 4 kHz
		10.0	± 1 kHz		20.0	± 2 kHz		40	± 4 kHz
		13.75	± 1 kHz		27.5	± 2 kHz		55	± 4 kHz
		17.5	± 1 kHz		35.0	± 2 kHz		70	± 4 kHz
		21.25	± 1 kHz		42.5	± 2 kHz		85	± 4 kHz
		25.0	± 1 kHz		50.0	± 2 kHz		100	± 4 kHz
		28.75	± 1 kHz		57.5	± 2 kHz		115	± 4 kHz
		32.5	± 1 kHz		65.0	± 2 kHz		130	± 4 kHz
		36.25	± 1 kHz		72.5	± 2 kHz		145	± 4 kHz
		40.0	± 1 kHz		80.0	± 2 kHz		160	± 4 kHz
DCS CONSTANT BANDWIDTH STANDARDS GFD-13/TU	MARK 8000	50 kHz	± 8 kHz	MARK 16,000	100 kHz	± 16 kHz	MARK 32,000	200 kHz	± 32 kHz
		80	± 8 kHz		160	± 16 kHz		320	± 32 kHz
		110	± 8 kHz		220	± 16 kHz		440	± 32 kHz
		140	± 8 kHz		280	± 16 kHz		560	± 32 kHz
		170	± 8 kHz		340	± 16 kHz		680	± 32 kHz
		200	± 8 kHz		400	± 16 kHz		800	± 32 kHz
		230	± 8 kHz		460	± 16 kHz		920	± 32 kHz
		260	± 8 kHz		520	± 16 kHz		1040	± 32 kHz
		290	± 8 kHz		580	± 16 kHz		1160	± 32 kHz
		320	± 8 kHz		640	± 16 kHz		1280	± 32 kHz
AIA CONSTANT BANDWIDTH STANDARDS GFD-13/TU	1 C	12.5 kHz	± 2 kHz	2 CW	20.8 kHz	± 4 kHz			
	2 C	20.8	± 2 kHz	4 CW	37.5	± 4 kHz			
	3 C	29.2	± 2 kHz	6 CW	54.2	± 4 kHz			
	4 C	37.5	± 2 kHz	8 CW	70.8	± 4 kHz			
	5 C	45.8	± 2 kHz	10 CW	87.5	± 4 kHz			
	6 C	54.2	± 2 kHz	12 CW	104.2	± 4 kHz			
	7 C	62.5	± 2 kHz	14 CW	120.8	± 4 kHz			
	8 C	70.8	± 2 kHz	16 CW	137.5	± 4 kHz			
	9 C	79.2	± 2 kHz	18 CW	154.2	± 4 kHz			
	10 C	87.5	± 2 kHz	20 CW	170.8	± 4 kHz			
MAGNETIC RECORDING STANDARDS GFD-13/TUW					54 kHz	$\pm 40\%$			
					108	$\pm 40\%$			
	27	$\pm 40\%$			216	$\pm 40\%$			
REFERENCE FREQUENCIES GFD-13/RTU	(800 kHz, 400 kHz), 200 kHz, 100 kHz, 50 kHz, 25 kHz and 17 kHz								

STANDARD LOW PASS FILTER FREQUENCIES

	Band	MI-5 Freq. (Hz)	MI-1 Freq. (Hz)	Band	MI-5 Freq. (Hz)	MI-1 Freq. (Hz)	Band	MI-5 Freq. (Hz)	MI-1 Freq. (Hz)
IRIG FM/FM STANDARDS GFD-13/TU/L GFD-13/TU/LSM	1	6	30	11	110	550	21	2500	12,500
	2	8.4	42	12	160	800	A	660	3300
	3	11	55	13	220	1100	B	900	4500
	4	14	70	14	330	1650	C	1200	6000
	5	20	100	15	450	2250	D	1600	8000
	6	25	150	16	600	3000	E	2100	10,500
	7	35	175	17	790	3950	F	2800	14,000
	8	45	225	18	1050	5250	G	3700	18,500
	9	59	295	19	1400	7000	H	5000	25,000
	10	81	405	20	1900	9500			

CONSTANT BANDWIDTH AND OTHERS

GFD-13/TU/L	250 Hz	2000	5000	16,000	40,000
GFD-13/TU/LSM	500	2500	8000	20,000	50,000
	1000	4000	10,000	25,000	

Standard Frequencies and Deviations

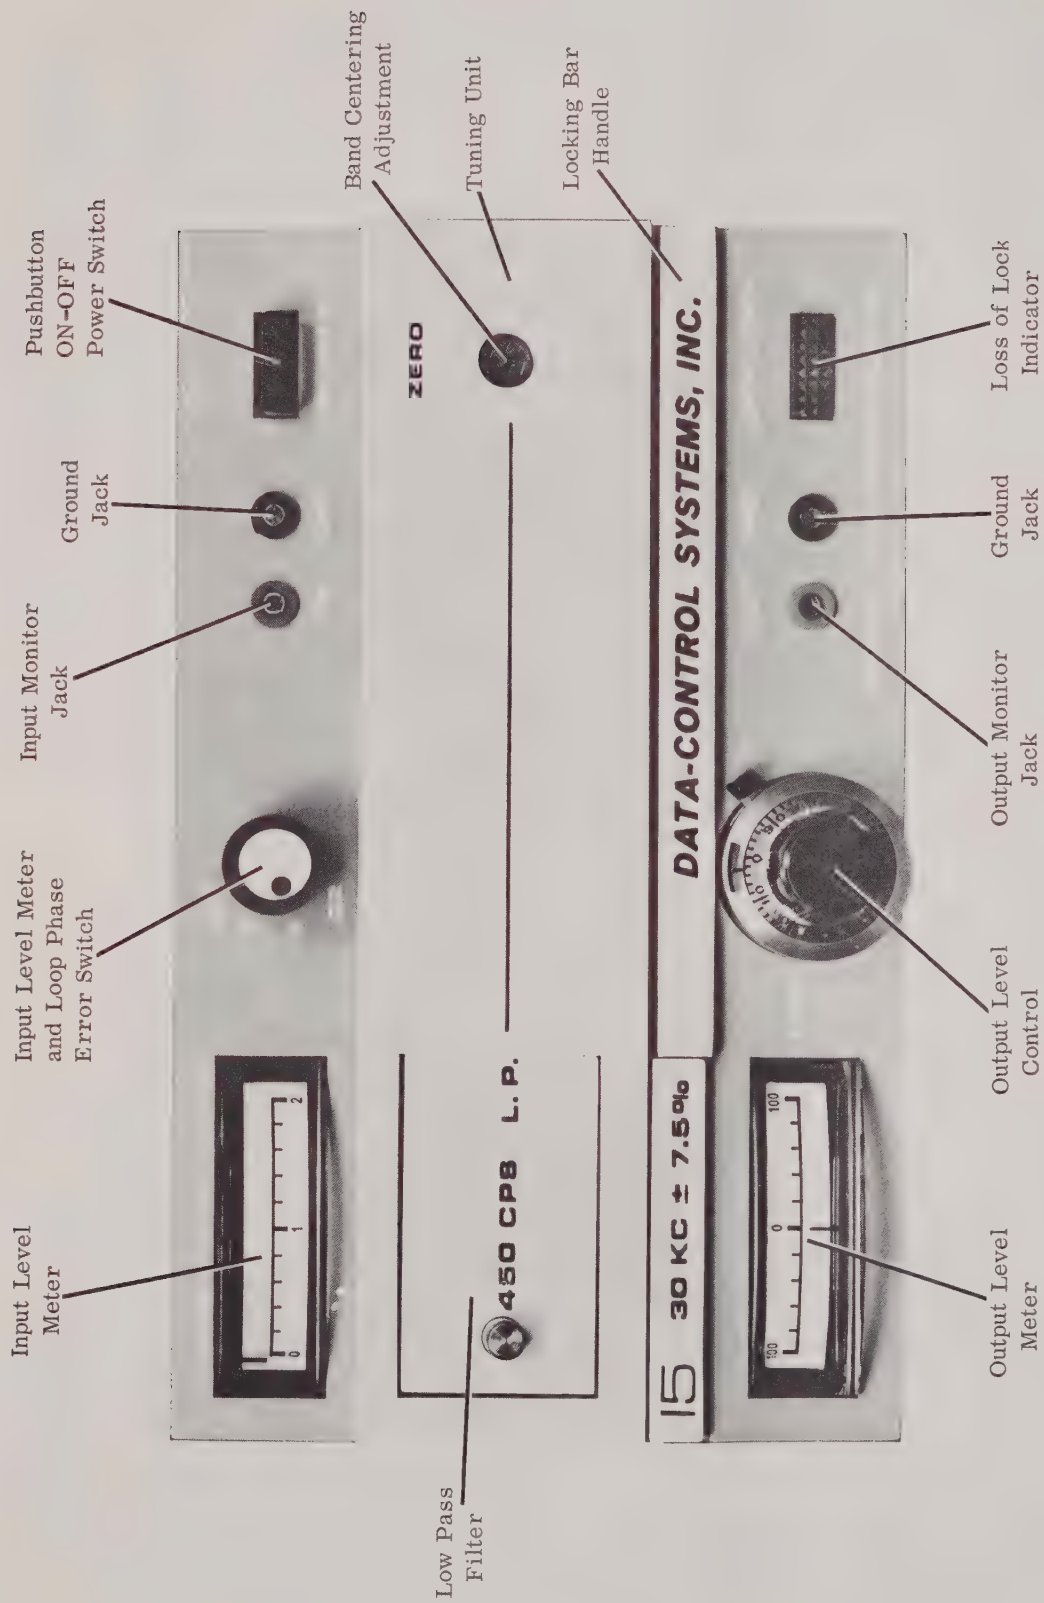


Figure 3-4. Controls and Indicators

For satisfactory operation of the demodulator, the input amplitude of the desired subcarrier must be adjusted for an input signal level of between 2 mv and 2 volts rms. (The meter indicates only the amplitude of the subcarrier selected by the band pass filter, and not the amplitude of the multiplex of subcarriers at the discriminator input.)

- d. Output Level Control. A nine-turn finger operated potentiometer is provided for setting the output signal level. Maximum output voltage is ± 10 volts at bandedges; minimum output voltage is ± 1 volt at bandedge. Set this control for the required full scale input voltage to be applied to the recording equipment. A calibrate dial is available as an option.
- e. Output Level Meter. The output level meter indicates demodulator output voltage expressed as a percentage of the maximum output voltage at bandedge (not the voltage setting of the output level control). Its calibration is -100%, 0, +100%. The meter indication is not dependent upon the setting of the output level control. Hence, after proper adjustment of the centering control has been made, its indication is also a measure of the frequency deviation of the input signal to the demodulator.
- f. Monitor Jacks. An input signal monitor jack and an output signal monitor jack are provided on the front panel. Each is a pin-type receptacle. The input signal monitor jack is connected following the band pass filter so that only the subcarrier selected by the band pass filter will be observed. The actual output voltage as determined by the output level control is connected to the output signal jack.
- g. Loss of Lock Indicator. The loss of lock indicator lights whenever the voltage controlled oscillator fails to remain synchronized with the incoming subcarrier (see Theory of Operation). When the indicator is lighted, the demodulator output voltage is not proportional to the subcarrier input signal frequency deviation, and does not represent the telemetered data. Three frequent causes of loss of lock are (1) marginal or insufficient input signal amplitude, (2) high noise level on the input signal or (3) input signal frequency outside the pass band of the band pass filter. To determine the cause of a loss of lock indication check the input signal which may be observed by connecting an oscilloscope to the input signal monitor jack.

SECTION IV

THEORY OF OPERATION

4-1. GENERAL.

4-2. This section covers general and detailed theory of operation.

4-3. A RADIO TELEMETRY SYSTEM.


4-4. Figure 4-1 is a block diagram of a typical radio telemetry system. The purpose of the system is to convey data (temperatures, pressures, etc.) from an inaccessible source, such as a drone aircraft or missile, to a data recording station.

4-5. The data measured by the transducers is represented by an analog voltage which is used to modulate a voltage controlled frequency modulated oscillator (VCO). The output signal frequency from each VCO then represents the measured data. Each of these signals is called a subcarrier. Up to 21 different subcarriers may be used simultaneously. The subcarriers are added and their sum modulates a frequency modulated transmitter operating in the 216 - 235 mHz band.

4-6. At the receiving station, an FM receiver reproduces the sum of the subcarriers. This signal, containing all of the telemetered data, may be recorded on magnetic tape for future study. It is also fed to a group of data demodulators, one for each subcarrier channel. In each demodulator, a band pass filter selects a subcarrier channel and rejects all others. Each demodulator delivers an output voltage which is proportional to the deviation of the input subcarrier frequency from its band center value. Hence, the output voltage from each demodulator is an analog of the data transmitted on its subcarrier channel. Indicating meters may be used to display the data or the data may be recorded by means of recording oscillographs or chart recorders.

4-7. DATA DEMODULATOR.

4-8. Figure 4-2 is a simplified block diagram of the GFD-13 demodulator. The input signal to the demodulator is obtained from an FM receiver and is the sum of all of the subcarriers transmitted on one radio frequency channel. For satisfactory operation of the demodulator, this signal amplitude must be between 2 millivolts rms and 2 volts rms.

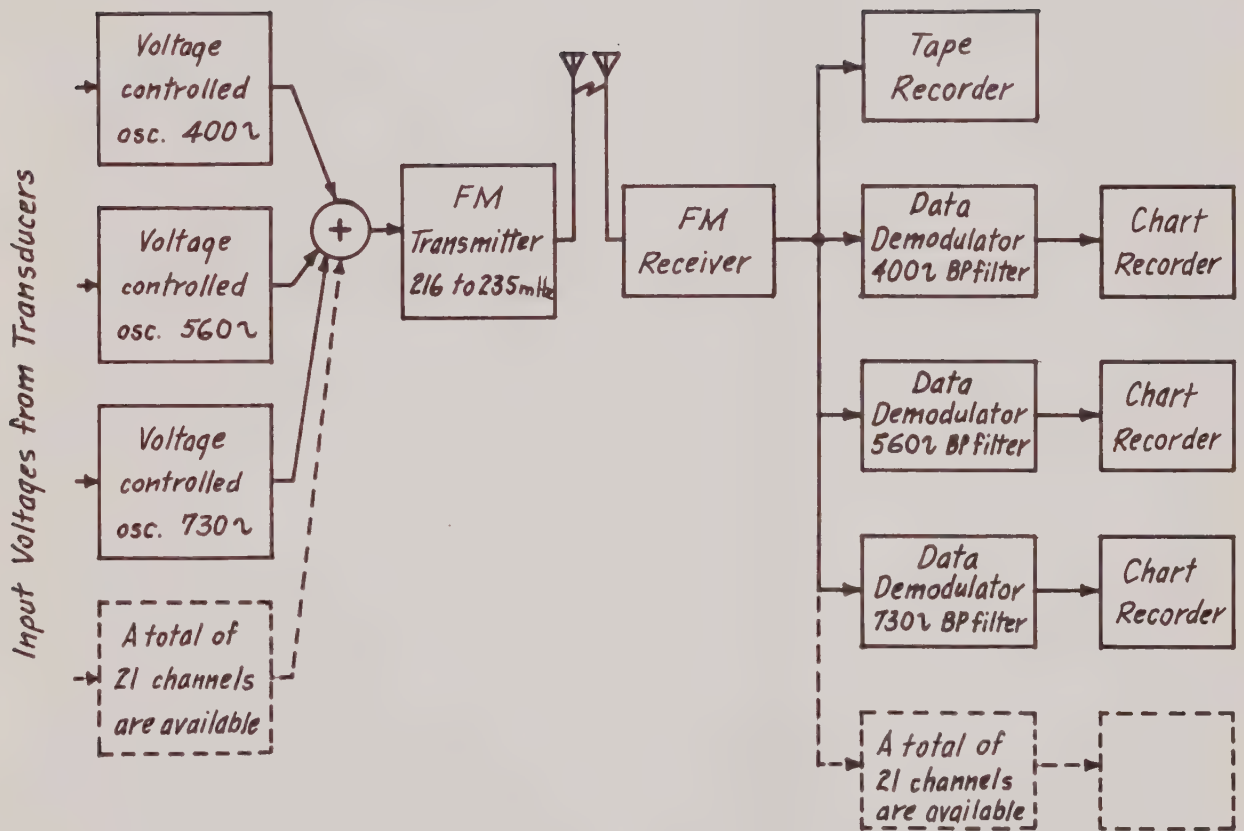

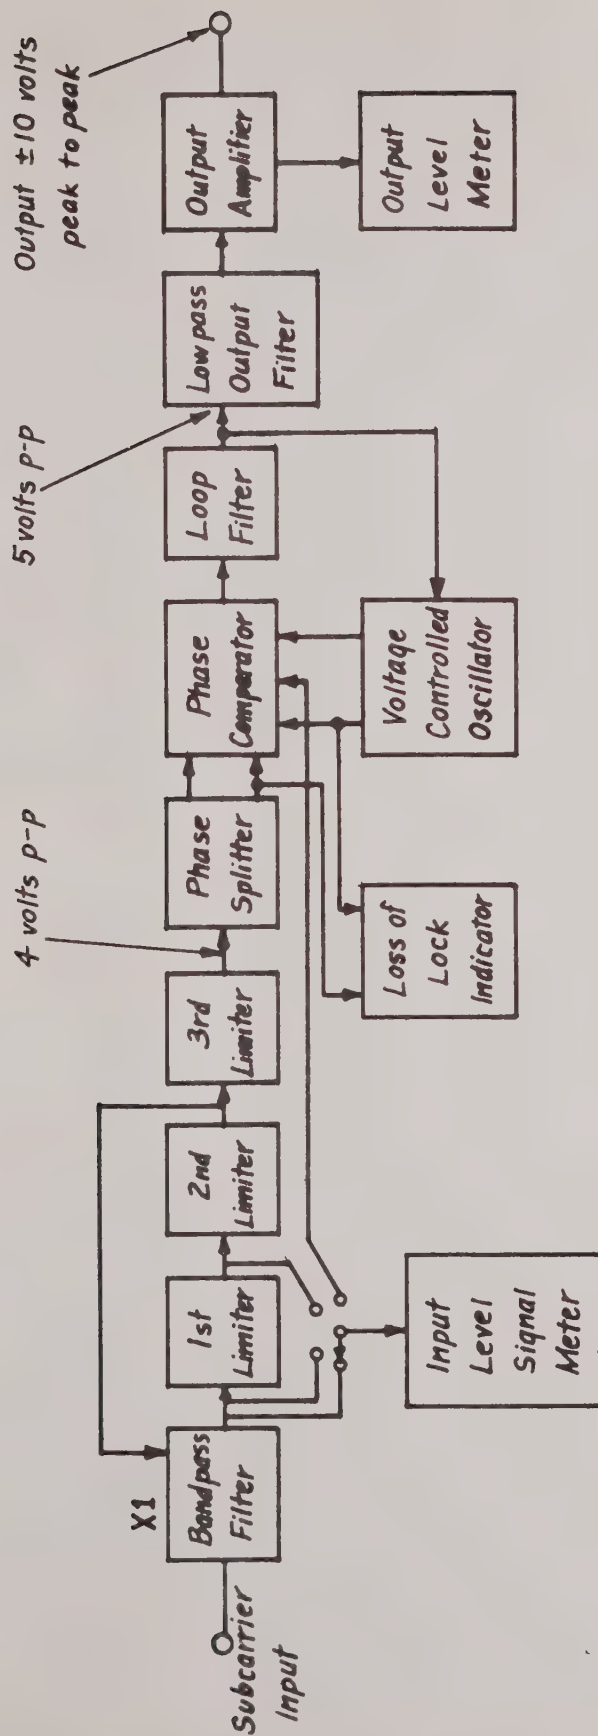


Figure 4-2. Data Demodulator, Block Diagram

4-9. High input impedance is provided by the first stage of the band pass filter which has an input impedance of greater than 500,000 ohms shunted by 50 pf maximum. The band pass filter has a voltage gain of one at its peak frequency.

4-10. The band pass filter, consisting of five stages of stagger-tuned LC amplifiers, selects the desired subcarrier signal and rejects all others. Its output signal consists of only the one desired frequency-modulated subcarrier. An isolation amplifier which follows presents a high impedance load to the last stage of the band pass filter to prevent detuning of its LC tuned circuit. The output signal from the band pass filter and following isolation amplifier is a sinusoidal waveform at subcarrier frequency. Three limiter stages convert this signal to a fixed-amplitude square wave at the subcarrier frequency. As long as the input signal amplitude is greater than the minimum required value of 2 millivolts rms, the output signal from the third limiter has a fixed amplitude of 4 volts peak-to-peak limited.

4-11. The demodulator output voltage should vary only with changes in the subcarrier frequency, but not with changes in the subcarrier amplitude; the limiters prevent variations of input signal amplitude from having any effect on the demodulator output voltage.

4-12. From the second limiter, a portion of the square wave signal voltage is fed back to the last stage of the band pass filter, which is tuned to subcarrier band center frequency. Signal phasing is arranged so that positive feedback results. The gain of an active circuit is the ratio of output amplitude to input amplitude.

$$G = \frac{\text{OUTPUT AMPLITUDE}}{\text{INPUT AMPLITUDE}}$$

4-13. For the combined limiter, the output amplitude remains constant at 4 volts peak-to-peak while its input may vary from 2 volts rms down to 1 millivolt rms or less. Referring to the definition of gain, it may be seen that the gain of the combined limiter increases as the input signal amplitude decreases. The lower the input amplitude, the higher the limiter gain. Hence, the gain around the loop consisting of the first two limiters, the fifth band pass filter stage, and the second isolation amplifier, increases as input amplitude decreases. When the subcarrier amplitude falls to about 1.5 millivolts rms, this loop gain increases to unity and the loop oscillates because of the positive feedback phasing. The frequency of the oscillation is at subcarrier band center since the loop contains a tuned circuit in the fifth band pass filter stage which is resonant at band center. The oscillation

forces the demodulator output to zero (corresponding to an input at band center) whenever the input amplitude falls too low. When the input amplitude is sufficient for satisfactory demodulator operation, the oscillation stops, and the demodulator output voltage is once again determined by the input subcarrier signal frequency.

4-14. Because the input signal amplitude may vary over a wide range and still yield satisfactory demodulator operation, the input signal level meter must operate over a large range. Thus, the input signal level meter has three levels of input range, 20 mv, 200 mv, and 2 volts rms full scale. It should be noted here that the demodulator works independently of the range at which the input signal level meter is set.

4-15. A 4 volt peak-to-peak square wave at the subcarrier frequency is connected from the third limiter to the phase-locked loop demodulator.

4-16. The phase-locked loop demodulator generates a voltage which is proportional to the deviation of the subcarrier frequency from its band center value. Hence, the output signal voltage from the phase-locked loop demodulator is an analog of the telemetered data. How the phase-locked loop demodulator functions is explained in the detailed circuit descriptions, paragraph 4-51.

4-17. **PHASE-LOCKED LOOP DEMODULATOR.** The purpose of the phase-locked loop demodulator (Figure 4-2) is to generate a voltage which is proportional to the deviation of the input subcarrier signal frequency from its band center value.

4-18. A constant amplitude square wave at subcarrier frequency is obtained from the third limiter. From this signal a phase-splitter provides two equal amplitude square waves, one in phase with the input and the other 180° out of phase with the input. These out of phase signals are connected to a phase comparator circuit. A tunable multivibrator, called a voltage controlled oscillator (VCO), generates two equal amplitude square waves, one 180° out of phase with the other, which are also connected to the phase comparator circuit. The frequency of oscillation of the VCO is determined by a frequency control voltage. The frequency is at subcarrier band center when the control voltage is zero (with proper centering adjustment); the frequency decreases as the voltage is made positive and increases as the voltage is made negative. A change in control voltage causes a proportional frequency change.

4-19. The phase comparator compares the relative phase of the push-pull subcarrier signal out of the phase-splitter to the push-pull VCO signal. It delivers fixed-amplitude square

wave current pulses at twice subcarrier frequency to the loop filter. In the loop filter, this current produces a pulsating voltage drop across an RC network which acts as a loop filter. When the VCO signal leads the subcarrier signal by exactly 90° , the square wave current pulses from the phase comparator are symmetrical, e.g., they have equal on and off time. Then the net or average voltage produced by the current pulses in the loop filter is zero.

4-20. If the VCO signal leads the subcarrier signal by more than 90° , the current pulses to the loop filter have shorter on time and longer off time. The net voltage produced by the loop filter is then positive. Similarly, if the VCO signal leads the subcarrier signal by less than 90° , the current pulses to the loop filter have longer on time and shorter off time, and the net voltage produced by the loop filter is negative.

4-21. Thus, by virtue of the phase comparing action of the phase comparator, the loop filter delivers a voltage that varies with the phase difference between the incoming subcarrier and the VCO; the voltage is zero when the VCO leads the subcarrier by exactly 90° , increasing positively if the VCO leads by more than 90° , and increasing negatively if the VCO leads by less than 90° . This voltage from the loop filter is fed back to control the frequency of the VCO. The feedback forms a phase-locked frequency control loop.

4-22. When the incoming subcarrier and the VCO are both at band center frequency, for example, and the VCO leads the subcarrier by exactly 90° , the VCO frequency control voltage is zero. Suppose the subcarrier were to increase in frequency. Instantaneously, then, a phase difference would begin to appear. In other words, the subcarrier would begin to advance or catch up to the VCO in relative phase. But the phase comparator and loop filter then produce a negative voltage which, when fed back to control the VCO, increases its frequency so that it remains very nearly 90° ahead of the subcarrier.

4-23. Thus, the VCO frequency remains "locked" to the subcarrier frequency. At band center they are 90° out of phase. An additional phase difference of less than 1° causes a sufficient change in the VCO frequency control voltage to drive the VCO frequency to bandedge.

4-24. As long as the VCO remains locked to the incoming subcarrier, its frequency control voltage is proportional to the deviation of the subcarrier frequency from band center. This voltage is therefore proportional to the telemetered data, and is fed to the output amplifier.

4-25. The VCO signal and the subcarrier are connected to a gate circuit called the loss of lock indicating circuit. Whenever there is a frequency difference or loss of lock, this circuit lights the loss of lock indicator.


4-26. The bandwidth of information which will be delivered to the demodulator output depends upon the frequency response of the loop filter. Since the information bandwidth varies with the subcarrier band frequency, the loop filter frequency response must be varied according to the chosen subcarrier band. The standard tuning unit contains the components of a fixed bandwidth loop filter whose cutoff frequency depends on the subcarrier band. A special tuning unit is available which contains a loop filter whose cutoff frequency is adjustable.

4-27. **LOW PASS OUTPUT FILTER AND AMPLIFIER.** The low pass output filter and amplifier determines the bandwidth of the demodulator output voltage or current, and amplifies this data signal to a level suitable for use by recording equipment. The filter and amplifier function as a unit as shown in Figure 4-3A. A portion of the filter network provides negative feedback around a high gain d-c amplifier. At very low frequencies, the overall gain from input to output is determined by the resistors. At a frequency approaching cutoff, the shunt capacitors attenuate the input signal and cause a gain reduction. Near cutoff frequency the feedback capacitor provides more negative feedback which causes a further gain reduction. With proper choice of component values the circuit will have a single cutoff frequency beyond which its gain falls off at a rate of 18 db per octave. The overall frequency response is shown in Figure 4-3B.


4-28. The high gain d-c amplifier shown in Figure 4-3A actually consists of three individual amplifiers. An output voltage limiter, level control, and level meter are also included. The complete system is shown in Figure 4-3C.

4-29. In the complete amplifier there are two parallel signal paths. Signals in the frequency band from 0 to approximately 60 Hz are amplified by a chopper amplifier. Its square wave or chopped output is filtered by an RC filter network, and connected to the input of a broad band d-c amplifier. Signals above approximately 60 Hz are capacitively coupled directly to the input of the broad band d-c amplifier, following which a power amplifier increases the signal power to the desired output power level.


4-30. A diode clamping circuit is connected from the amplifier output to its input. When the demodulator output voltage rises to a predetermined level, the clamping circuit prevents

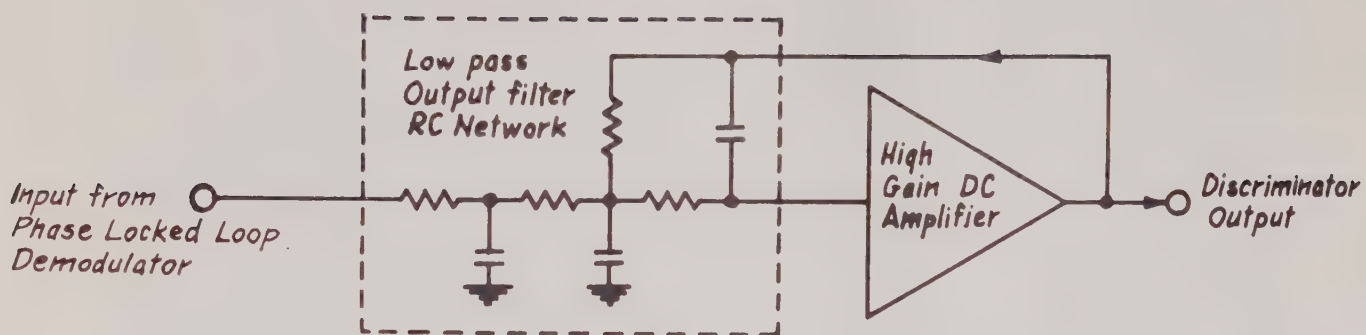

- A -

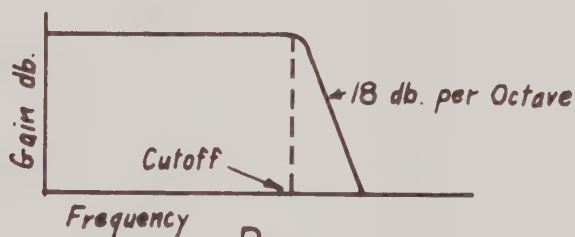

- B -

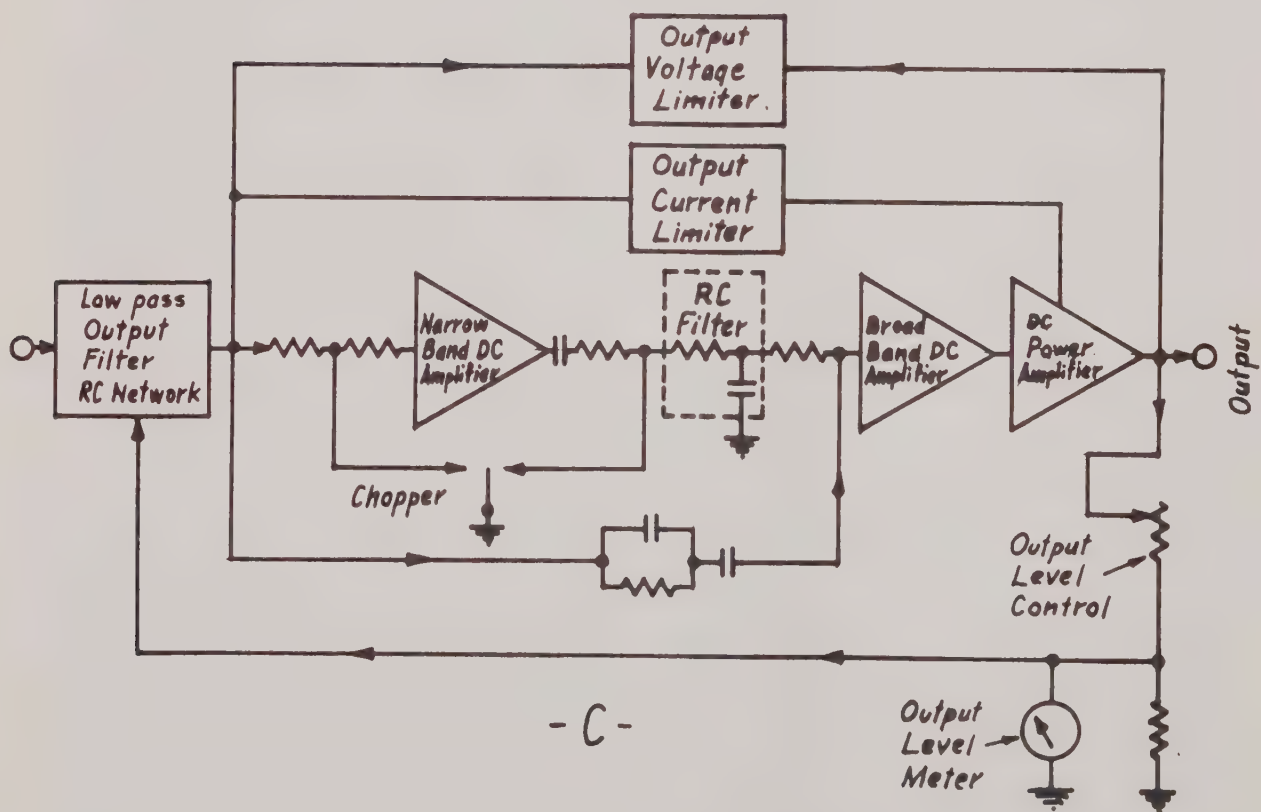

- C -

Figure 4-3. Low Pass Output Filter and Amplifier, Schematic

any additional increase in the amplifier input voltage, and hence, the output voltage cannot increase further. Clamping or limiting action occurs when the output voltage reaches ± 13 volts.

4-31. A transistor clamping circuit is connected from the amplifier output stages to its input. When the demodulator output current rises to a predetermined level, the clamping circuit feeds a correcting current into the input and holds the maximum output current to 150% of specified current.

4-32. The output level control functions by controlling the amount of negative feedback around the amplifier. Because the output level meter is connected in the feedback path following the level control, its indication is independent of the setting of the level control.

4-33. DETAILED CIRCUIT DESCRIPTION.

4-34. BAND PASS FILTER. The input of the demodulator is connected directly to the input band pass filter through capacitor C3101 (see Figure 4-4). The input impedance of this band pass filter is above 500,000 ohms and is made up of resistor R3102 in parallel with the transistor impedance of Q3100. The band pass filter has a voltage gain of one and all components are contained in the center section of the tuning unit assembly.

4-35. The band pass filter consists of five stages of amplification. In each stage the collector load is a parallel resonant RLC circuit stagger-tuned to yield the required pass band. This adjustment should be made only at the factory. Each stage of the band pass is made up of one transistor. The first stage, Q3100, is an NPN type transistor; the second and fourth stages, Q3101 and Q3103, use PNP type transistors; and the third and fifth stages, Q3102 and Q3104, use NPN type transistors. This arrangement allows direct coupling between stages which avoids attenuation and frequency response difficulties encountered with interstage coupling networks.

4-36. LIMITERS. The first limiter has a gain of ten for low level inputs; limiter action does not take place until an input level of approximately 100 millivolts peak-to-peak is introduced. Isolation from the 5th stage of the band pass filter is accomplished by an isolation amplifier consisting of transistors Q3105 and Q3106 at the output of the band pass filter. The second limiter has a gain of 20 for low level inputs and limiter action does not take place until the input to the second limiter is approximately 50 millivolts. Thus, when the input to the first limiter is approximately 5 millivolts the output of the first limiter will be approximately 50 mv and the second limiter will begin to limit.

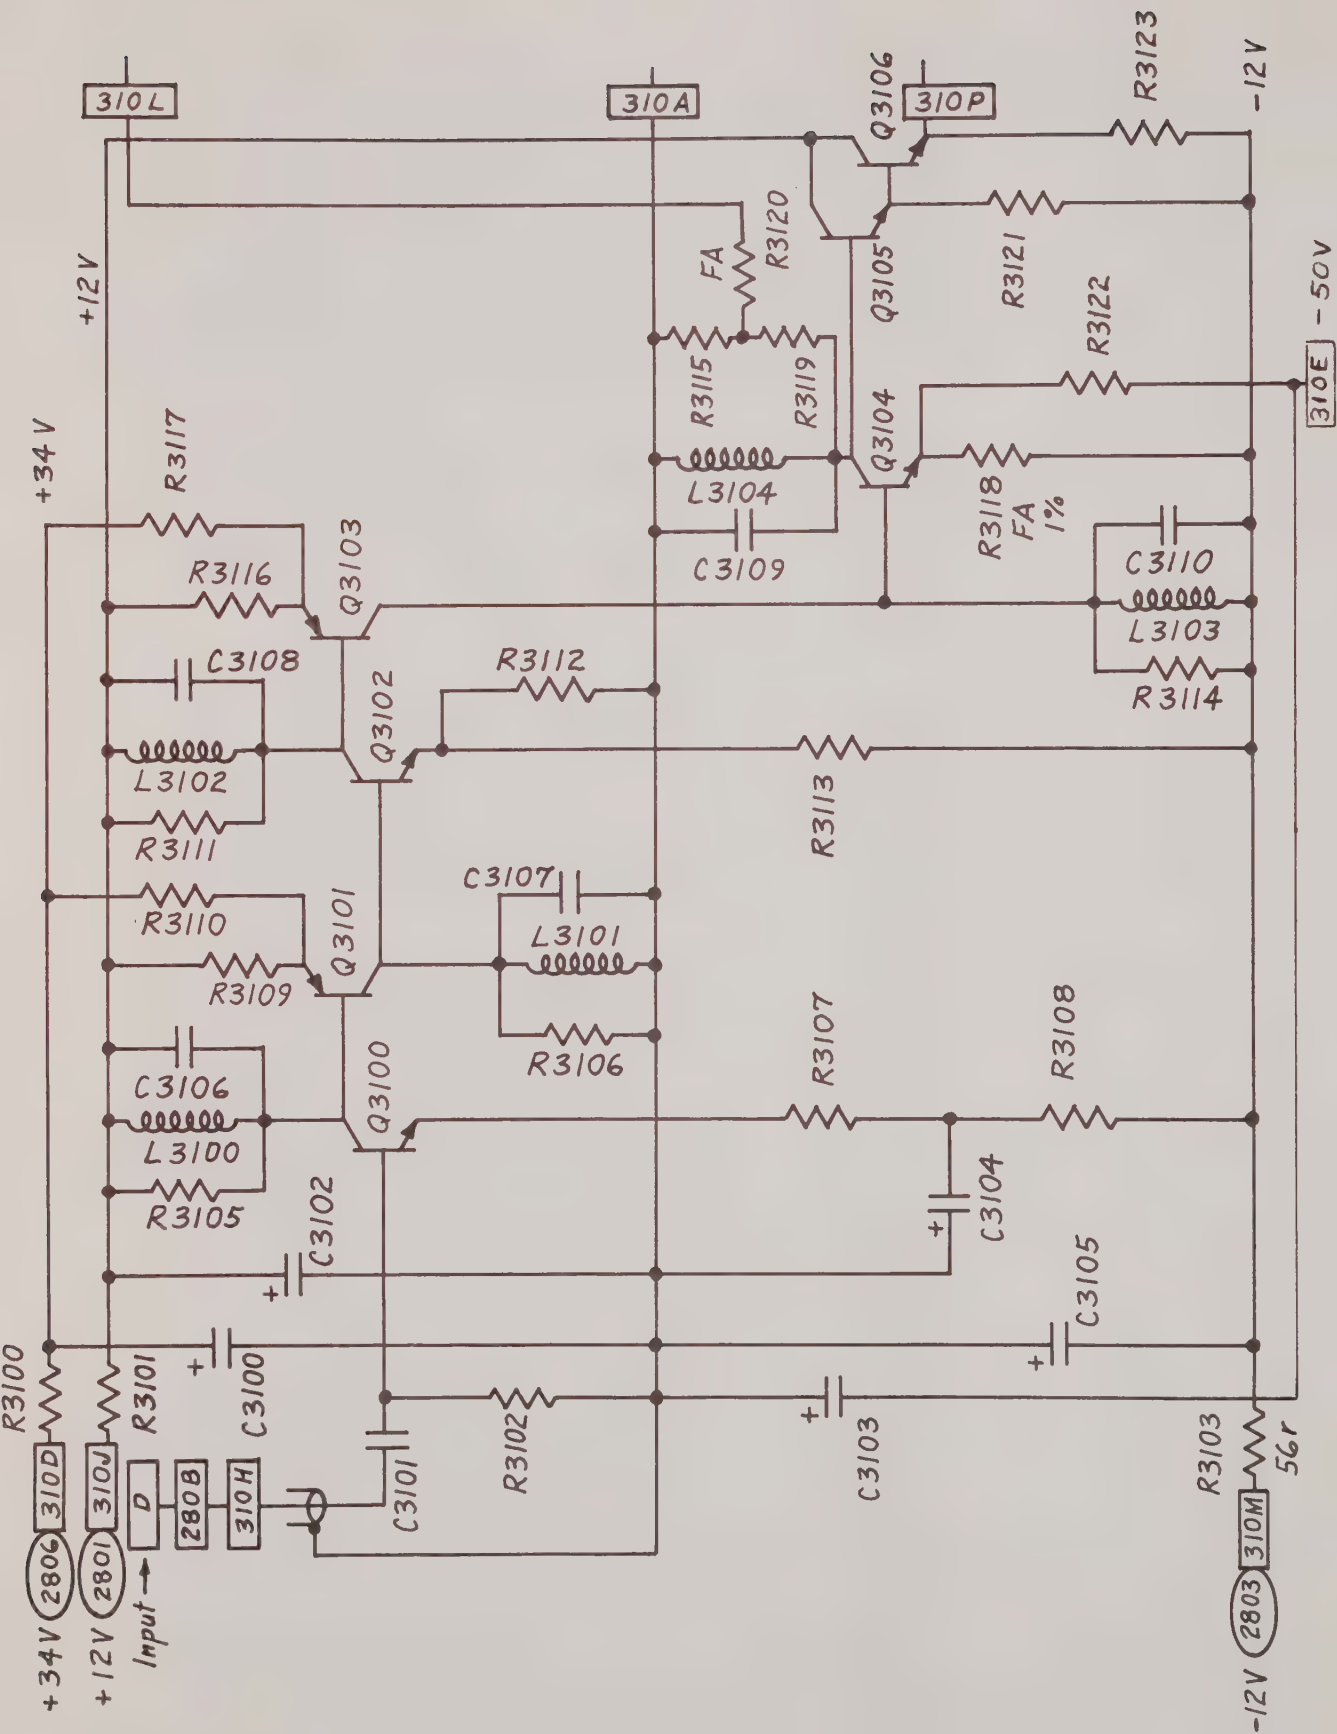


Figure 4-4. Band Pass Filter, Schematic

4-37. The third limiter has a gain of approximately 35 for low level inputs and is continually in operation. With an input to the first limiter of approximately 0.5 millivolts the third limiter will start limiting. However, when the input of the first limiter is reduced to about 1.5 millivolts the feedback around the first and second limiters starts the fifth pole of the band pass filter oscillating. This oscillation causes an input to the first limiter of above 1.5 mv and the third limiter will limit. Hence, the input can never be reduced to a low enough level to keep the third limiter from limiting.

4-38. Direct coupling is used between the emitter of Q3106 and the base of Q200 and Q201 (see Figure 4-5). Transistor Q200 is an emitter-follower that decouples the output of the band pass filter from the front panel input monitor jack. The monitor point shows only the input for this particular demodulator and not the complete multiplex. Transistor Q201 is an emitter-follower that drives the first limiter section and the first two levels of the meter switch.

4-39. In the first limiter primary limiting is done with the diodes CR200 and CR201. These are germanium diodes, the only germanium units used in this demodulator, and are used because of the low voltage drop and high conductance in the forward or conductive direction. The input signal is limited to approximately 0.6 volts peak-to-peak. Final limiting in the first limiter is done with the diode feedback amplifier consisting of the transistors Q202 and Q203 and the diodes CR202 and CR203. Section Q202 acts as a voltage amplifier and Q203 acts as an emitter-follower to provide low output impedance. R211 is the feedback resistor for the amplifier. When the output signal to the emitter of Q203 rises to a level which is approximately equal to the contact potential of diode CR203, the diode becomes conducting, greatly increasing the amount of negative feedback. The overall gain of this amplifier becomes much less than one. Also, when the emitter of Q202 goes down to a level which is approximately equal to the contact potential of diode CR202, the diode conducts, greatly increasing the amount of negative feedback, and the overall gain on this amplifier becomes much less than one. The normal gain of this amplifier is adjusted for a gain of ten when the input signal is low. This gain of ten is used in the input level meter circuit and is described in paragraph 4-45.

4-40. The output of the first limiter is passed to the second limiter by the capacitor C210 and resistor R217. The operation of this second limiter functions in the same way as the latter part of the first limiter. Thus, the second limiter provides additional square shaping action.

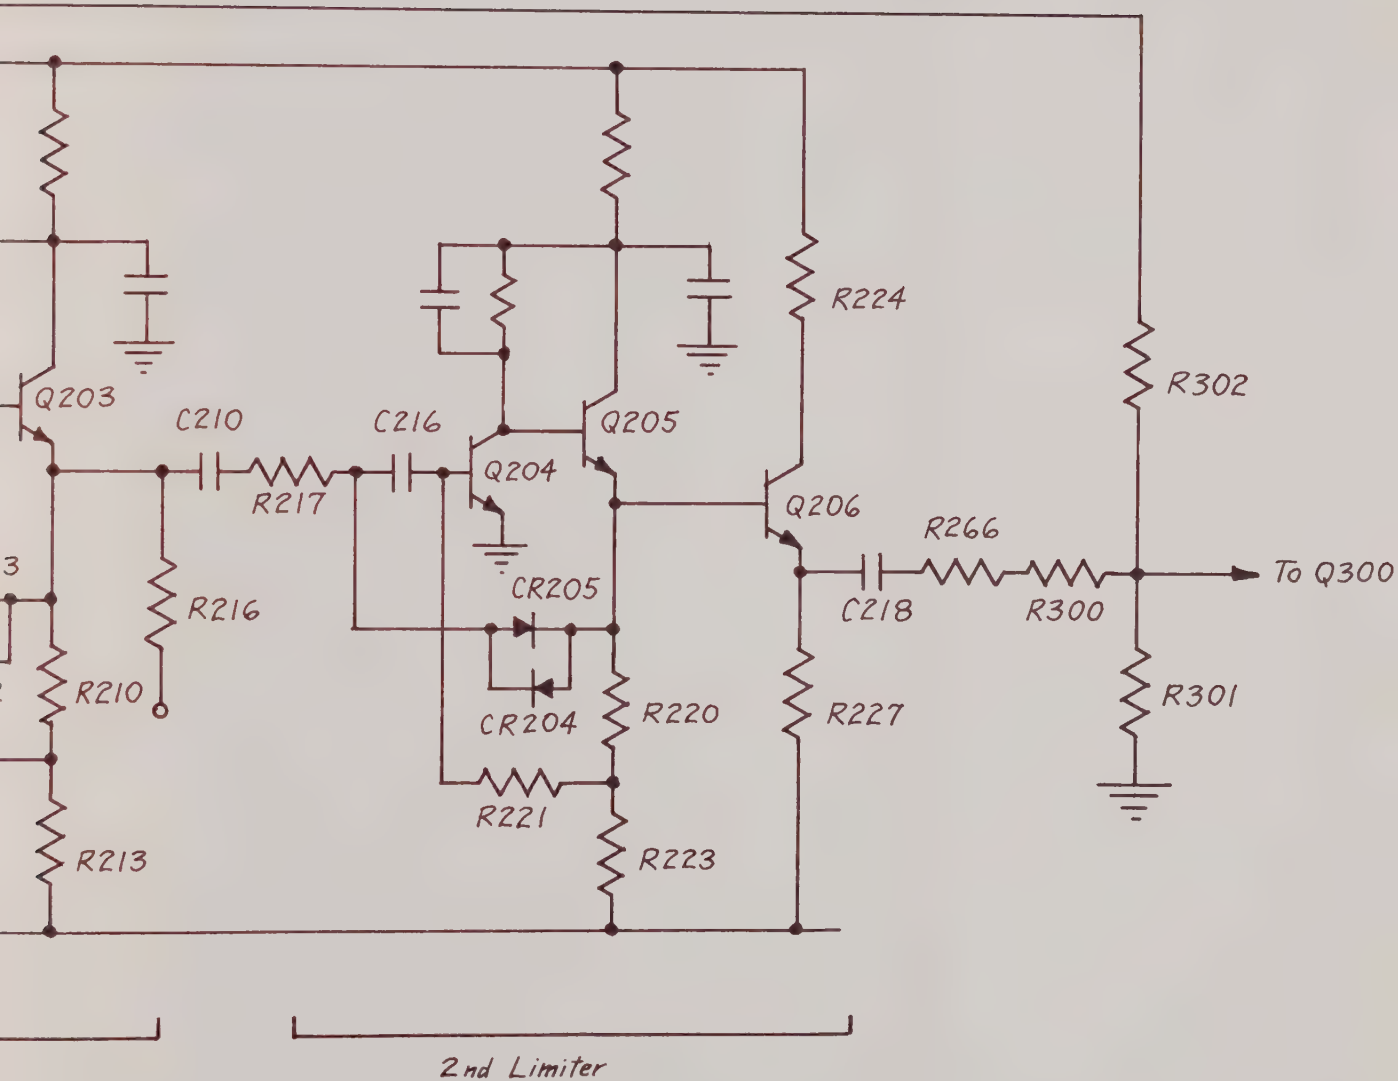


Figure 4-5. First and Second Limiter Stages

The amplitude of the output square wave is fixed by the contact potential of CR204 and CR205 in series just as in the first limiter. The output of the second limiter is connected to the base of an emitter-follower, transistor Q206. This output is fed through C218 and R226 both to the third limiter and back to the fifth pole of the band pass filter. When the subcarrier amplitude is low, the gain of the limiters is high. Then this loop will oscillate at the resonant frequency of the fifth tuned circuit, which is adjusted to subcarrier band center.

4-41. The limited output voltage of the first and second limiters are both approximately 1.2 volts peak-to-peak when they are limiting. When they are not limiting they have a gain of about ten and twenty, respectively.

4-42. **THIRD LIMITER.** The input of the third limiter is to the base of transistor Q300, an emitter-follower that isolates the third limiter from both the second limiter and the fifth pole of the band pass filter (see Figure 4-6). The signal is sent from the emitter of Q300 to the base of Q302 through C301, R305, and C302. Q302 is an amplifier. Q301 is a constant voltage source for a dynamic collector load of transistor Q302. Q303 is the emitter-follower output of the diode feedback third limiter.

4-43. The operation of the third limiter is the same as that of the first and second limiters except that it has a low level gain of about 35. R310 is the feedback resistor. There are four diodes used in the diode limiting section of this limiter. Thus, in order for the diode limiter to start operation, the peak AC voltage at the emitter of transistor Q303 must exceed that at the base of Q302 by the sum of the two diode junction voltages. Also, diodes CR302 and CR303 are not connected directly to the emitter of Q303 but to a voltage divider so that the ratio of resistors R312 and R313 plus R314 determines the voltage at which this circuit will limit. With the above feedback system the output voltage of the limiter will be approximately 4 volts peak-to-peak. The third limiter is at full limiting at all times during normal operation.

4-44. **INPUT SIGNAL LEVEL METER.** The input meter is provided with switchable full scale ranges of 20 millivolts, 200 millivolts and 2 volts rms. A fourth switch position on the input meter range switch is an average phase error indicator connected to the phase-locked loop. This indicator is a necessary adjunct to the use of extremely narrow loop filters to achieve maximum signal to noise threshold improvement. (See Figure 4-7.)

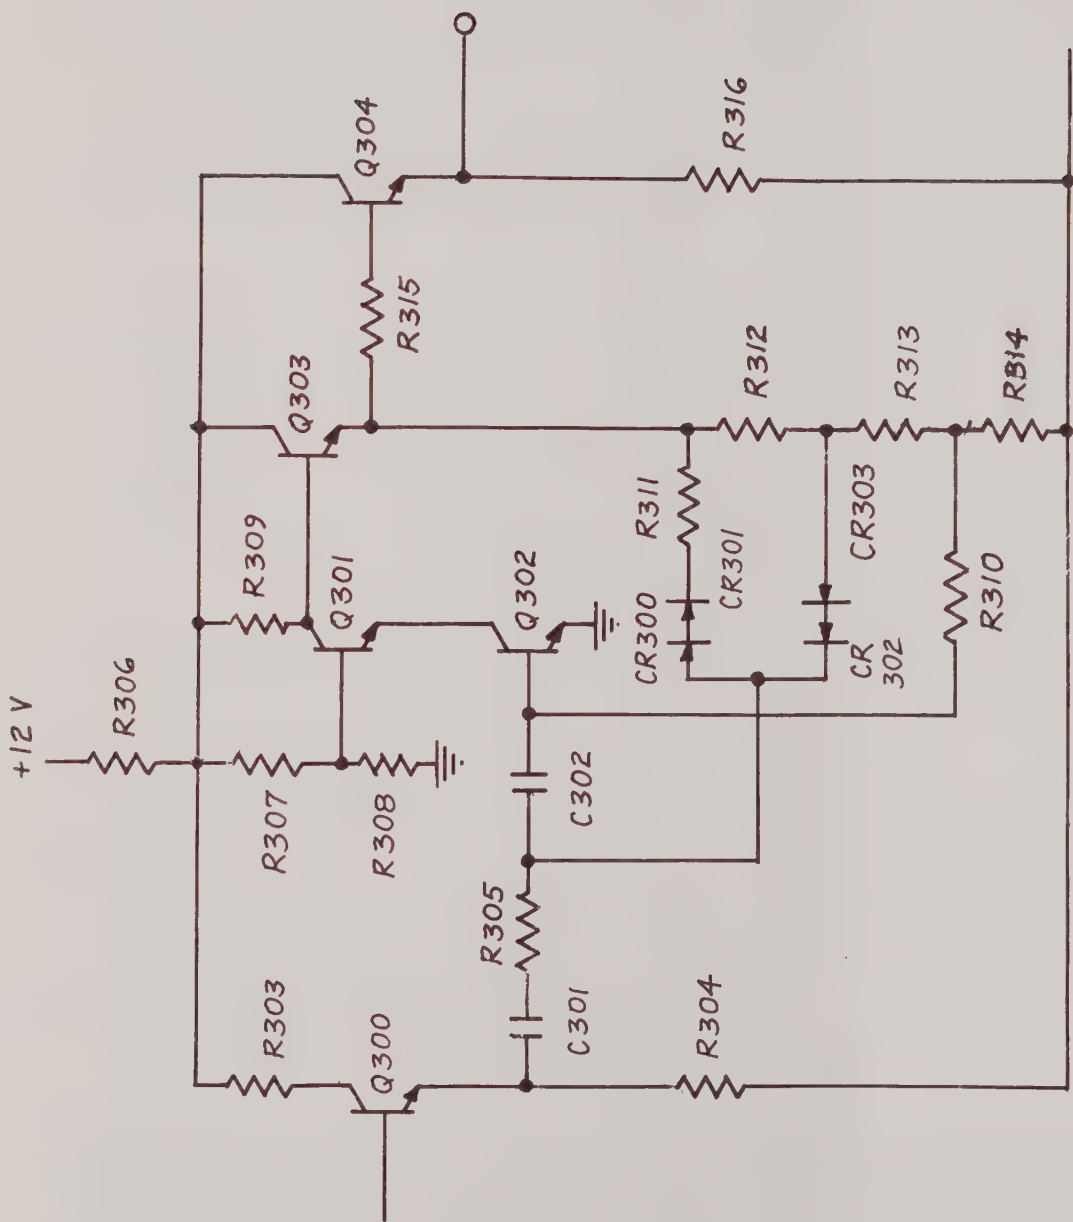


Figure 4-6. Third Limiter, Schematic

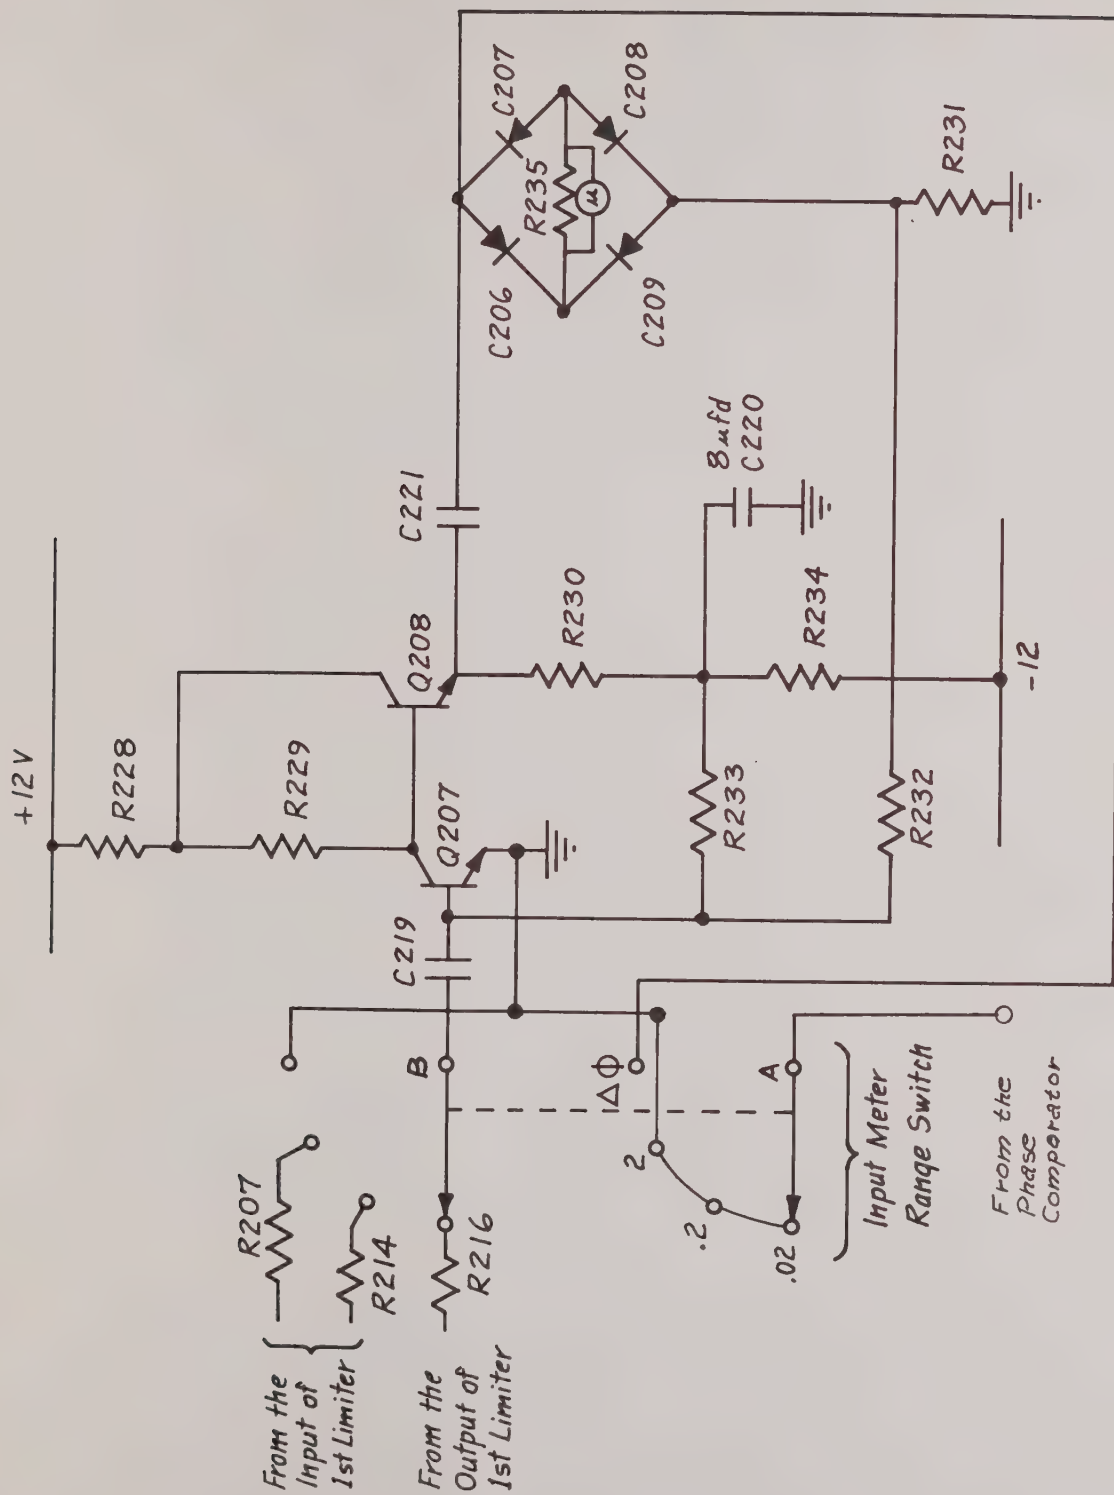


Figure 4-7. Input Signal Level Meter, Schematic

4-45. The input signal level meter circuitry is made up of a two transistor feedback amplifier with a bridge rectifier in the feedback loop. The input signal is fed through C219 to the base of Q207, the amplifier transistor. The collector of Q207 feeds the signal to Q208, an emitter-follower. The DC feedback path of this amplifier is through R233 to the base of Q207 and stabilizes the DC operation. It should be noted that there is no AC feedback through R233 because of the filtering effect of the capacitor C220.

4-46. The signal on the emitter of Q208 is fed through C221 to the bridge rectifier made up of the diodes CR206, CR207, CR208, and CR209 and fed back through R232 to the input base. The diodes in the rectifier are inside the AC loop. Thus, the diode characteristics do not effect the meter reading. The meter reads current and the resistor R235 is used in adjusting the current flow to calibrate the meter. R231 is an amplifier AC gain adjustment.

4-47. When the input meter range switch is in the 2 volt position, the emitter-follower driving the first limiter is connected to the input of the input signal level meter circuit through resistor R207. The gain of the input signal level meter circuit with R207 as its input resistor is designed for a full scale meter reading with a 2 volt rms input to the input of the demodulator.

4-48. When the input meter range switch is in the 200 millivolt position, R214 is the input resistor for the input signal level meter circuit. From the general schematic it can be seen that the resistor R214 has as its value about one tenth of that of resistor R207. It should now be apparent that a change in this amount of resistance will make a change in gain of ten in the input meter circuit gain because, this being a feedback amplifier, the gain changes with the ratio of the feedback resistor to that of the input resistor. The feedback resistor always being held constant in this case. Thus, if we decrease the value of the input resistor by ten the gain of the amplifier will be increased by ten and the sensitivity of the input circuit will increase by ten.

4-49. When the input meter range switch is in the 20 millivolt position R216 is the input resistor for the input signal level meter circuit. This resistor is at the output of the first limiter shown in Figure 4-5. At this low level into the demodulator, the first limiter circuit is not in its limiting mode but instead is in an amplifier mode controlled by the feedback resistor R211 and R212 and R205 and R206, and has a gain of ten as described in the section on the first limiter. This increases the input amplitude of the demodulator by a gain of ten if the input resistor value of the meter amplifier is kept the same as the 200 millivolt position.

4-50. When the input meter range switch is in the phase error position, the input for the input signal level meter amplifier is grounded and produces no AC input to the meter. However, the meter bridge is now connected to the phase comparator and measures the average current out of the demodulator.

4-51. **PHASE-LOCKED LOOP DEMODULATOR.** The square wave subcarrier is coupled from the third limiter to Q403 via C401. Q403 is a split-load phase inverter from which two push-pull signals are obtained and coupled directly to two of the four transistors in the phase comparator, Q412 and Q413 (see Figure 4-8). When the loop is locked, the VCO generates a push-pull square wave at the subcarrier frequency. The two signals are coupled directly to Q408 and Q409 of the phase comparator circuit.

4-52. The phase comparator is made up of transistors Q408, Q409, Q412 and Q413 and is a current switching circuit. Q414 and Q407 function as current sources. Current for the Q414 current source passes through either Q412 or Q413 depending on the phase splitter waveform. Only one of the two conduct at one time.

4-53. Assume that Q412 is conducting. Current must come either through Q408 or through Q410 and CR402. Notice Q408 and Q409 are switched by the VCO against the decoupled -12 V supply through the emitter of Q410 and Q411, respectively.

4-54. If Q408 is off while Q412 is conducting current must come through Q410 and CR402. Q413 is off during this period and CR403 prevents zener breakdown current from flowing through Q411. Even though Q409's base is more positive than the +12 volt supply, its emitter is effectively open and current from the Q407 source must flow into the loop filter (i.e. C3400, C3401 and R3405).

4-55. Now if Q408 turns on while Q412 is conducting, Q410 will turn off and the current from current source Q407 will flow through Q408 and Q412 and into source Q414. Current in source Q414 is twice the current from source Q407 so an equal amount of current must flow out of the loop filter.

4-56. The above action has occurred during one half the subcarrier cycle that Q412 is on and Q413 is off. A similar action takes place when Q413 is on and Q412 is off. If R420 is adjusted so that the current from source Q414 is exactly twice the current from source Q407, and if the VCO is exactly 90° out of phase with the incoming signal from the phase splitter, then equal and opposite currents will flow into and out of the loop filter every other quarter of a subcarrier cycle resulting in a symmetrical triangular voltage waveform across the loop filter with no change in average voltage.

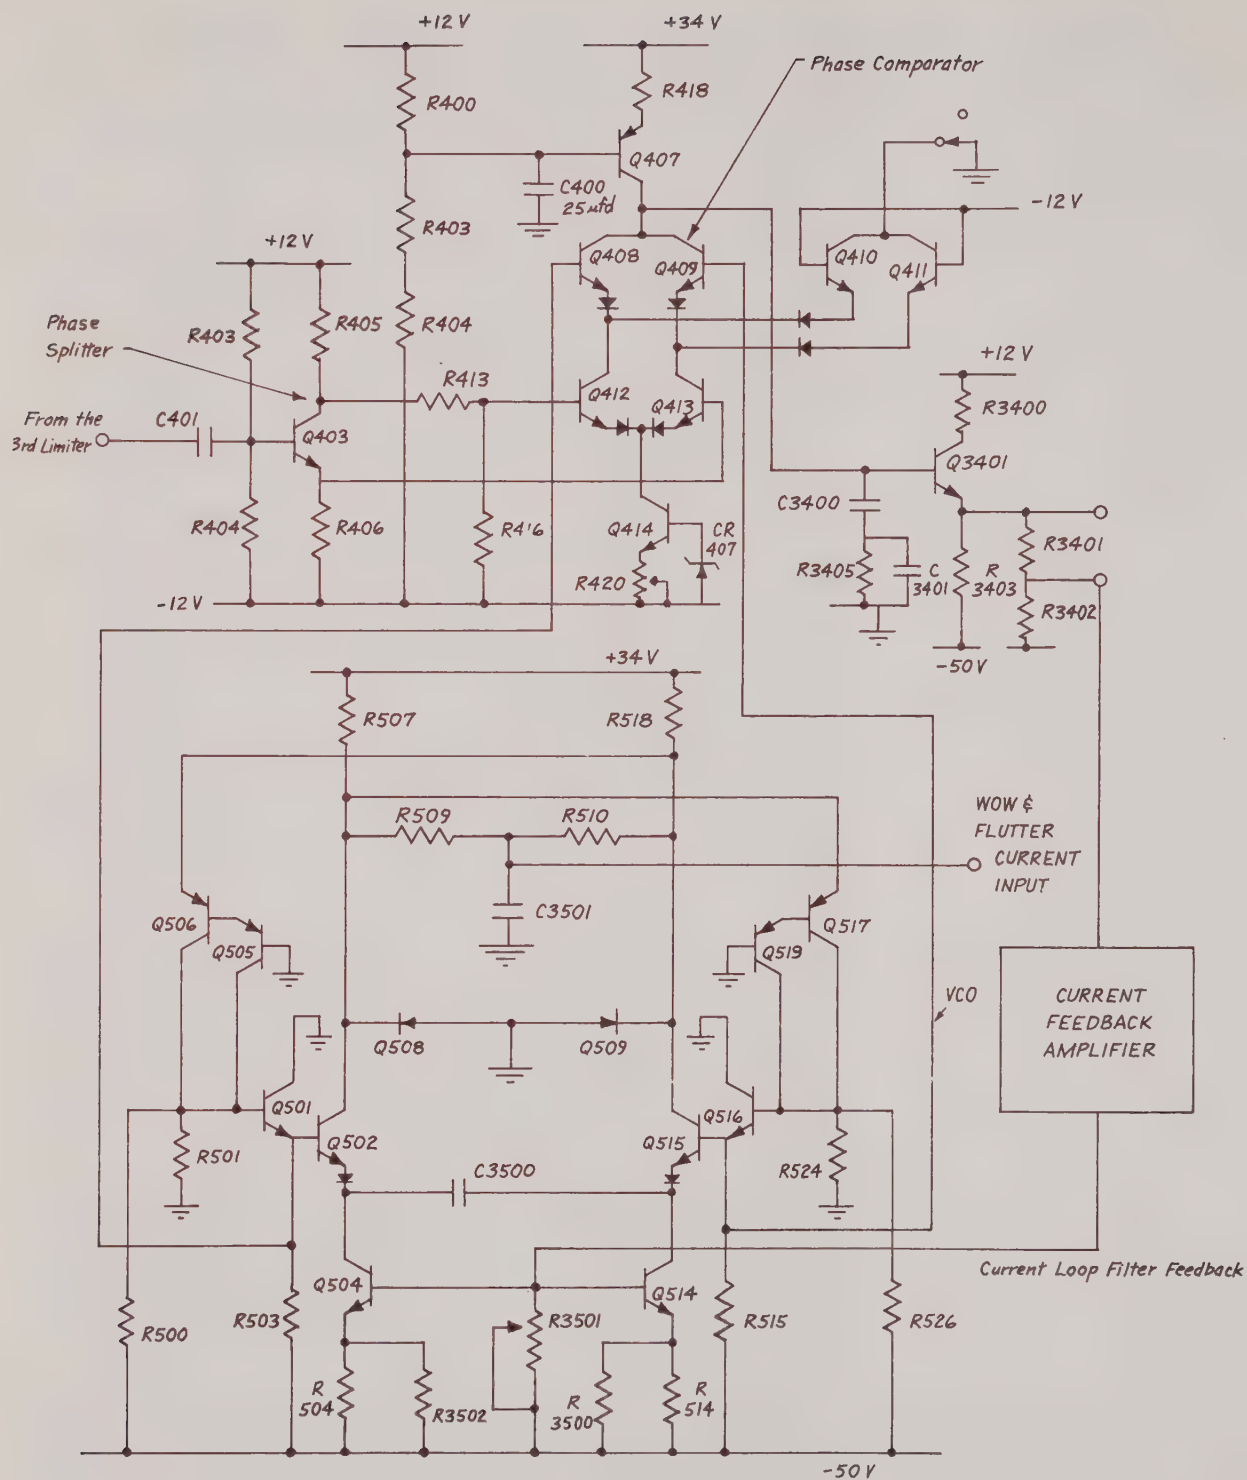


Figure 4-8. Phase Locked Loop Demodulator, Schematic

4-57. If the input frequency starts to change the phase between the inputs and VCO signals will move from its 90° relationship altering the duty cycle of the current flowing into and out of the loop filter. This will cause an average current to flow during each half of a subcarrier cycle giving an average voltage change across the loop filter. The loop filter is connected to the frequency control buss of the VCO. The net voltage change on the input to the VCO will change its frequency. As the VCO frequency starts to change the phase between the input and VCO frequencies will be corrected back toward the 90° static position. When the VCO frequency is the same as the input frequency and the phase adjusts to 90° the voltage of the frequency control buss will stop changing and the loop will be in static equilibrium. To remain in lock the VCO frequency must be the same as the input frequency and may not vary in phase by more than $90^\circ \pm 90^\circ$.

4-58. Relationships between the various waveforms are shown in Figure 4-9. The first set shows the subcarrier lagging the VCO by 90° and the second shows the subcarrier lagging by more than 90° . Note that current can flow through Q408 only during the positive half cycle of its base voltage and only during the interval when Q412 is on. Similarly, current can flow through Q409 only during the positive half cycle of its base voltage and only during the interval when Q413 is on. Hence, Q408 and Q409 alternately allow square wave pulses of current at twice subcarrier frequency to flow to and from the loop filter.

4-59. When the subcarrier lags the VCO by exactly 90° , these current pulses are symmetrical, e.g., they have equal on and off durations. Net voltage produced by the current flowing in the loop filter is zero.

4-60. When the subcarrier lags the VCO by more than 90° , these current pulses become asymmetrical, e.g., they have shorter on time and longer off time. Net positive voltage is produced in the loop filter.

4-61. Similarly, when the subcarrier lags the VCO by less than 90° , the current pulses have longer on time and shorter off time, and a net negative voltage is produced in the loop filter. The voltage produced across the loop filter is amplified in power level by Q3400 and Q3401, a Darlington connected emitter-follower stage, fed back to control the VCO frequency and coupled to the output amplifier. Components of the loop filter and Darlington amplifier are located in the tuning unit.

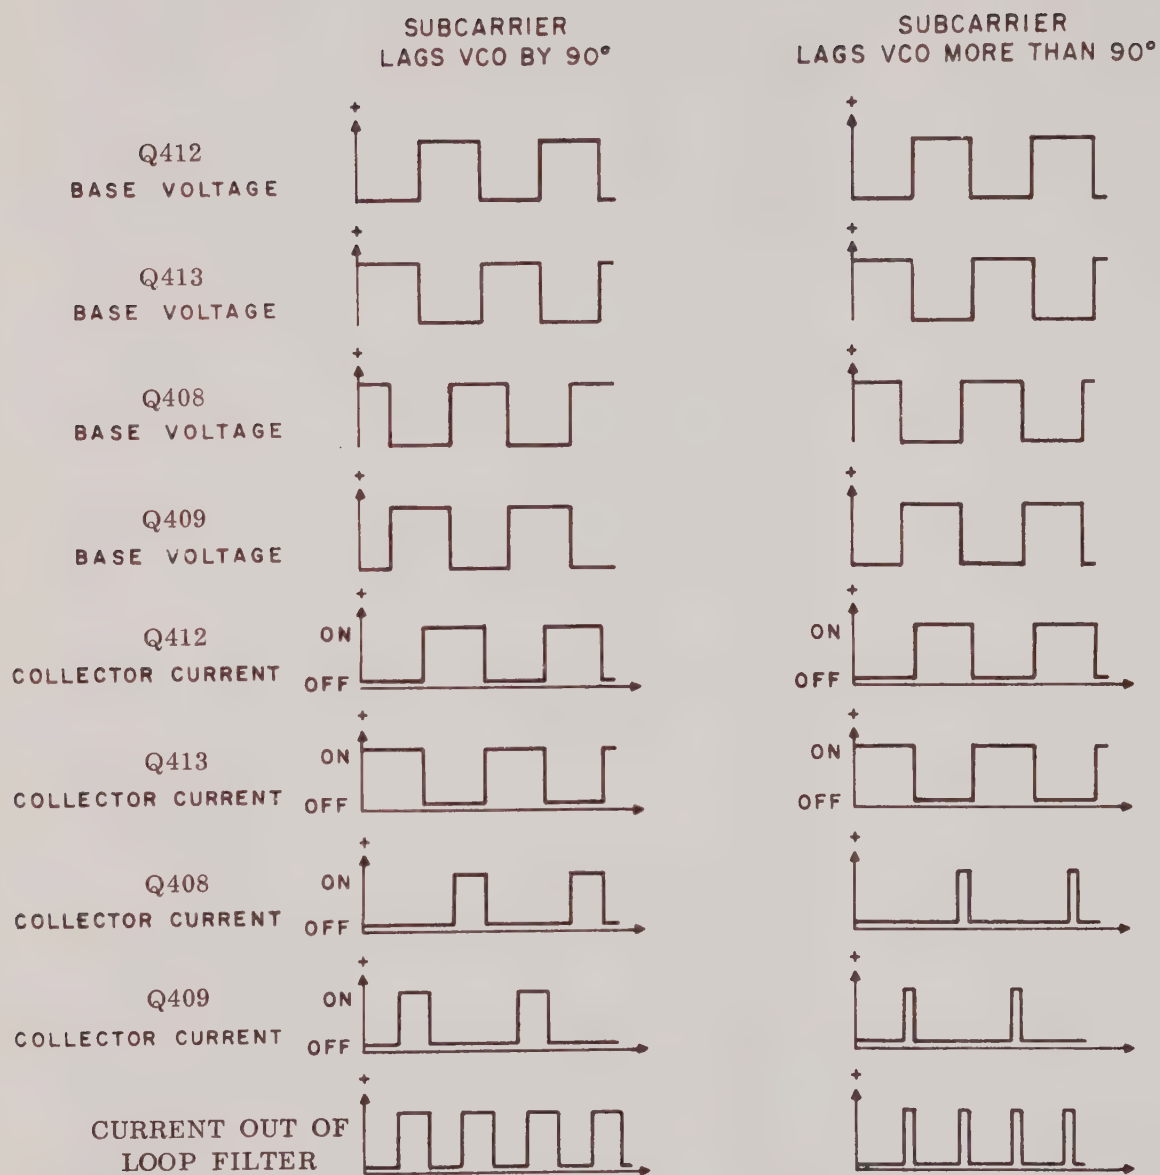


Figure 4-9. Waveforms in the Phase Locked Loop Demodulator

4-62. In the VCO, Q515 and Q502 operate as an astable multivibrator. Transistor Q503 and Q504 and transistors Q513 and Q514, connected in a Darlington arrangement (not shown as such on the simplified schematic), function as a single transistor to generate a steady current. Current generated by composite Q514 flows through Q515 when it is on, or otherwise through C3500 when Q515 is off and Q502 is on. The VCO output voltage amplitude at the collectors of Q515 and Q502 is clamped by diodes Q508, Q509 and composite transistors Q506 and Q519 to an amplitude which is dependent upon the diode bias voltages. It should be noted here that the diodes in the simplified Figure 4-8 are really transistors in true demodulator. The diode bias voltage for Q508 and Q509 is ground. Therefore, collectors of transistors Q502 and Q515, cannot go more negative than minus 0.7 volts.

4-63. Next consider the positive voltage clamping on the collector of Q502. Any time the voltage on the emitter of Q519 gets more positive than 1.4 volts above ground this transistor will start to conduct clamping the collector waveform. When Q519 conducts the voltage on the collector of Q502 will clamp at plus 1.4 volts minus the voltage drop across the diode Q507 which is 0.7 volts peak; thus, the collector is clamped at both plus and minus 0.7 volts peak.

4-64. Note that all diodes that have a Q number are really transistors in a diode configuration. This provides better temperature compensation on all junctions by using the same junction construction.

4-65. **PHASE-LOCKED LOOP DEMODULATOR OPERATION.** At the instant that Q502 begins to conduct, its collector voltage starts to swing negatively toward the diode bias produced by Q508. This collector voltage change in the negative direction turns transistor Q519 off. With no current flow through Q519 the voltage on the divider R524 and R526 and the base of Q516 is such that the transistor will be turned off. This will in turn, turn off Q515. With Q515 turned off its collector will be positive enough so that Q506 will be turned on and conducting. The conduction of Q506 will make the bias on the divider R500 and R501 and on the base of Q501 positive with respect to its emitter and thus turned on. The emitter of Q501 will then turn Q502 on. It should be noted that full conduction is not saturation. The abrupt change in emitter voltage at Q502 is coupled to the emitter of Q515 by the capacitor C3500. The emitter of Q515 is driven positive an amount equal to the voltage change on R500, R501 divider (about 10 volts). The base of Q515 is driven negative an amount equal to the voltage change on divider R524, R526 (about 10 volts). Q515 is then turned off by a 20 volt base to emitter voltage.

4-66. The steady current from Q504 flows through Q502 while Q502 is on. Because Q515 is off the steady current from Q514 flows through C3500 and Q502. At Q502 the emitter voltage is fixed at the base potential; but at Q515 the emitter voltage swings negative in a linear manner as C3500 charges, while the base voltage is held fixed by the voltage divider R524, R526. When the emitter voltage of Q515 gets sufficiently negative for Q515 to conduct, switching occurs and Q515 turns on while Q502 turns off. The point of conduction and switching occur when the base and emitter voltages of Q515 (the non-conducting transistor) become equal. During switching the rising collector voltage of Q502 turns on Q519. The conduction of Q519 into divider R524, R526 pulls the base voltage of Q516 positive, which in turn pulls the base of Q515 positive. The emitter base junction is forward biased at this time and it moves positive (approximately 10 volts).

4-67. Since the voltage across C3500 cannot change instantly, this abrupt transition drives the emitter of Q502 positively an equal amount. During the interval when Q502 is off and Q515 is on, current flow through C3500 is reversed and the emitter voltage of Q502 goes negative until it equals its base voltage and switching once again occurs. Waveforms on one transistor are shown in Figure 4-10. At the other transistor voltages are 180° out of phase. The time at which switching occurs depends upon (1) the base voltage of whichever transistor is off and (2) the rate at which C3500 charges. The base voltage of the transistor that is off is determined by the voltage divider R524 and R526 or R500 and R501. The rate at which C3500 charges is determined by the value of this capacitor and the current source rate of flow. The current source rate of flow is dependent upon the current source base voltages, Q504 and Q514, which determines the current flowing into the collectors of the transistors Q502 and Q515. The current into the collector of Q502 or Q515 is determined by both the current sources.

4-68. When either Q502 or Q515 is off their collector resistor becomes the emitter resistor of current source Q519 or Q506, respectively. These current sources determine the voltage change on dividers R524, R526 and R500, R501, respectively. It was shown above and in Figure 4-10 that these voltage changes determine the total voltage through which C3500 (the timing capacitor) must charge.

4-69. The frequency of this voltage controlled oscillator is, therefore, determined by the timing capacitor value (C3500), the current source current which flows through the timing

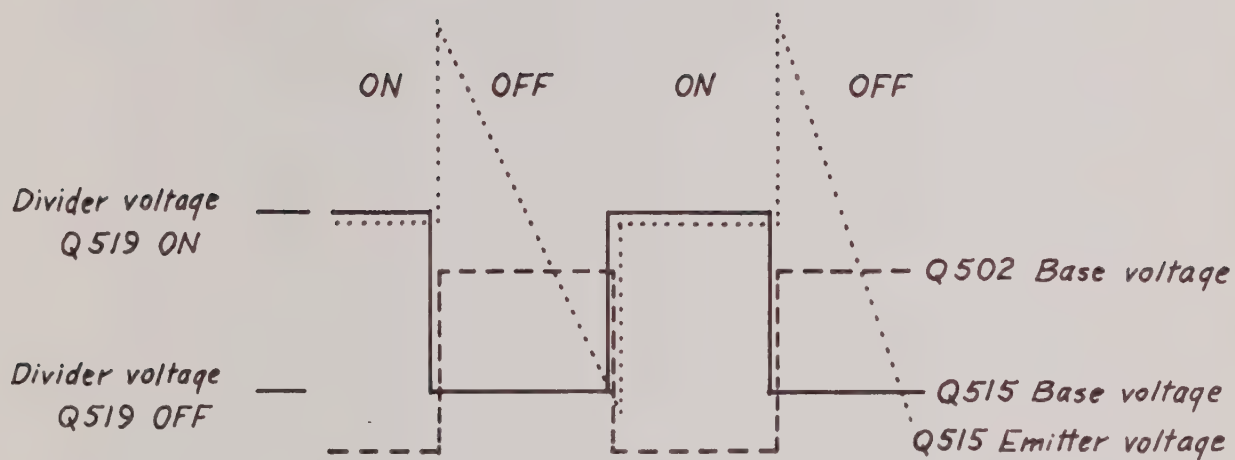


Figure 4-10. VCO Waveforms

capacitor and the voltage through which the timing capacitor must charge before the VCO switches (i.e. twice the divider voltage change). The frequency may be changed by changing any of these three. Channel center frequency is determined by the value of C3500. Variation of the frequency within the channel is accomplished by varying the current source current that flows through the timing capacitor. Q523, Q524 and Q525 are a precision current source that converts the frequency control buss voltage into a precise current. This current develops a precision voltage across R512, R3501 and Q511 and Q512. This in turn develops precision currents in current sources Q504, R504 and Q514, R514. Variation of the frequency control buss voltage then varies the charging current through C3500. R3501 is the zero control and allows parallel changes in the charging current.

4-70. Q520, Q521 and Q522 make up another current source. The current generated here is fed through R509 and R510 to the VCO collectors. When a VCO transistor (Q502 or Q515) is on this current only adds to the current from the collector resistor and diode to ground (R507, R518 and Q508, Q509, respectively) through each transistor to its current sources. Since the current sources (Q504 and Q514) determine the current, the diode and resistor together always deliver the proper current. When a VCO transistor is off, however, the accompanying diode is off and the current through R509 and R510 adds to the current through Q519 and Q506, respectively, and modifies the voltage change in the appropriate divider. This modifies the voltage through which C3500 must charge and, therefore, changes the frequency of the VCO.

4-71. The input to this current source (pin J) is connected to the tape speed compensation buss and this source is used to tape speed compensate the demodulator. R523 and C3502, when driven from a low impedance source, form an all pass phase shifter and C3501 acts in conjunction with R509 and R510 as a current low pass filter. These circuits delay the tape speed compensation signal an amount equal to the information delay in the band pass filter. C3501 and C3502 must change as the duration of the band pass filter changes and so they are located in the tuning units, as is C3500.

4-72. LOSS OF LOCK INDICATOR. The loss of lock circuit is shown in Figure 4-11. There are two square wave input signals to the loss of lock circuit, one from the VCO and one from the limiter. The limiter square wave is fed to the base of Q402 which is biased off. The amount of off bias is determined by this square wave.

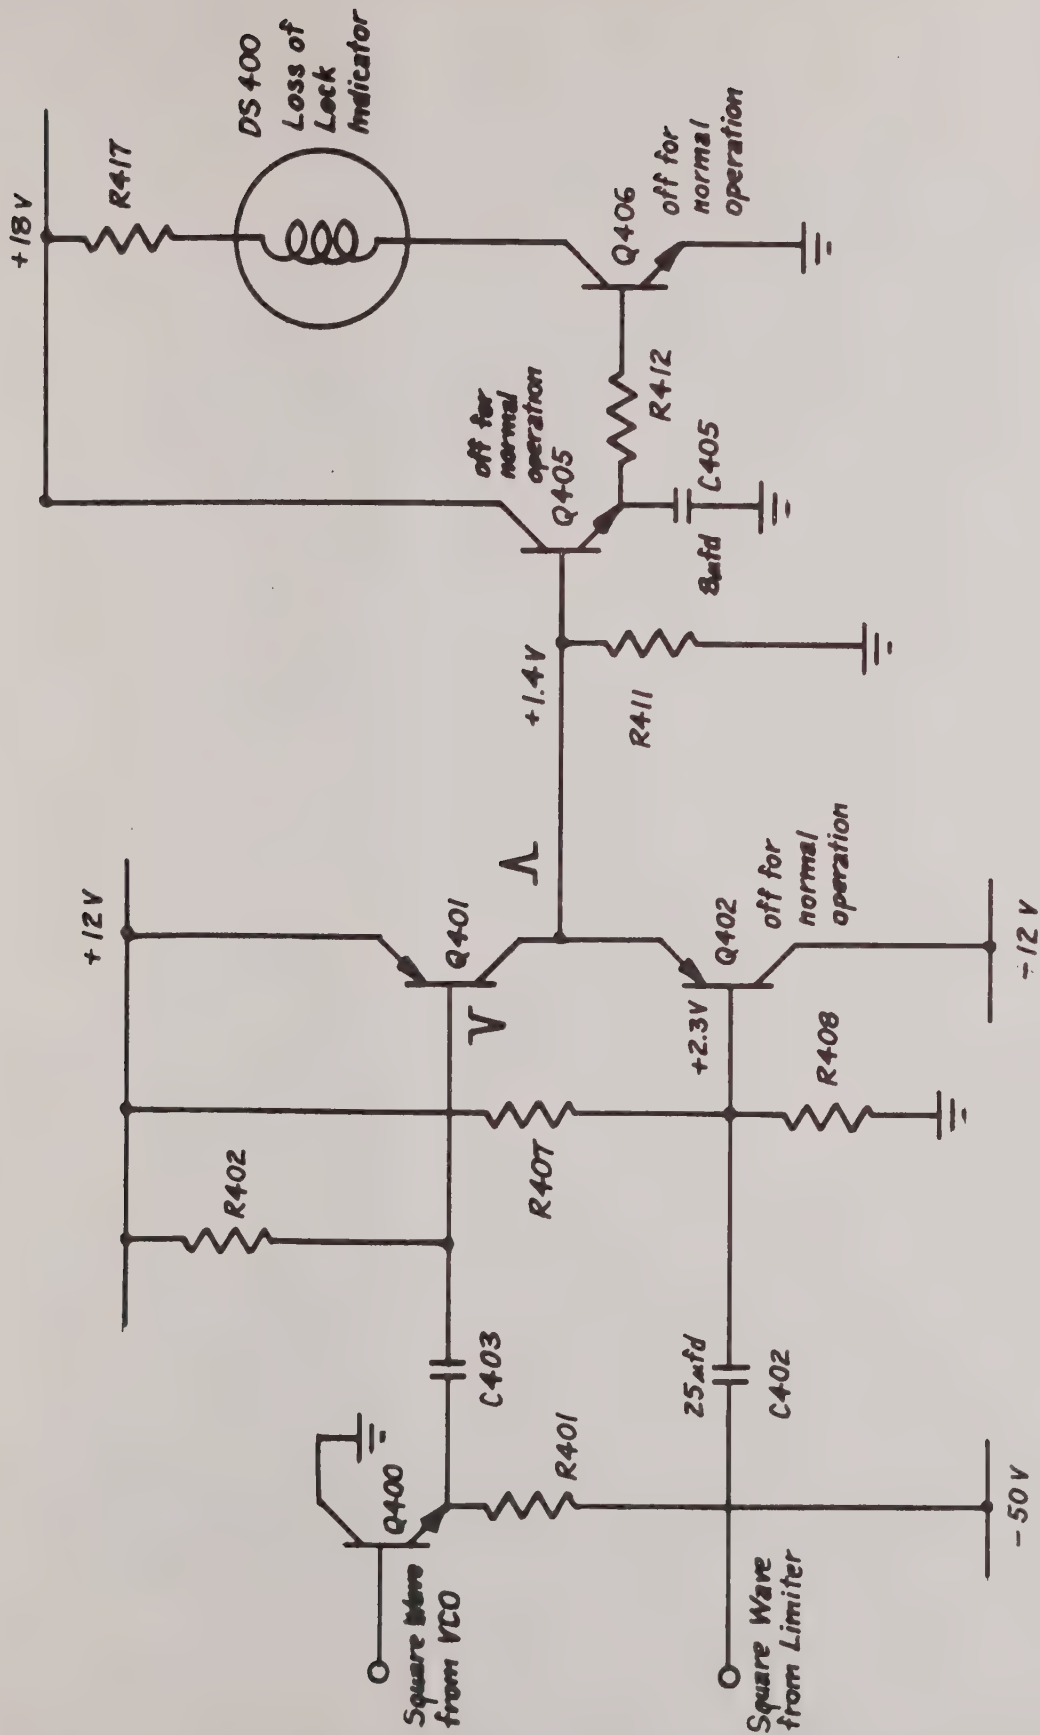


Figure 4-11. Loss of Lock Indicator, Schematic

4-73. The VCO square wave is connected to the base of Q400 (see Figure 4-11). The Q400 emitter is coupled to the base of Q401 with a small capacitor C403 which integrates the square wave and presents a short pulse to the base of pulse amplifier Q401. The signals on Q401, Q402 and Q405 are shown in Figure 4-12.


4-74. If the demodulator loses lock the pulses from Q401 will sometimes be shifted in phase 180° as shown in Figure 4-12E. When this happens the positive pulse on the base of Q405 is large enough to turn on Q406. C405 in the emitter of Q405 makes this stage a peak detector and holds Q406 on even after the pulse into Q405 is over. C405 discharges through R412 into Q406 with a relatively long time constant. Q406 operates Lock Loss light DS400.

4-75. **LOW PASS OUTPUT FILTER.** The low pass output filter is shown in Figure 4-13. The low pass output filter is made up of the following sections:

- a. Low pass filter frequency determining network (plug-in).
- b. Low frequency chopper stabilized DC amplifier.
- c. Chopper drive, free running multivibrator.
- d. High frequency DC amplifier.
- e. Current limiter.
- f. Voltage limiter.

All components with numbers in the 4600 series are the low pass tuning unit plug-in. The low pass filter cutoff frequency may be selected by changing the low pass plug-in to the desired information bandwidth. The output of the loop filter, isolated by the transistor Q3400 and Q3401, is connected to the input of the low pass filter (see Figure 4-13).

4-76. Signals in the frequency range of 0 to about 60 cycles are amplified by the chopper amplifier which consists of Q1619, Q1618, Q1617, Q1616, and Q1615. The chopper drive unit operates the transistor choppers Q1619 and Q1615. Q1619 is switched on and off at a 2 kHz rate producing a 2 kHz square wave that is amplitude and polarity dependent on the low pass filter input voltage level. This amplitude dependent square wave is amplified by transistors Q1618, Q1617, and Q1616. Q1615 chops the output of the amplifier to ground in alternate synchronism with Q1619. Thus, with a signal to the low frequency chopper stabilized amplifier as shown below:

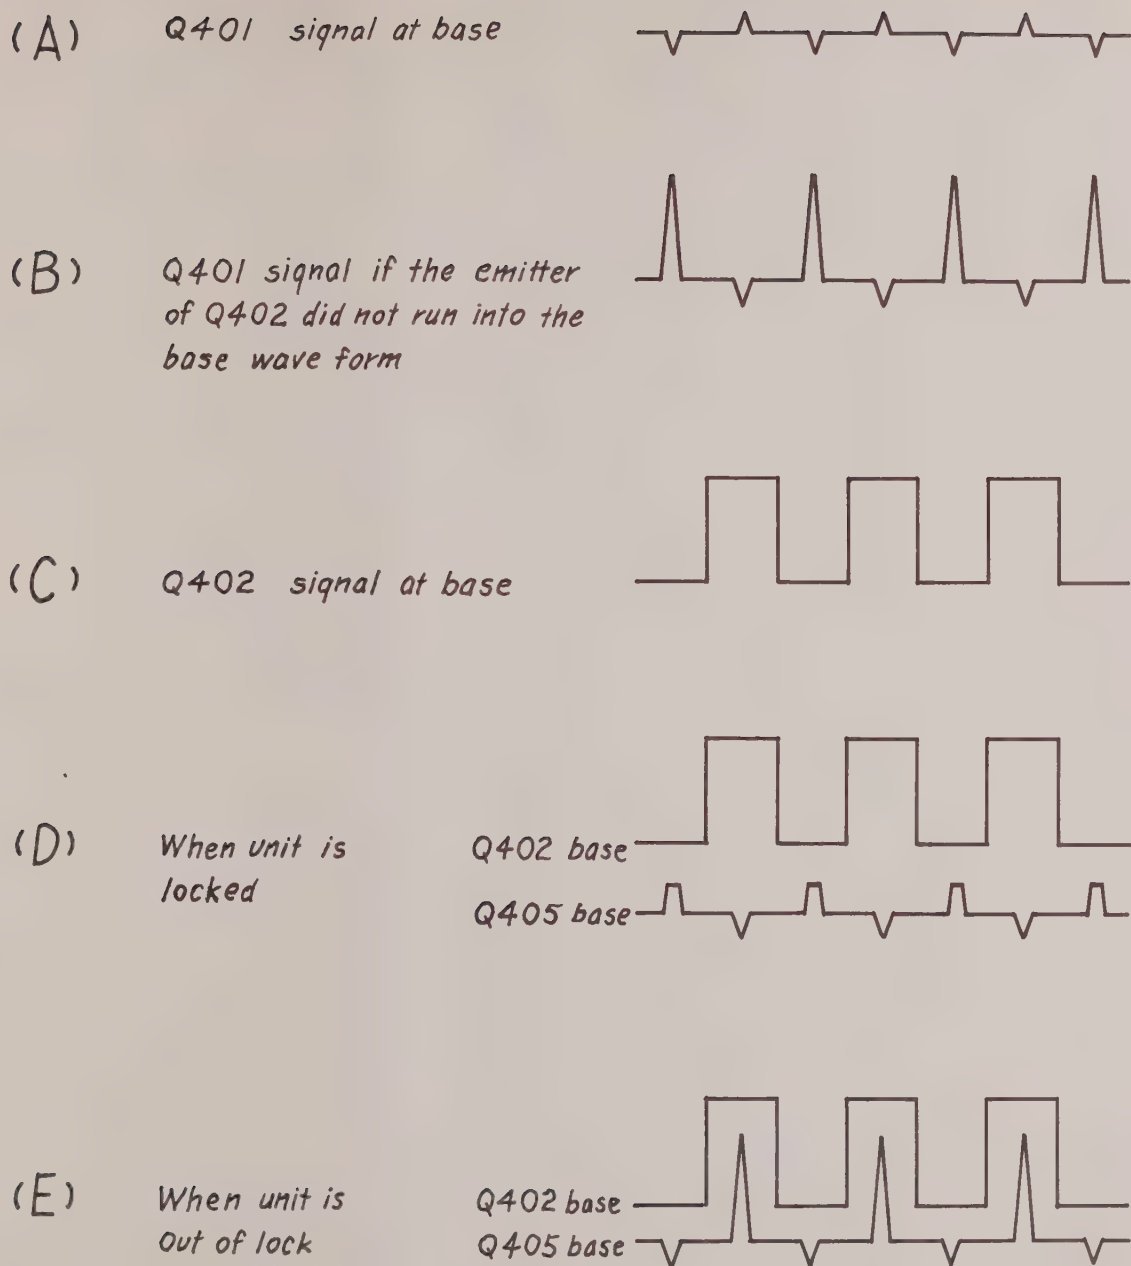


When proper phasing of the VCO and Limiter signal is selected and the unit is locked, the signal at the base of Q405 will be as indicated at (D). Q405 will not conduct until the base voltage becomes more positive than permitted by the emitter of Q402 (E).



Figure 4-13. Broad Band DC Amplifier, Schematic

for plus input




for minus input



The signal on the emitter of the transistor chopper Q1619 would look as shown:

for plus input



for minus input



The signal of the emitter of Q1615 if it were not operational:

for plus input



for minus input



The signal of the emitter of Q1615 when the chopper is operational:

for plus input



for minus input



As shown, the input signal to the low frequency chopper amplifier does not lose its polarity identify and is proportional to the input voltage. The chopper drive unit, utilizing transistors Q1700 and Q1701, is a free running multivibrator which generates the 2 kHz square waves to drive the chopper transistors Q1615 and Q1619.

4-77. The output signal from the narrow band chopper amplifier is connected to the broad-band DC amplifier. The input summing point of the broad DC amplifier is the base of Q1614. It should also be noted that the output of the frequency determining plug-in unit is connected both to the narrow band chopper amplifier and the broad band DC amplifier. Thus signals above 60 Hz are capacitively coupled directly from the output of the frequency determining plug-in unit through R1635 and C1620, to Q1614. It should be understood that the low frequency narrow band chopper amplifier is a low frequency booster whose gain adds to the low frequency gain of the DC amplifier.

4-78. The broad band DC amplifier provides the gain for an output of ± 10 volts peak-to-peak maximum for full deviation with an output impedance of less than 0.1 ohm. Q1614 is an emitter-follower providing isolation for the summing point of the high and low frequency signals. Q1613 and Q1611 are current amplifiers which in conjunction with Q1609, a current to voltage conversion amplifier, provide the gain of the DC amplifier. Q1612 is a constant current source for the collector of Q1611 and, since the base of Q1609 is pegged by the emitter voltage, all the current change from Q1611 is fed to the base of Q1609. Q1608 is a current source for the collector of Q1609 providing a check on the current demands of the voltage amplifier Q1609.

4-79. The bias string, consisting of R1611, CR1603, CR1604, CR1605, CR1606, CR1607 and R1616 provides the operating bias for Q1606, Q1607, Q1604, Q1605 and also sets the collectors of Q1608 and Q1609 to zero volts under zero output conditions. The diodes, CR1603, CR1604, CR1605, CR1606 and CR1607, in addition to providing bias also provide a very low impedance coupling circuit from the voltage amplifier, Q1609, to the bases of the driver emitter-followers Q1606 and Q1607. In addition, CR1603, CR1604 and CR1605 provide temperature compensation for the diode junctions of Q1605, Q1607 and CR1602 while CR1606 and CR1607 match Q1604 and Q1606.

4-80. As mentioned, Q1606 and Q1607 are driver emitter-followers for the output power emitter-followers Q1604 and Q1605, respectively. The local feedback loop, consisting of R1601 and C1602, in conjunction with the output level control R600 and the feedback resistor R1600 provide a means of stabilizing and lowering the output impedance of the power emitter-followers. Since this local feedback loop encompasses the current to voltage amplifier Q1609 as well as the emitter-followers Q1604, Q1605, Q1606 and Q1607, the network consisting of R1602, C1600 and C1601 provides the frequency control necessary to prevent oscillations in the output stages. The remaining frequency control networks, consisting of R1629 and C1613 and C1618, provide the main control for the amplifier frequency response.

4-81. Output voltage limiting is accomplished by a diode network consisting of CR1615, CR1616, CR1617 and CR1618. It senses the output voltage and clamps the input voltage when the output reaches a predetermined level. Ordinarily CR1615 and CR1616 are conducting. Since CR1617 and CR1618 are connected to the amplifier error point which is always at very nearly zero volts, they are biased off by the contact potential of CR1615

and CR1616. When the output voltage reaches approximately +13 volts, CR1615 turns off and CR1618 turns on and clamps the input voltage. Similar action occurs when the output voltage reaches -13 volts.

4-82. Output current limiting is accomplished by transistors Q1602 and Q1603. They sense the output current flowing through the output emitter-followers and feed a current into the input which holds the output current to a predetermined level. The base of Q1602 is tied to the collector of Q1605 and the base of Q1603 is tied to the collector of Q1604. Transistor Q1602 is biased off by the bias divider network R1603, R1604 and R1605. As the output current through Q1605 increases, the voltage drop across R1610 increases until the bias point of Q1602 is reached and Q1602 starts conducting. Since the collector of Q1602 is tied to the amplifier error point, the current that flows through Q1602 also flows through the amplifier error point in the correct phase to turn the output current down which stabilizes the output current to the predetermined level of 150 milliamps, maximum. Similar action occurs during the time when Q1604 is conducting and Q1603 is turned on.

4-83. POWER SUPPLY. The demodulator circuits require six supply voltages, -50 V, -18 V, -12 V, +12 V, +18 V, and +34 V. Because high gain direct coupled circuits are used throughout, the required voltages must be regulated precisely to minimize drift and offset. The demodulator output power amplifier operates from unregulated sources of +18 and -18 volts. Each voltage source is obtained from a common power transformer having several taps on its secondary winding. The well regulated +34 volt supply is used as the voltage reference for the -12 volt and the -50 volt supplies. In turn the -50 volt supply is used as a reference for the +12 volt supply; thus proper operation of the three supplies are dependent upon the +34 volt supply.

4-84. ADJUSTABLE LOOP FILTER, GFD-13/TUA.

4-85. The phase-locked loop is basically an auto-correlation method of frequency discrimination. A block diagram of the total demodulator and of the demodulator proper (demodulation phase-locked loop) is shown in Figure 4-2. The input subcarrier waveform is shaped and fed into the phase comparator. The internal voltage controlled oscillator (VCO) is also fed into the phase comparator. When the loop is locked, the VCO frequency is the same as the subcarrier input frequency and the comparator has an average voltage output proportional to difference in phase between the input subcarrier and VCO output.

4-86. This voltage is fed, through the loop filter, back to the VCO in order to reduce the phase difference between the two signals and keep the loop locked. The loop filter restricts the frequency response of the loop, keeps the loop from oscillating, and reduces the noise bandwidth into the VCO. This noise difference is made up by jitter in the phase sensitive demodulator referred to as "phase jitter".

4-87. If both the source of the input subcarrier and the internal VCO have frequency outputs linearly related to voltage inputs, these voltages will be essentially proportional. This input to the local VCO is therefore the discriminator output. However, some of the noise picked up in transmission is filtered out by the loop filter. The amount of noise filtered out depends on the loop filter modulation index. The remaining phase sensitive demodulator by-products are filtered out with a low pass output filter which is fed from the same point as the VCO input.

The classical definition of modulation index is

$$MI = \frac{\text{Deviation}}{\text{Intelligence frequency}}$$

In this discussion, the maximum modulation is commonly referred to, and the loop modulation index

$$MI_{\text{Loop}} = \frac{\text{Maximum Channel Deviation}}{\text{Loop Filter Cutoff Frequency}}$$

This should not be confused with Channel Modulation Index as referred to in IRIG specifications which is

$$MI_{\text{Channel}} = \frac{\text{Maximum Channel Deviation}}{\text{Low Pass Output Filter Cutoff Frequency}}$$

4-88. A price must be paid in order to filter the transmission noise. As the noise bandwidth is reduced, the phase-locked loop demodulator information frequency capability is likewise reduced. Moreover, as the loop filter modulation index increases, the frequency capability for full bandwidth deviation decreases even more rapidly than the loop filter cutoff frequency. These effects are inherent in any properly designed phase-locked loop, regardless of circuitry. For optimum results with an adjustable loop filter, the operator must both fully understand the phase-locked loop, the specific circuitry involved, and must also develop a good laboratory technique with the equipment. An idea of the characteristics

of the specific data-noise signal to be measured and which part of this data is to be recovered for analyzing is also necessary.

4-89. The VCO, regardless of channel deviation, takes ± 2.5 volts to deviate full bandwidth. Figure 4-2 shows the connection of the loop filter in the circuit and after loop filter cutoff is passed, the output of the phase sensitive demodulator is attenuated at the input to the VCO. The phase sensitive demodulator must then deliver much more than ± 2.5 volts to the loop filter in order to deviate the VCO full bandwidth. Since the loop filter is in a closed loop circuit, there is no reason to think that the voltage limitation of the loop filter on the full bandwidth deviation of the loop is the same as the frequency pass band. In fact, this is not the case and the maximum full bandwidth deviation without loss of lock is approximately one over the square of the modulation index times the cutoff frequency for a modulation index of 1, while the cutoff frequency is one over the modulation index times the cutoff frequency for a modulation index of 1. For instance, in the IRIG Band 18, with a loop filter calculated on the basis of a development by Gruen,

$$\begin{array}{l|l} f_c & = 5250 \text{ cps} \\ \text{MI} = 1 & \end{array}$$
$$\begin{array}{l|l} f_c & = 525 \text{ cps} \\ \text{MI} = 10 & \end{array}$$

On the basis of our approximation, Maximum Frequency of Full Bandwidth Deviation is approximately 52.5 cps. Actual measurement is 86 cps. This is inherent in any correctly designed loop filter and any effort to increase the loop gain in order to improve this situation only changes the loop filter components for the same loop noise bandwidth and results in no improvement.

4-90. One factor of importance is to have a small static (DC) phase error necessary to deviate to bandedge (statically). This same small static phase error in the phase demodulator must be maintained as the modulation index is increased. This allows the $\pm 90^\circ$ maximum phase error to be used mostly for dynamic data and prevents the above mentioned loss of lock as long as possible. This characteristic is part of a correctly designed loop.

4-91. How do these considerations affect the use of the adjustable loop filter? The standard tuning unit is designed with a loop filter modulation index of 1. This loop filter will stand a full bandwidth step in frequency, within the band, without losing lock, and is the smallest

modulation index necessary. With the loop filter switched to 100% NB and the phase error centered, the GFD-13/TUA is identical to the GFD-13/TU. The noise bandwidth is wide. Decreasing the noise bandwidth also increases the chance of loss of lock. This loss is dependent on the rate of change of voltage out of the phase demodulator. When the phase error necessary to charge the loop filter and move the VCO at the proper rate exceeds 90° , the phase demodulator cannot deliver the required voltage and the loop loses lock. The rate required is interdependent on the information frequency, information amplitude, noise frequency and noise amplitude. Reducing any one allows the other three to increase in any proportion as long as the total requirement is less than or equal to before. Phase error should be adjusted so that the chance of losing lock is equal on both sides. This allows the maximum amount of noise to be tolerated. The phase adjustment in conjunction with the input meter as an average phase indicator is used for this purpose. The noise bandwidth can then be narrowed as much as possible with the % Noise Bandwidth switch. This narrowing is limited by the maximum intelligence frequency and amplitude, and noise frequency and amplitude passed by the band pass filter and broad band limiter.

4-92. Information to be measured or recorded for analysis is not dependent on the above. The maximum frequency to be presented flat to the low pass output filter is determined by the loop filter cutoff frequency. A low pass filter with any cutoff frequency lower can be used to filter out both higher frequency intelligence that may not be desired in a particular analysis and the noise in the same band. To be sure, this will not have any effect on the locking or thresholding of the discriminator, but it will add to the clarity of the data.

4-93. The phase-locked loop is a powerful tool that, if used correctly, can give results comparable with other types of discriminators with a 28 db worse signal to noise ratio at high modulation indexes. Correct choice of low pass filters cannot improve the threshold but can present the data with an even better overall input noise to output noise ratio and can be used to select specific bands of data from the total information signal. Table 4-1 is typical of adjustable loop filter operation. Loop filters are calculated with a damping factor of .7 and the cutoff frequencies, which are the results of the calculations, are related to the noise bandwidth and are not the 3 db down points. Since the loop will not lose lock at a modulation index = 1 and a safety margin is included, the square approximation for full bandwidth is pessimistic at low modulation indexes. At high modulation indexes, it is more realistic. Values in the table for Maximum Full Bandwidth Deviation are measured.

Table 4-1. Typical Channel Characteristics

Channel 70 kHz $\pm 7.5\%$ IRIG Band #18			
Loop MI	% Noise Bandwidth	Loop Filter Cutoff Freq. (Hz)	Maximum Frequency for Full Bandwidth Deviation (Hz)
1	100	5250	Does not lose lock
3	75	1750	1350
5	50	1050	410
10	30	525	86
20	15	175	9
50	7	105	2.6

4-94. TAPE SPEED COMPENSATION.

4-95. The multiplex of subcarrier signals from the FM receiver may be recorded on magnetic tape for future study. When the tape is played back, any variation in tape speed will show up as variations in the subcarrier frequencies with corresponding variations in demodulator output voltages. When precise measurements are required, the system may be compensated for tape speed variations as shown in Figure 4-14. When tape speed compensation is required, a constant frequency reference signal must be recorded on the tape along with the subcarriers. A typical frequency is 100 kHz.

4-96. The tape recorder output is distributed to the data demodulator and through a GFD-13/RTU Reference Demodulator. A GFD-13/RTU Reference Demodulator consists of a standard GFD-13 demodulator with a special tuning unit whose band pass filter selects the reference signal frequency. The output voltage from this demodulator, therefore, is proportional to the deviation of the tape speed from its nominal value.

4-97. Since the reference signal is delayed in passing through the filters of the reference demodulator, the subcarriers must be delayed an equal amount of time for proper tape speed compensation. The GFD-13/RTU unit provides the time delay required for the subcarriers.

4-98. The output voltage from the reference demodulator, which is proportional to the tape speed error, is connected to the voltage controlled oscillator in each data demodulator. For example, if the tape slows down, the frequency of each subcarrier drops proportionally, and without compensation each demodulator output voltage would change accordingly. But the speed

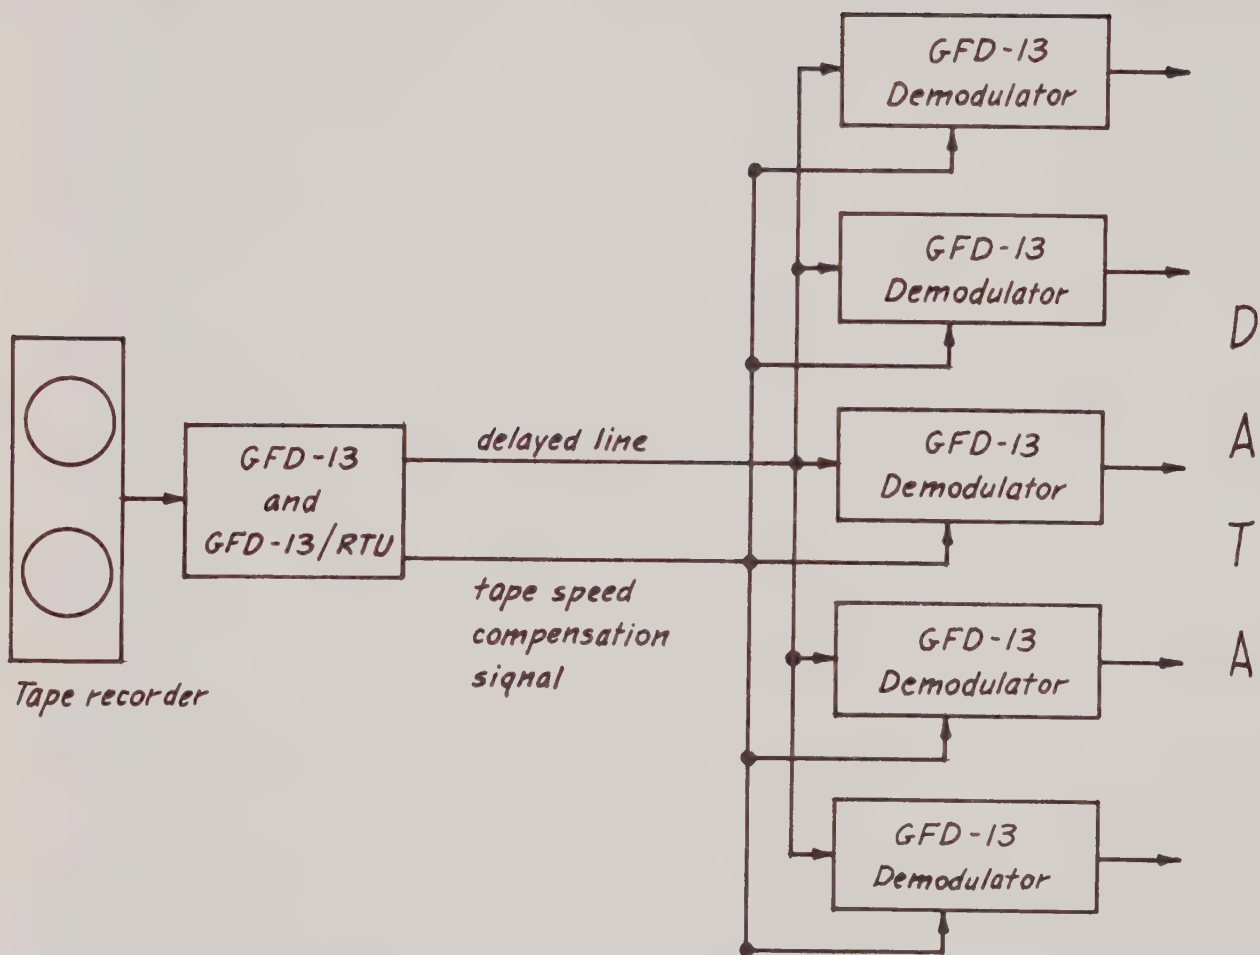


Figure 4-14. Tape Speed Compensation

compensating signal connected from the reference demodulator to the VCO in each data demodulator tends to reduce each VCO frequency. In each data demodulator, in order for the phase-locked loop to remain locked, the VCO frequency control voltage must change so that it corresponds to a higher frequency. (Recall that the VCO frequency control voltage is equivalent to the demodulator output.) With proper action of the compensating circuit, the VCO frequency control voltage and the corresponding demodulator output voltage can be restored to the value it would have been in the absence of tape speed variation.

SECTION V

MAINTENANCE

5-1. GENERAL.

5-2. This section covers the preventive maintenance for proper performance of the equipment. Acceptable performance is defined within the limits of the performance test described herein. Troubleshooting and location of components is included.

5-3. TEST EQUIPMENT. Test equipment is listed in Table 5-1.

Table 5-1. Test Equipment

Nomenclature	Characteristics
FM Oscillator	DCS Model GOV-3, GSO-1 or equivalent
RMS VTVM	Hewlett-Packard 400D or equivalent
VTVM	RCA Senior Volttohmyst or equivalent
Electronic Counter	Hewlett-Packard 522B or equivalent
100 ohm, 10 watt load resistor	
100 ohm, 2 watt load resistor	
Current Meter	Simpson 260 or equivalent

5-4. PREVENTIVE MAINTENANCE.

5-5. VISUAL INSPECTION. Inspect the front panel and cover for physical signs of damage which might occur during shipment.

5-6. WEEKLY INSPECTION. A visual inspection should be made at least once a week, during which the following items are checked:

- a. Adequacy of cooling air supply.
- b. Evidence of overheating.
- c. Loose or defective wiring.
- d. Loose component and subassemblies.

5-7. SEMI-ANNUAL INSPECTION. When a demodulator is first installed and at least once every six months thereafter, the following items should be checked:

- a. Adequacy of cooling air supply.
- b. Evidence of overheating.
- c. Loose or defective wiring.
- d. Loose components and subassemblies.
- e. Evidence of overheating on each printed circuit board.
- f. Excessive noise generation by the chopper.
- g. Waveforms.
- h. Power supply voltages*.
- i. Performance test.

*Because direct coupled amplifiers are used through the demodulator its operation depends entirely upon how well the power supply voltages are maintained at their original values. A small change in a supply voltage can cause considerable zero offset and subsequent saturating or clipping action in a high gain d-c amplifier. It is recommended that when the demodulator is first installed, its supply voltages be measured with a high-precision voltmeter and the data be recorded for future reference. If the voltages ever deviate from these values, it can be assumed that the demodulator performance will deteriorate, and that repair is necessary. (See Figure 5-1 below.) Critical voltage at the 35 V terminal should be adjusted to 33.3 V by trimpot R2819.

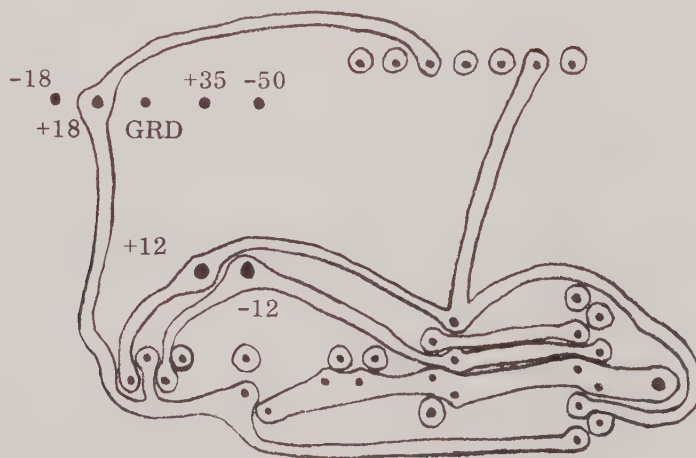


Figure 5-1. Location of DC Voltages on Main Connector Board

5-8. PERFORMANCE TEST. The tests described herein are the minimum tests required to ensure proper performance of the equipment. If equipment does not comply with minimum performance the cause must be determined through the maintenance procedure.

- a. Connect an FM oscillator to the demodulator input. Arrange the rms VTVM to measure the amplitude of the input signal and the electronic counter to measure the frequency of the input signal.
- b. Connect the load resistor to the demodulator output. Arrange the peak-reading VTVM and d-c VTVM to measure the demodulator output voltage.
- c. Set the oscillator exactly at the center frequency of the band pass filter and the output level control at 10 volts. After at least a 15 minute warmup period, make the band centering adjustment.
- d. Check the zero adjustment of the output level meter. It should indicate zero when the demodulator output voltage is zero.
- e. Check the operation of the input signal level meter. With an input amplitude of 10 millivolts rms, the meter should indicate half scale on the 20 millivolt rms range. When the input amplitude increases to 1 volt rms, the meter should indicate half scale on the 2 volt rms range.
- f. Check the limiter sensitivity. A 20 db change in input amplitude (amplitude change by factor of 10) should not cause a change in the demodulator output voltage greater than 0.3% of bandedge output (± 0.03 VDC), with carrier at band center and a low pass filter designed for a modulation index of 5.0. Repeat the test at the upper and lower bandedges.
- g. Check calibration of the output level control with the oscillator set at bandedge frequency. With the oscillator set a bandedge frequency and the output level control at 10 volts, the demodulator output voltage should be 10.3 VDC $\pm 1\%$.
- h. At bandedge, reduce the input amplitude below 1 millivolt rms. The output voltage should fall to approximately zero.
- i. Check the output voltage limiter operation. Set the input amplitude at 2 volts rms and the output level control at maximum. Any variation in input frequency should not cause the output voltage to exceed ± 13 VDC.
- j. Check the output current limiter operation. Set the input amplitude at 2 volts rms, the input frequency at bandedge and the output level control at maximum.

Set Simpson 260 to d-c current 500 ma scale and connect in series with 100 ohm load. Paralleling 100 ohm load with another 100 ohm resistor should cause an increase in current which is limited to 150 ma.

- k. Check the overall frequency response. Set the oscillator at band center frequency at 2 volts rms. Frequency modulate the input signal at maximum deviation ($\pm 7.5\%$ for bands 1 through 21 and $\pm 15\%$ for bands A through H). Measure and plot the demodulator output voltage amplitude, as indicated by the peak-reading low frequency VTVM, as a function of the frequency of modulation. As the modulating frequency approaches the cutoff frequency of the low pass filter, using a cutoff frequency corresponding to a modulation index of 5, the output amplitude should fall approximately 3 db below its low frequency value.
- l. Note that the maximum carrier frequency deviation which can be accommodated depends upon the loop filter. The standard loop filter can accommodate a full bandwidth step change in carrier frequency. The switchable loop filter bandwidth depends upon the setting of its selector switch. Hence, during the performance tests, the input signal maximum frequency deviation, and maximum modulation frequency should be chosen to suit the particular tuning unit.

5-9. TROUBLESHOOTING.

5-10. GENERAL. Find whether the malfunction is caused by a failure of the demodulator itself or by an external failure. Check the incoming signal to the demodulator and the load circuit connected to the demodulator output. If the demodulator itself appears to be at fault, first try changing the plug-in units including the low pass filter and band pass filter units. If the preliminary checks and substitutions indicate that the failure is in the demodulator main section or power supply rear section, remove the entire unit from its housing and inspect it for visible signs of failure, such as burned resistors, etc. When such a fault is located, always test other components in the same circuit to see whether a hidden failure caused the obvious failure. A typical example of this situation occurs in a common-emitter amplifier in which the emitter bypass capacitor develops a short circuit which is not visible. In turn, this causes excessive collector current which may burn out the collector load resistor -- a visible indication of failure. If the shorted capacitor is not discovered and replaced, a new collector load resistor will also burn out.

5-11. **TEST PROCEDURE.** Assemble a cable with a spare input-output connector so that the demodulator may be supplied with a-c power, an input signal, and an output load while on the bench. Be sure to make the necessary jumper connections at the S1 socket (see Tables 2-1 and 2-2 in Section II).

5-12. Turn on the a-c power and check each power supply output voltage with a precision voltmeter having an accuracy of 0.5% or better. Compare the readings with those obtained during routine maintenance. If they differ, troubleshoot the power supply or look for excessive loading caused by a failure in the demodulator. Remember that the power supply voltages are interdependent, and are referred to the +35 volt supply. By adjusting the +35 volt supply the other supply voltages are also adjusted. DO NOT attempt to adjust the supply voltages unless a component in the +35 volt supply has been replaced (because of failure) whose new value changes the voltage(s). Then the voltage must be set exactly at 33.3 volts.

5-13. The easiest way to isolate a fault is to trace the progress of a signal through the demodulator from input to output, using an oscilloscope. For this purpose, supply the demodulator with an input signal at the band pass filter center frequency. If possible, use an oscillator which permits frequency modulation of the subcarrier input signal. Data-Control Systems, Models GOV-3 or GSO-1 Voltage Controlled Oscillators, are particularly adaptable. Refer to drawing EW-013819, Table 5-2 and Figure 5-2 which show typical waveforms at significant test points in the circuit and the conditions for obtaining each. By comparing the performance of the demodulator to these waveforms, it is usually possible to isolate the particular circuit in which the failure has occurred.

5-14. If possible, replace the particular circuit board on which the failure is located. Otherwise troubleshoot the circuit board to find the faulty component. New type transistors are being manufactured which differ from one another in respect to their base-emitter-collector terminals. Figure 5-3 illustrates the base-emitter-collector terminal positions for different types of transistors used in the GFD-13.

5-15. **LOCATION OF COMPONENTS.** Individual printed circuit boards are used for various circuits and portions of circuits. The components on each board are identified by different series of reference numbers described in Table 5-3. The same series of reference numbers

Table 5-2. Test Points (referenced to Figure 5-2 and schematic drawing EW-013819)

Test Point	Board	Location
1	Limiter Board	Input to 1st Limiter (CTC lug two wires)
2	Limiter Board	Output of 1st Limiter (Link to C210)
3	Limiter Board	Output of 2nd Limiter (Link to Q206)
4	Limiter Board	Input to 3rd Limiter (CTC lug after R226)
5	3rd Limiter Demod. Bd.	Input to 3rd Limiter (back CTC lug to R300)
6	3rd Limiter Demod. Bd.	Limiter feedback (front CTC lug to R302)
7	3rd Limiter Demod. Bd.	Output of 3rd Limiter (link to P. C. to C402, C401)
8	Phase Comparator Demodulator Board	P. C. Signal Input (CR404 at Q412 emitter)
9	Phase Comparator Demodulator Board	P. C. Signal Input (CR405 at Q413 emitter)
10	Phase Comparator Demodulator Board	P. C. Signal End (To collector Q414) junction of CR404, CR405
11	Phase Comparator Demodulator Board	P. C. VCO Input, CR400 at Q408 emitter
12	Phase Comparator Demodulator Board	P. C. VCO Input, CR401 at Q409 emitter
13	Phase Comparator Demodulator Board	Phase Comparator Output (CTC lug of 50S cable)
14	Phase Comparator Demodulator Board	Delta Phase Output (CTC lug of 50Z cable)
15	Demodulator Board Lock Light	Lock Light Input (junction of R408, R407)
16	Demodulator Board Lock Light	No-lock light VCO input (junction of R402, C403)
17	Demodulator Board Lock Light	No-lock light lamp driver (base of Q406)
18	Blank	
19	Blank	
20	Demodulator Board VCO	VCO output (link to P. C.)
21	Demodulator Board VCO	VCO output (VCO link)

Table 5-2. Test Points (referenced to Figure 5-2 and schematic drawing EW-013819) (continued)

Test Point	Board	Location
22	Demodulator Board VCO	VCO Timing Wave (CR500 or 50H cable)
23	Demodulator Board VCO	VCO Timing Wave (CR501 or 50M cable)
24	Demodulator Board VCO	Loop filter output (Q524 base, back CTC or 50K cable)
25	Demodulator Board VCO	Loop filter output (deviation) (Q523 base, front CTC or 50E cable)
26	Demodulator Board VCO	VCO Darlington input (VCO side)
27	Demodulator Board VCO	VCO Collector Load (junction of R507, R509)
28	Demodulator Board VCO	VCO Collector Load (junction of R518, R510)
29	Demodulator Board VCO	VCO Feedback (junction of R524, R526)
30	Demodulator Board VCO	VCO Feedback (junction of R501, R500)
31	Demodulator Board VCO	VCO Feedback (junction of R516, emitter of Q517)
32	Demodulator Board VCO	VCO Feedback (junction of R502, emitter of Q500)
33	Demodulator Board VCO	VCO Feedback (junction of R515, emitter of Q516)
34	Demodulator Board VCO	VCO Feedback (junction of R503, emitter of Q501)
35	Demodulator Board VCO	VCO Darlington Amp. (R514, CTC lug 50P)
36	Demodulator Board VCO	VCO Darlington Amp. (R504, CTC lug 50B)
37		LPA chopper output at junction of R1639 and R1640

are used to identify the individual terminals of each printed circuit board connector. For example, the components associated with the low pass filter are mounted on one board on which all components are identified by numbers beginning with 4600 and whose connector terminals are identified with numbers beginning with 4600. On each board, the terminal numbers increase to the right when the board is held component side up with the connector pins toward the observer.

All Test Points taken with:
 Channel 18
 1.05 L. P. output filter
 Input - 1 V rms, H. P. osc. C. F.
 Tektronix RM31A/Type H Plug-in
 X10 probe
 (Reference Table 5-2 and drawing
 EW-013819)

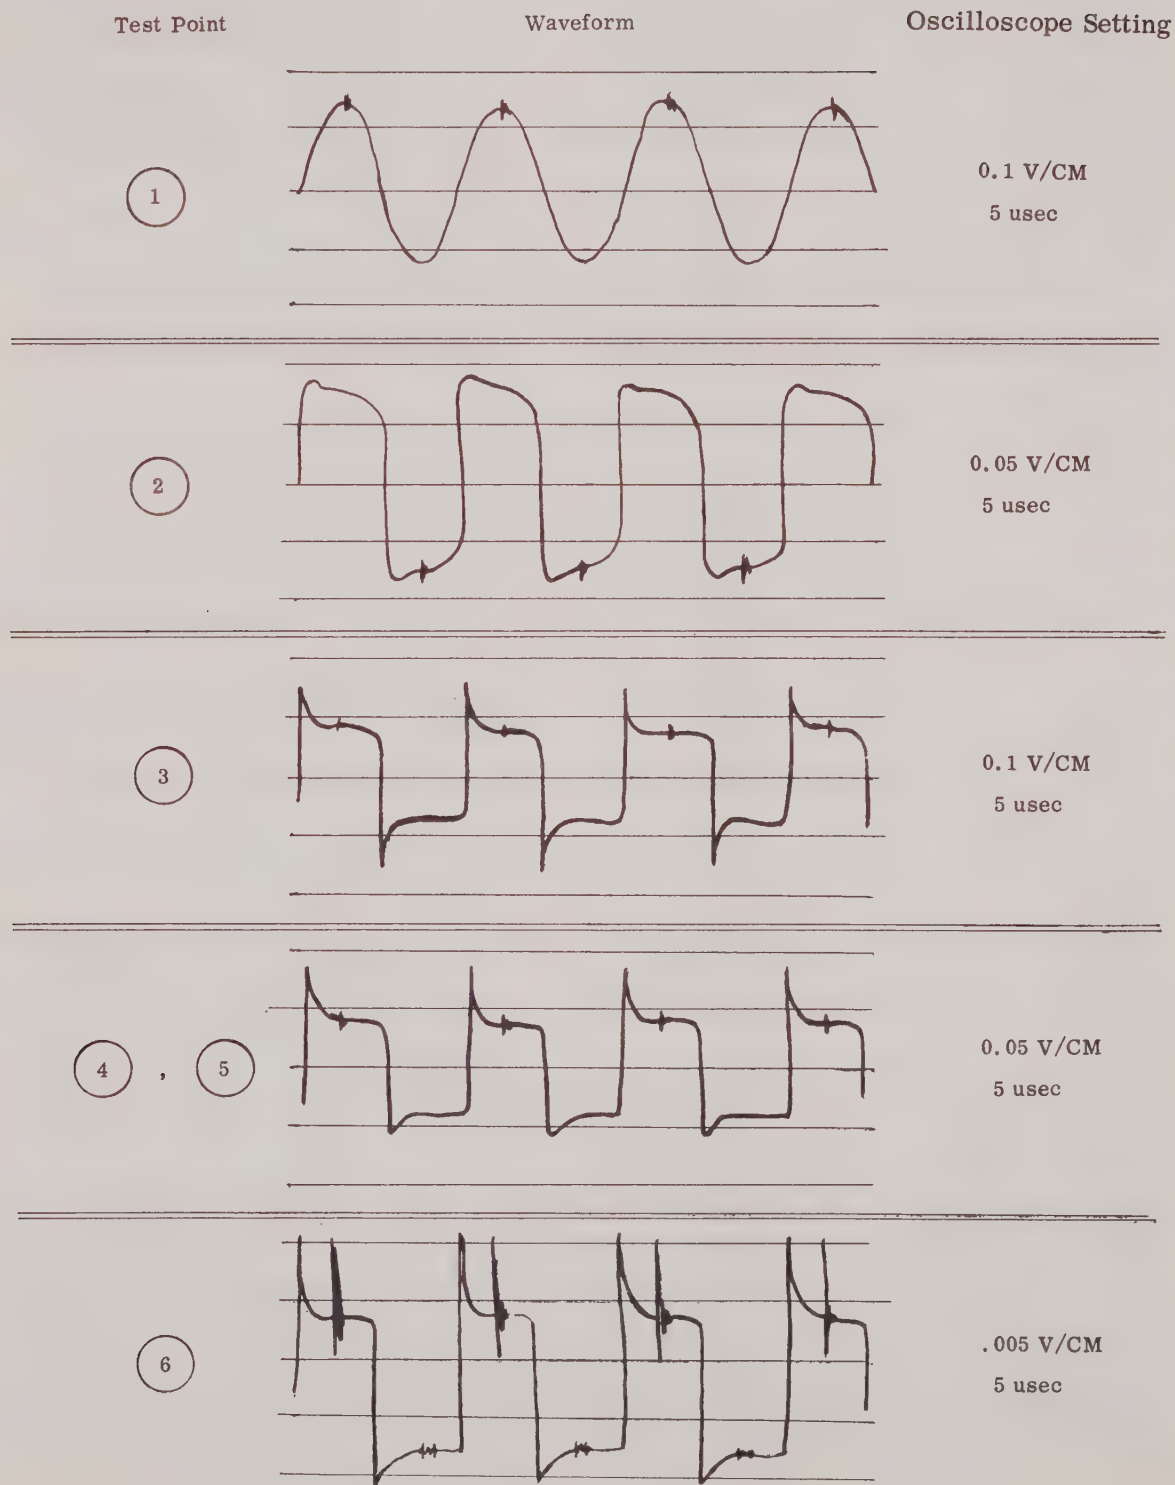



Figure 5-2. Waveforms

Test Point

Waveform


Oscilloscope Setting

7 , 15

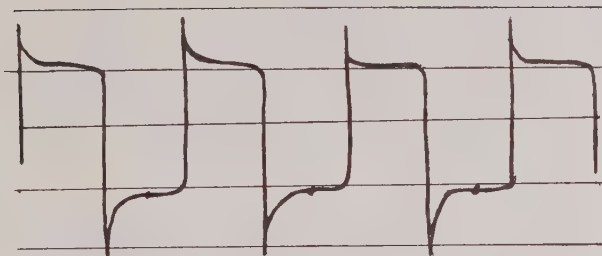


0.2 V/CM
5 usec

8

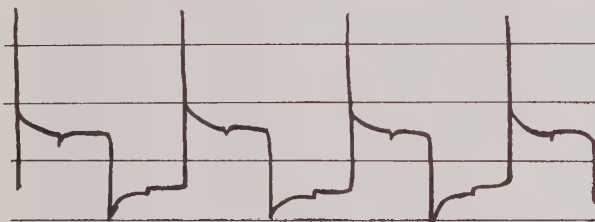


0.2 V/CM
5 usec

9

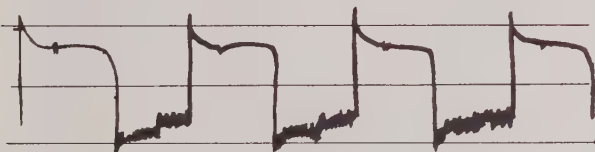


0.2 V/CM
5 usec

10

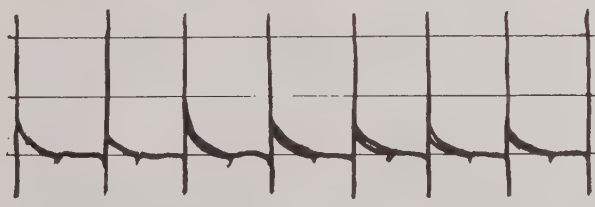

0.2 V/CM
5 usec

11 , 12

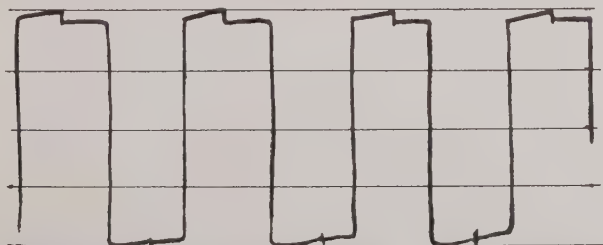

0.2 V/CM
5 usec


Figure 5-2. Waveforms (continued)

Test Points

Waveform


Oscilloscope Setting

13 , 24 ,
25

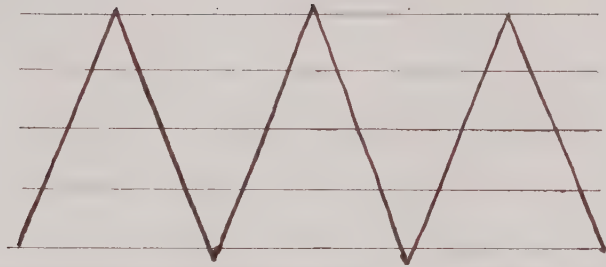


0.05 V/CM
2 usec

14

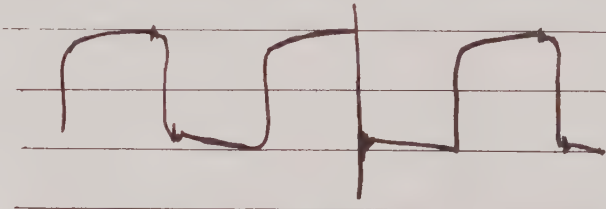

.005 V/CM
2 usec

16

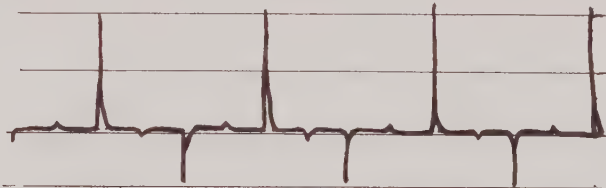


0.1 V/CM
5 usec

17



.005 V/CM
5 usec

18

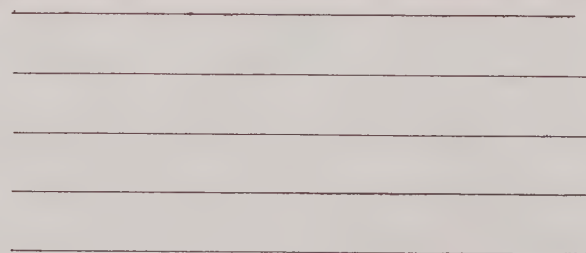

Test Point

Waveform

Oscilloscope Setting

20



0.5 V/CM

5 usec

21




0.5 V/CM

5 usec

22


, 23

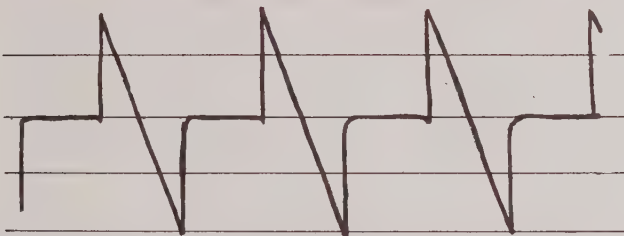

0.5 V/CM

5 usec

26

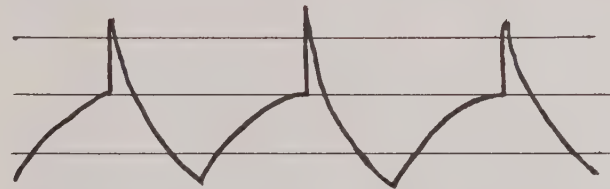

0.1 V/CM

2 usec

27


, 28



0.1 V/CM

5 usec

Figure 5-2. Waveforms (continued)

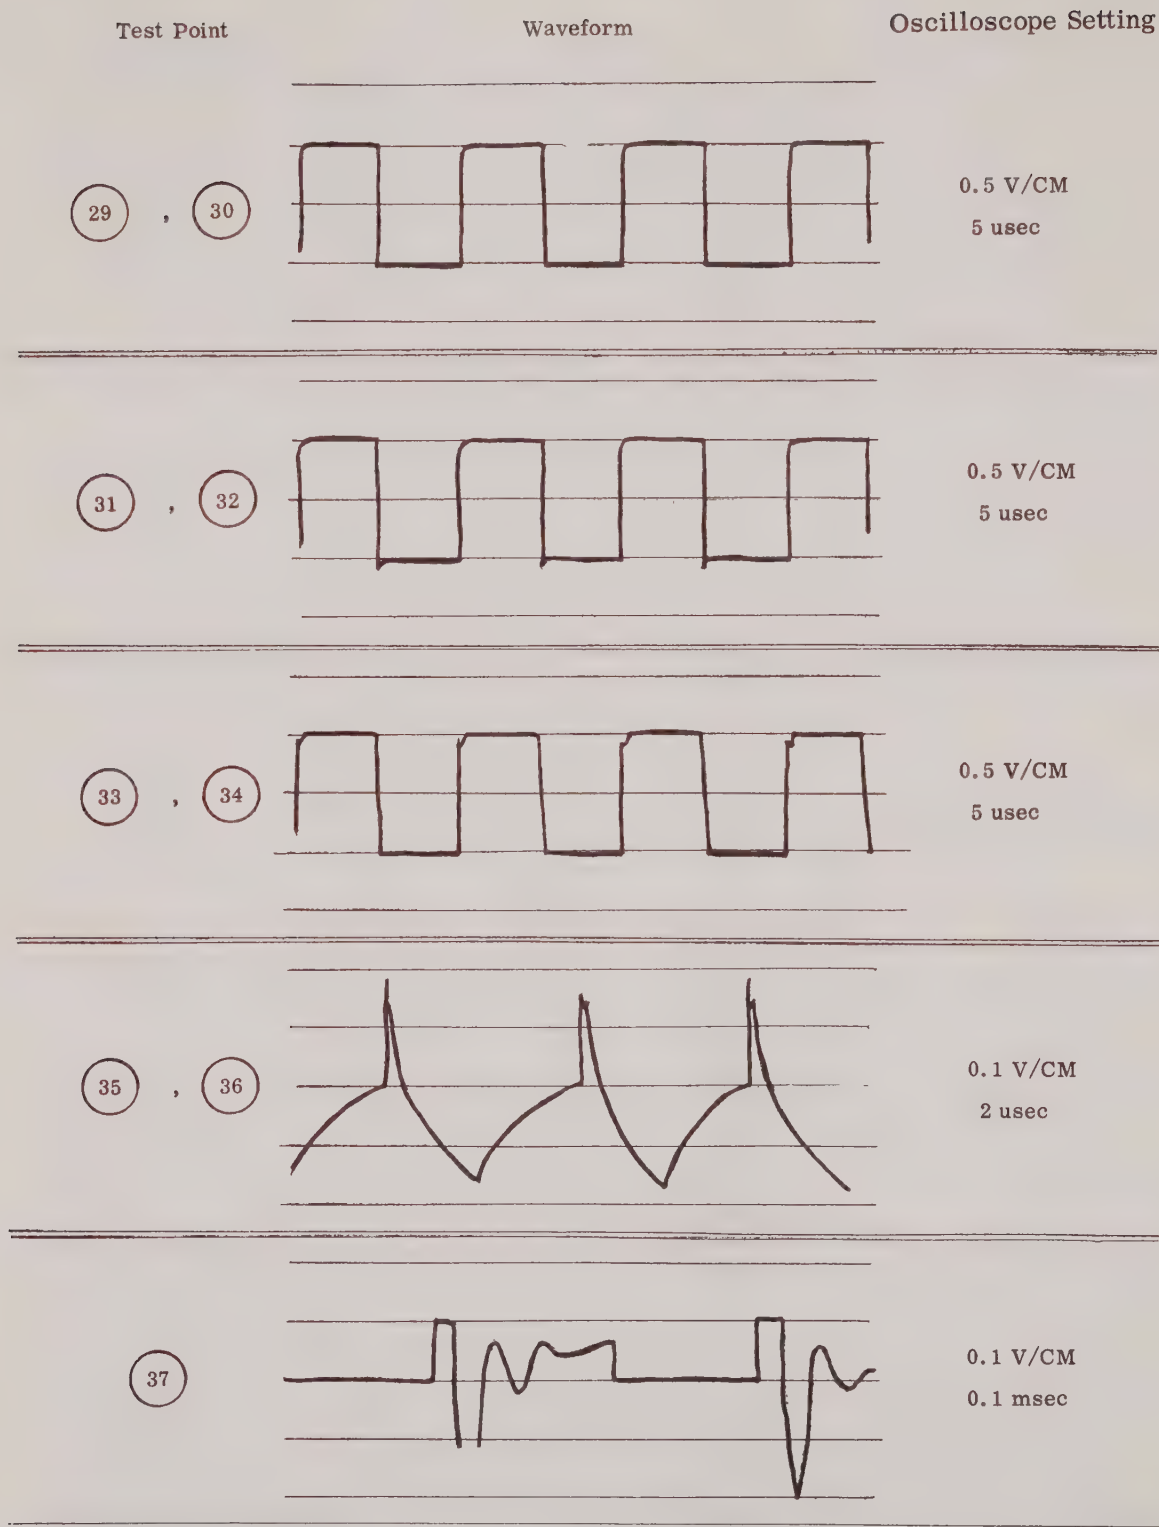

All components are viewed from the bottom.

1st and 2nd Limiter

16L64 or 2N3855-A


Q200 Q204
Q201 Q205
Q202 Q206
Q203 Q207
 Q208



Upper Chopper

2N3012

Q1701
Q1700

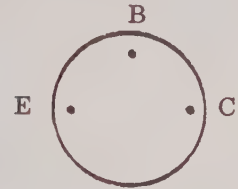

VCO

16L64 or 2N3855-A

Q411 Q508 Q412
Q413 Q502 Q404
Q403 Q507 Q409
Q303 Q501 Q510
Q304 Q500 Q514
Q517 Q503 Q513
Q511 Q520 Q504
Q512 Q300 Q525
Q301 Q302 Q507
Q516 Q414
Q515 Q408




2N3391-A

Q406
Q400
Q405




MM999

Q402 Q401
Q407 Q518
Q519 Q524
Q523 Q505
 Q506

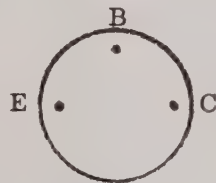

2N3638

Q527
Q526

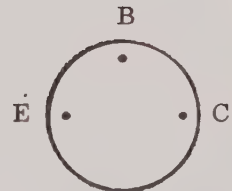

2N3855-A

Q529
Q528



TIS03 - 2N3702


Q501
Q522



Figure 5-3. Location of Emitter-Base-Collector Terminals

All components are viewed from the bottom.

Output Amplifier

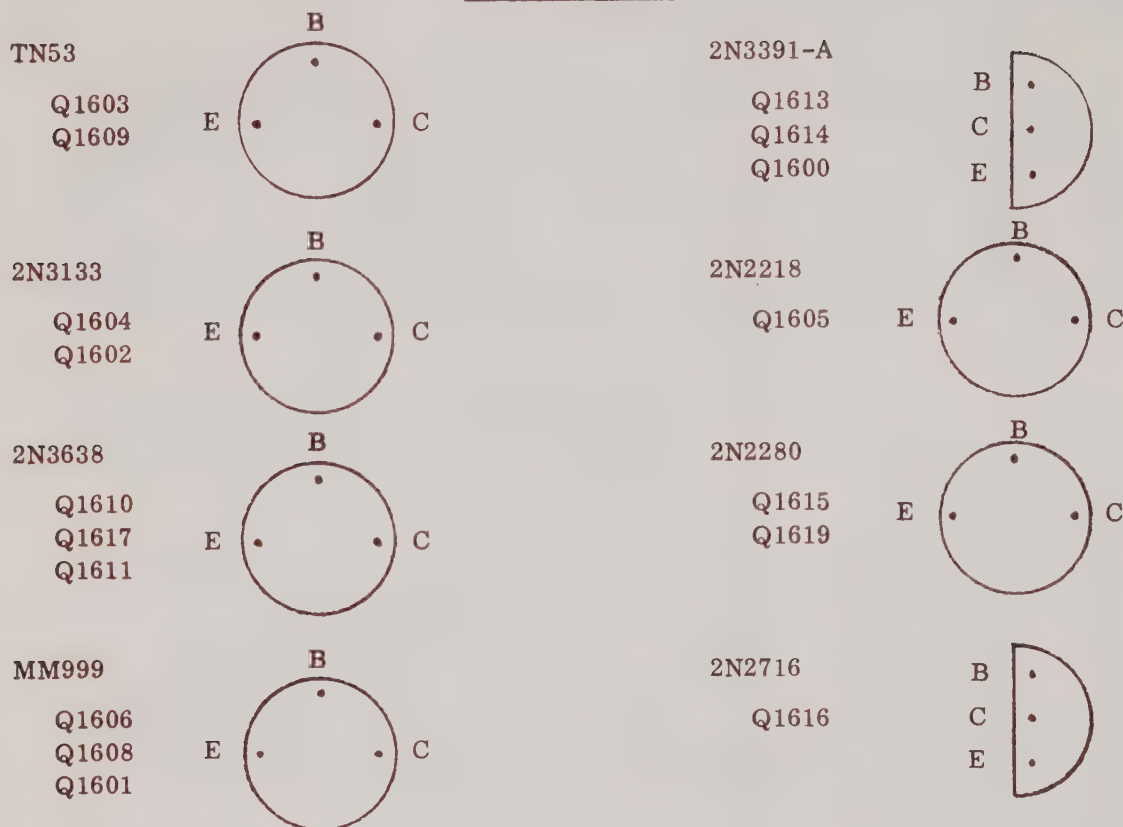

16L64 or 2N3855-A

Q1607
Q1612



Power Supply 2800

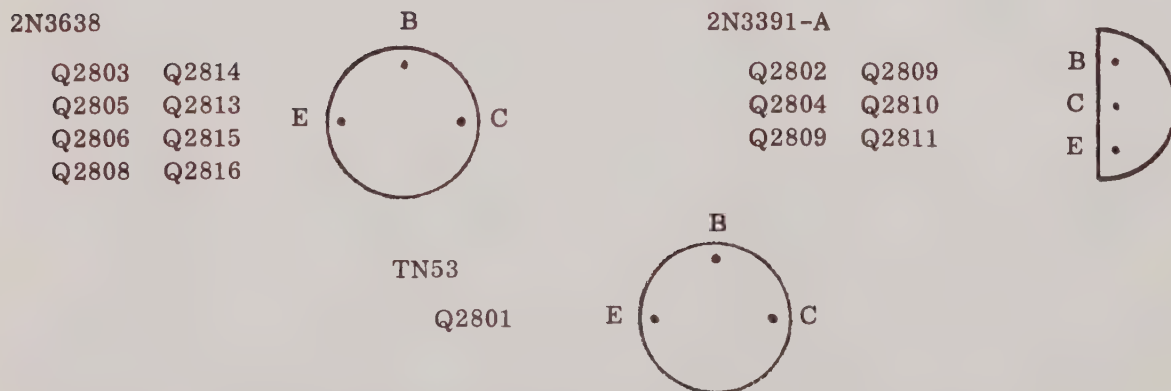


Figure 5-3. Location of Emitter-Base-Collector Terminals (continued)

Table 5-3. Subassembly Numbering System

Subassembly	Identification Numbers begin with:
1st & 2nd Limiter - Level input switch and Meter	200
3rd Limiter	300
Phase Splitter & Demodulator	400
VCO	500
Output Potentiometer & Meter	600
DC Amplifier & Power Output	1600
Chopper Drive	1700
Output Connector Board	2600
Power Supply	2800
+18 Volt Card	2900
Band Pass Filter	3100
Loop Filter and VCO Plug Card	3400 and 3500
Low Pass Filter Plug-in	4600

5-16. REPAIR. Be sure to observe the usual precautions when making repairs. Observe polarity markings on electrolytic capacitors and on diodes. Do not use more heat than absolutely necessary when soldering on the printed circuit wiring. If it is necessary to disconnect a transistor or diode lead or to replace any semi-conductor, always hold the component lead with pliers between the component body and the heated joint while soldering, so that the heat of soldering is drawn away from the semi-conductor. Remove excess solder flux. Make sure that all circuit boards are firmly seated and that all interconnecting terminals are properly mated.

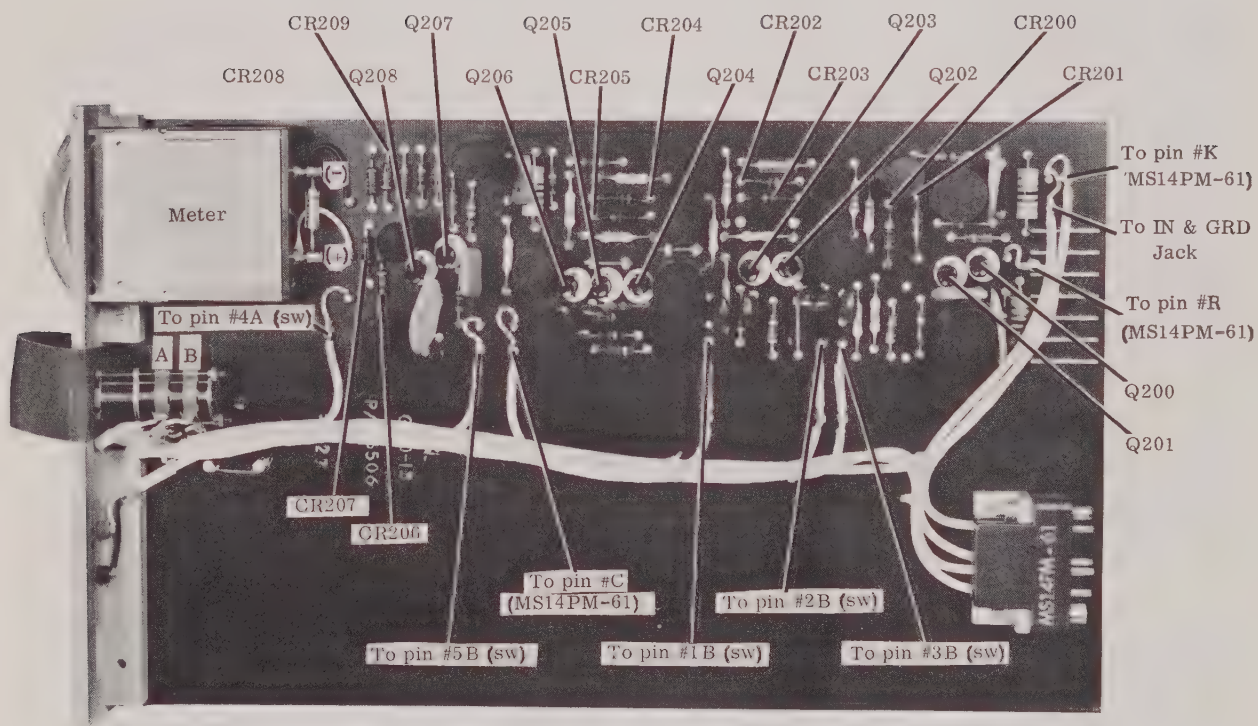


Figure 5-4. Limiter Board Assembly

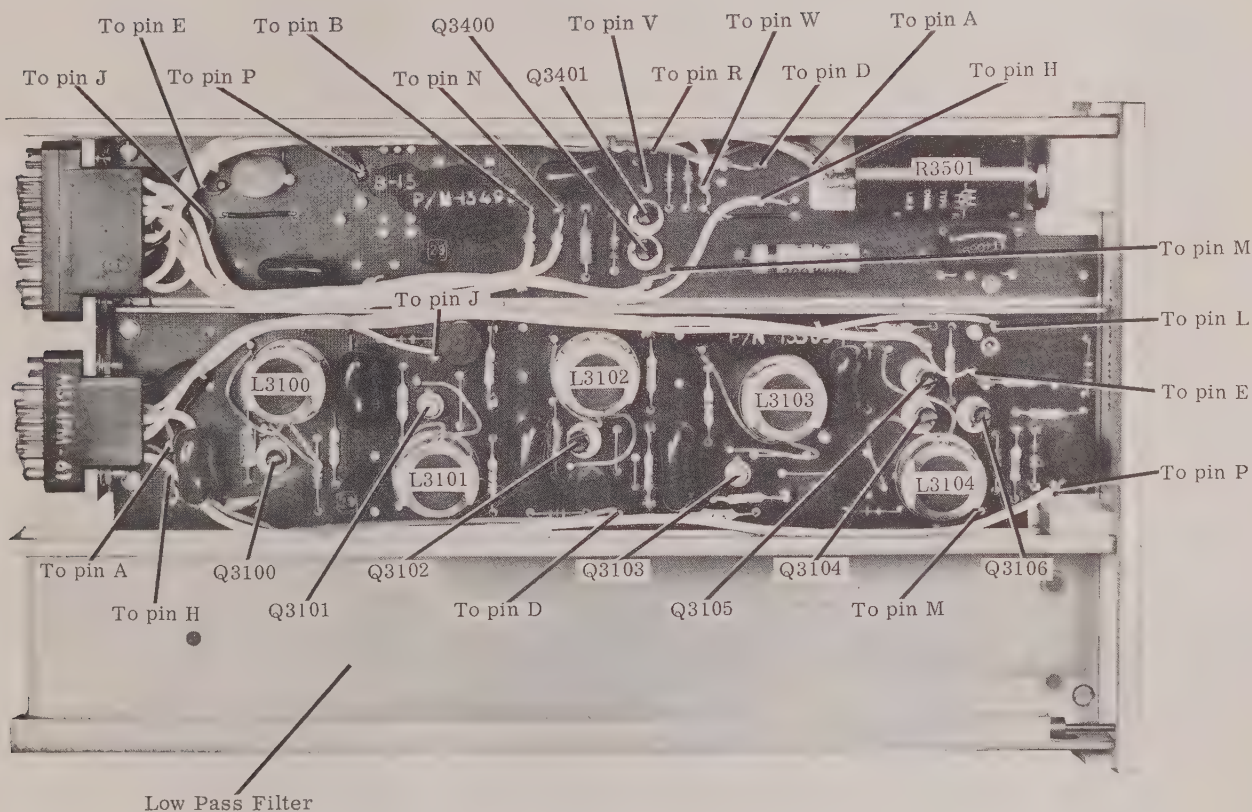
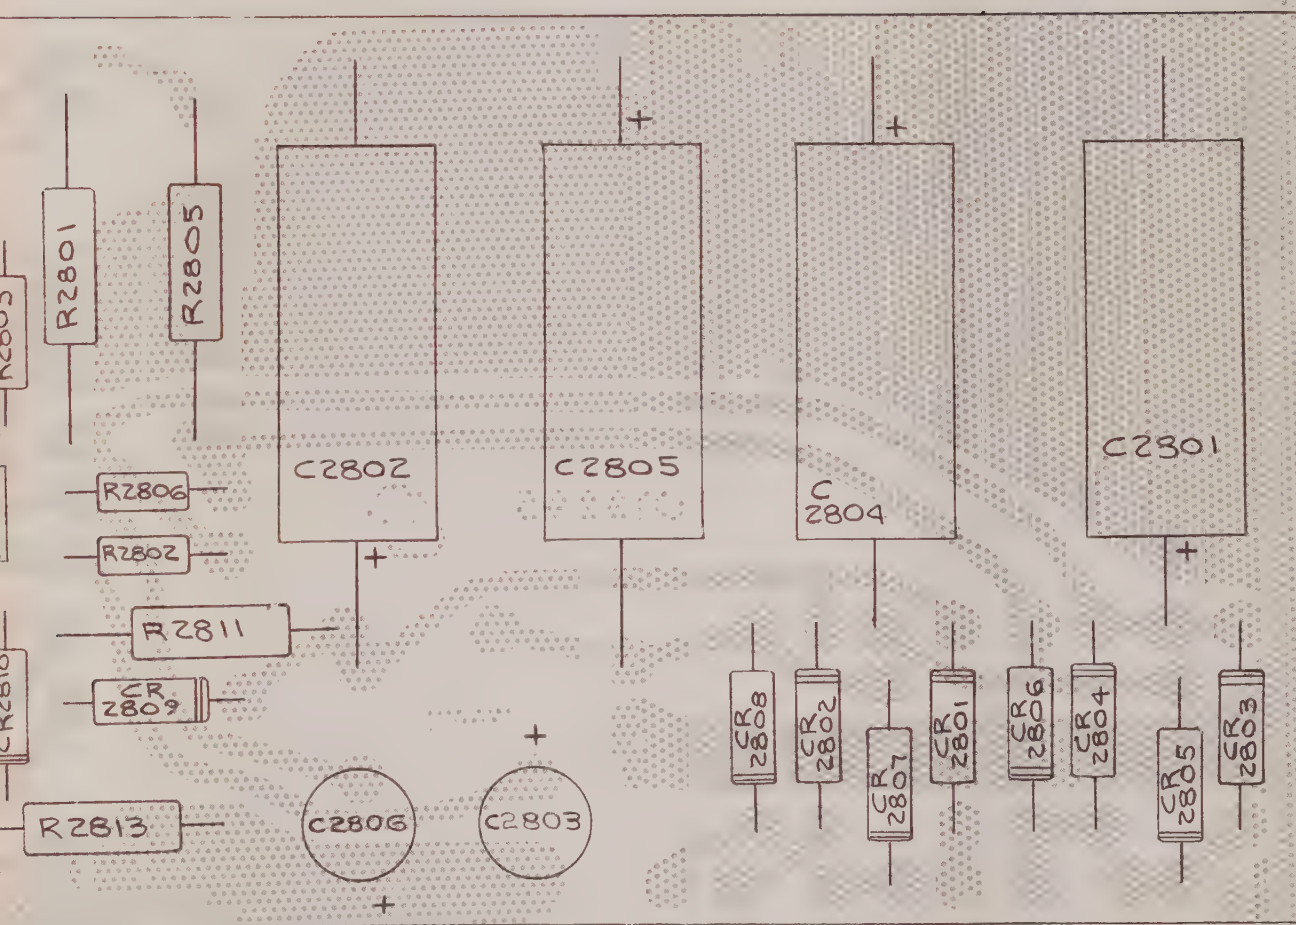
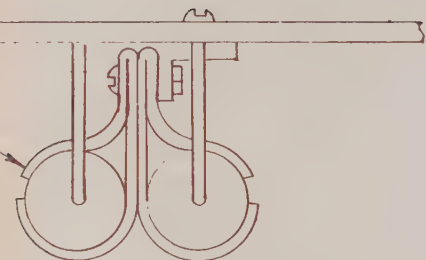


Figure 5-5. Tuning Unit Assembly (Band Pass, Loop Filter and VCO Low Pass)



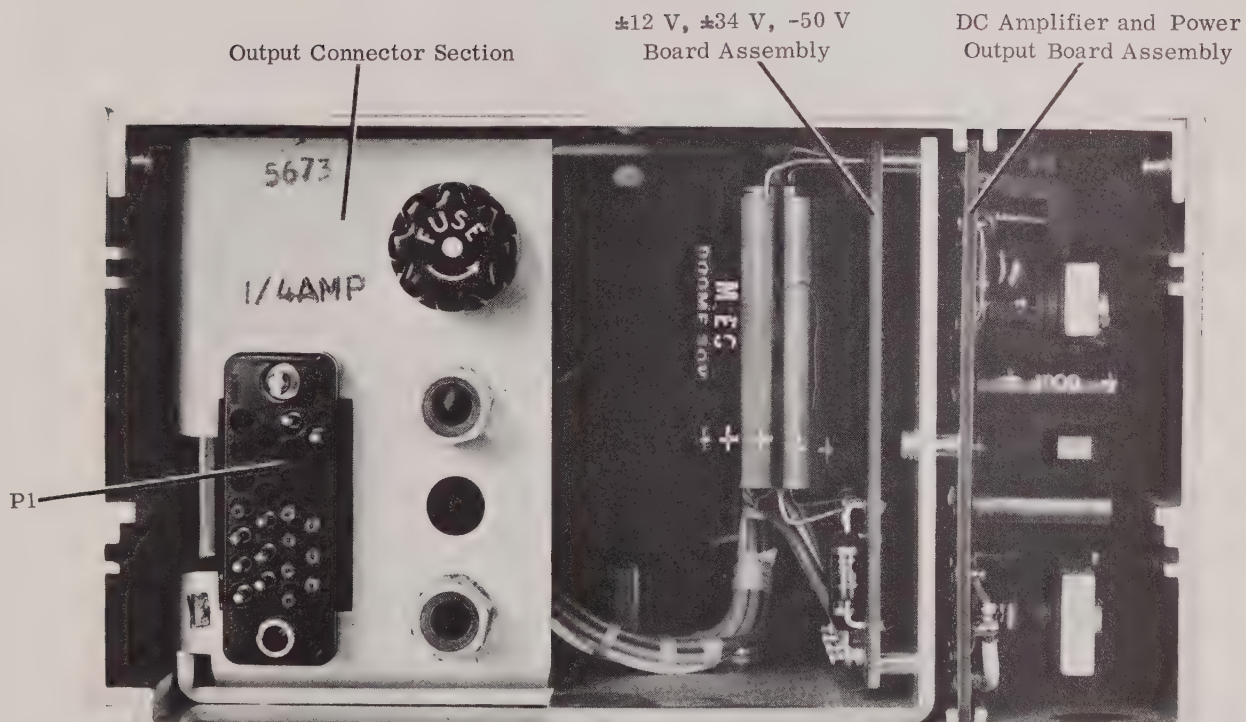


Figure 5-9. Rear View

Table 5-4. Recommended Spare Parts List, Model GFD-13

Item No.	Part Number	Description	Qty. per 10 - 12 Units
1	F1	Fuse, 1/4 amp, 125U, SB, Little Fuse	5
2	S1	Switch, 1182DL56C, Pendar	2
3	GA-013334	Power Supply Bd. Ass'y., DCS	1
4	CA-013452	Master Board Ass'y., DCS	1
5	SW200	Switch, 8002-4, Grayhill	2
6	DA-013506	Limiter and Input Meter Board Ass'y., DCS	1
7	R600	Potentiometer, Output, 500 ohm I. R. C.	1
8	GA-013547	VCO Board Assembly, DCS	1
9	TA-013497	Output Amplifier Board Ass'y. DCS	1
10	BA-013467	Lower Chopper Board Ass'y., DCS	1
11	BA-013468	Upper Chopper Board Ass'y., DCS	1
12	BD-012320	Output Meter, International	1

Table 5-5. Replacement Parts List

DCS Model			GFD-13			Nomenclature: FM Subcarrier Demodulator				
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/** Sok	Remarks		
1		Final Assembly	DA-013976	DCS	1					
2		Power Supply Assembly	DA-013970	DCS	1					
3	F1	Fuse	1/4A, 125U, SB	Little Fuse	1		5	Used in Item #2		
4	S1	Switch	1182DL56C	Pendar	1	1	2	" " " "		
5		Output Connector, Power								
		Supply Board Assembly	BA-013332	DCS	1					
6	R2600	Resistor	EB, 1/2W,	Allen Bradley	1	.2		Used in Item #5		
			5%, 15 ohms							
7	R2601	Resistor	RN60C, 1%,	Ward Leonard	2	.5		" " " "		
			1/4W, 237ohms							
8	R2602	Resistor	RN60C, 1%,	Ward Leonard		.5		" " " "		
			1/4W, 237ohms							
9	R2603	Resistor	RN60C, 1%,	Ward Leonard	1	.5		" " " "		
			1/4W, 1.33 K							
10	C2600	Capacitor	V84B, 200V,	Aerovox	1	.5		" " " "		
			.0033 uf							
11	L2600	Inductor	BA-014062	DCS	1	.5		" " " "		
12		Power Supply Bd. Assembly	GA-013334	DCS	1		1			
13	R2801	Resistor	HM, 4W,	Allen Bradley	2			Used in Item #12		
			47 ohms							
14	R2802	Resistor	CB, 1/4W,	Allen Bradley	4	.2		" " " "		
			10%, 820 ohms							
15	R2803	Resistor	CB, 1/4W,	Allen Bradley		.2		" " " "		
			10%, 820 ohms							
16	R2804	Resistor	RN60C, 1/4W,	Ward Leonard	1	.5		" " " "		
			1%, 10.5 K							
17	R2805	Resistor	HM, 4W,	Allen Bradley				" " " "		
			47 ohms							

*Spares for 1 unit per 10,000 hrs. con't. operation

**Qty. per 10 - 12 units

Table 5-5. Replacement Parts List (continued)

Nomenclature: FM Subcarrier Demodulator

DCS Model GFD-13

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk	Remarks
18	R2806	Resistor	MS35350	CB, 1/4W, 10%, 820 ohms	Allen Bradley	.2		Used in Item #12
19	R2807	Resistor	MS35350	CB, 1/4W, 10%, 820 ohms	Allen Bradley	.2		" " " "
20	R2808	Resistor	MS35350	CB, 1/4W, 10%, 27 K	Allen Bradley	.2		" " " "
21	R2809	Resistor	MS35350	CB, 1/4W, 10%, 1 K	Allen Bradley	.2		" " " "
22	R2810	Resistor	MS35350	RN60C, 1/4W, 1%, 11.5 K	Ward Leonard	.5		" " " "
23	R2811	Resistor	MS35044	GB, 1W, 47 ohms	Allen Bradley	.3		" " " "
24	R2812	Resistor	MS35043	EB, 1/2W, 10%, 10 K	Allen Bradley	.2		" " " "
25	R2813	Resistor	MS35044	GB, 1W, 3.3 K	Allen Bradley	.3		" " " "
26	R2814	Resistor	MS35350	CB, 1/4W, 10%, 33 K	Allen Bradley	.2		" " " "
27	R2815	Resistor	MS35350	RN60C, 1/4W, 1%, 5.62 K	Ward Leonard	.5		" " " "
28	R2816	Resistor	MS35350	RN60C, 1/4W, 1%, 10 K	Ward Leonard	.5		" " " "
29	R2817	Resistor	MS35350	CB, 1/4W, 10%, 1 K	Allen Bradley	.2		" " " "
30	R2818	Resistor	MS35350	RN60C, 1/4W, 1%, 1.78 K	Ward Leonard	.5		" " " "
31	R2819	Resistor		Model 3067, 500 ohms	Trimpot, Bourns	1		" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model		GFD-13		Nomenclature: FM Subcarrier Demodulator		Manufacturer's		Qty/		Spares		Qty/		Remarks	
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Item	Spares Recm*	Qty/Spk								
32	R2820	Resistor	MS35350	RN60C, 1/4W, 1%, 10 K	Ward Leonard	.5						Used in Item #12			
33	R2821	Resistor	MS35350	RN60C, 1/4W, 1%, 16.9 K	Ward Leonard	.5									
34	R2822	Resistor	MS35350	RN60C, 1/4W, 1%, 34.8 K	Ward Leonard	.5									
35	R2823	Resistor	MS35350	CB, 1/4W, 10%, 22 K	Allen Bradley	.2									
36	R2824	Resistor	MS35350	CB, 1/4W, 10%, 18 K	Allen Bradley	.2									
37	R2825	Resistor	MS35350	CB, 1/4W, 10%, 2.2 K	Allen Bradley	.2									
38	R2826	Resistor	MS35350	CB, 1/4W, 10%, 2.2 K	Allen Bradley	.2									
39	R2827	Resistor	MS35350	CB, 1/4W, 10%, F. A. (nom. 100 K)	Allen Bradley	.2									
40	R2828	Resistor		3W, 47ohms	Allen Bradley	1									
41	R2829	Resistor	MS35350	MF5C-D, 1%, 1/4W, 17.8 K	Electra	.5									
42	R2830	Resistor	MS35350	RN60C, 1/4W, 1%, 23.7 K	Ward Leonard	.5									
43	R2831	Resistor	MS35350	RN60C, 1/4W, 1%, 46.4 K	Ward Leonard	.5									
44	R2832	Resistor	MS35350	CB, 1/4W, 10%, 10 K	Allen Bradley	.2									
45	CR2801	Diode		CER69	Solotron	1									
46	CR2802	Diode		CER69	Solotron	1									

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm* Sps	Qty/Spk	Remarks
47	CR2803	Diode	CER69	Soliton		1		Used in Item #12
48	CR2804	Diode	CER69	Soliton		1		" " " "
49	CR2805	Diode	CER69	Soliton		1		" " " "
50	CR2806	Diode	CER69	Soliton		1		" " " "
51	CR2807	Diode	CER69	Soliton		1		" " " "
52	CR2808	Diode	CER69	Soliton		1		" " " "
53	CR2809	Diode	IN708	Cont. Devices	2	1		" " " "
54	CR2810	Diode	IN3067	Cont. Devices	3	1		" " " "
55	CR2811	Diode	IN3067	Cont. Devices		1		" " " "
56	CR2812	Diode	IN708	Cont. Devices		1		" " " "
57	CR2813	Diode	IN3067	Cont. Devices		1		" " " "
58	C2801	Capacitor	30V, 800uf	Mec	2	.5		" " " "
59	C2802	Capacitor	100V, 140 uf	Mec	2	.5		" " " "
60	C2803	Capacitor	APSI45, 20V, IEI	IEI	2	.5		" " " "
			60 uf					
61	C2804	Capacitor	30V, 800uf	Mec		.5		" " " "
62	C2805	Capacitor	100V, 140 uf	Mec		.5		" " " "
63	C2806	Capacitor	APSI45, 20V, IEI	IEI		.5		" " " "
			60 uf					
64	C2808	Capacitor	100V, .1uf	BT, RMC	1	.5		" " " "
65	C2809	Capacitor	75V, 40 uf	Mec	2	.5		" " " "
66	C2810	Capacitor	75V, 40 uf	Mec		.5		" " " "
67	C2811	Capacitor	APSI45, 20V, IEI	IEI	2	.5		" " " "
			60 uf					
68	C2812	Capacitor	APSI45, 20V, IEI	IEI		.5		" " " "
			60 uf					
69	C2813	Capacitor	DM15, 100V, 220 uuf	Durmica	1	.1		" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm* Spk	Remarks
70	Q2801	Transistor	TN53	Sprague	1	1	Used in Item #12
71	Q2802	Transistor	2N3391A	G.E.	5	1	" " " "
72	Q2803	Transistor	2N3638	Fairchild	4	1	" " " "
73	Q2804	Transistor	2N3391A	G.E.		1	" " " "
74	Q2805	Transistor	2N3638	Fairchild		1	" " " "
75	Q2806	Transistor	2N3638	Fairchild		1	" " " "
76	Q2807	Transistor	2N3583	RCA	2	1	" " " "
77	Q2808	Transistor	2N3638	Fairchild		1	" " " "
78	Q2809	Transistor	2N3391A	G.E.		1	" " " "
79	Q2810	Transistor	2N3391A	G.E.		1	" " " "
80	Q2811	Transistor	2N3391A	G.E.		1	" " " "
81	Q2812	Transistor	2N3583	RCA		1	" " " "
82	Q2813	Transistor	SPS1503	Motorola		1	" " " "
83	Q2814	Transistor	SPS1503	Motorola		1	" " " "
84	Q2815	Transistor	SPS1503	Motorola		1	" " " "
85	Q2816	Transistor	SPS1503	Motorola		1	" " " "
86		Power Transistor Bracket					
		Assembly	BD-013537	DCS	1		
87	R2828	Resistor	GM, 3W, 10%, 47 ohms	Allen Bradley	1		Used in Item #86
88		Bracket	BD-013385	DCS	1		
89	Q2807	Transistor	2N3583	RCA	2	1	Used in Item #88
90	Q2812	Transistor	2N3583	RCA		1	" " " "
91		18V Power Supply Bd. Ass'y.	BA-013333	DCS	1		
92	CR2901	Diode	CER69	Solitron	4	1	Used in Item #91
93	CR2902	Diode	CER69	Solitron		1	" " " "
94	CR2903	Diode	CER69	Solitron		1	" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13			Nomenclature: FM Subcarrier Demodulator						
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Sbk**	Remarks	
95	CR2904	Diode	CER69	Solitron		1		Used in Item #91	
96	C2901	Capacitor	BT24-800-30P	Mec	2	.5		" " " "	
			30V, 800 uf						
97	C2902	Capacitor	BT24-800-30P	Mec		.5		" " " "	
			30V, 800 uf						
98		Master Board Assembly	CA-013452	DCS	1		1		
99	P4601	Connector	MS14RM61	Burndy	3			Used in Item #98	
100	P3101	Connector	MS14RM61	Burndy				" " " "	
101	P201	Connector	MS14RM61	Burndy				" " " "	
102	P3501	Connector	MS20RM61	Burndy	1			" " " "	
103	P501	Connector	MS26RM61	Burndy	2			" " " "	
104	P2801	Connector	MS26RM61	Burndy				" " " "	
105		Upper Assembly	BA-013642	DCS	1				
106	R235	Resistor	MS35350	Electra	1	.1		Used in Item #105	
			1/4W, F.A.						
107	SW200	Switch	8002-4	Grayhill	1	1	2	" " " "	
108		Limiter & Input Meter							
		Board Assembly	DA-013506	DCS	1		1		
109	R200	Resistor	CB, 1/4W, 10%, 3.3 K	Allen Bradley	1	.2		Used in Item #108	
110	R201	Resistor	CB, 1/4W, 10%, 6.8 K	Allen Bradley	1	.2		" " " "	
111	R202	Resistor	MF5C-D, 1%, 1/4W, F.A.	Electra	3	.5		" " " "	
112	R203	Resistor	CB, 1/4W, 10%, 1.2 K	Allen Bradley	1	.2		" " " "	
113	R204	Resistor	CB, 1/4W, 10%, 2.2 K	Allen Bradley	2	.2		" " " "	

*Spares for 1 unit per 10,000 hrs. con't. operation

**Qty. per 10 - 12 units

Table 5-5. Replacement Parts List (continued)

DCS Model			GFD-13		Nomenclature: FM Subcarrier Demodulator				
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk	Remarks	
114	R205	Resistor	MS35350	MF5C-D, 1%, 1/4W, 825 ohms	Electra	1	.5	Used in Item #113	
115	R206	Resistor	MS35350	MF5C-D, 1%, 1/4W, 287ohms	Electra	1	.5	" " " "	
116	R207	Resistor	MS35350	MF5C-D, 1%, 1/4W, 23.7 K	Electra	1	.5	" " " "	
117	R208	Resistor	MS35350	CB, 1/4W, 10%, 470 ohms	Allen Bradley	1	.2	" " " "	
118	R209	Resistor	MS35350	CB, 1/4W, 10%, 4.7 K	Allen Bradley	2	.2	" " " "	
119	R210	Resistor	MS35350	MF5C-D, 1%, 1/4W, 750ohms	Electra	1	.5	" " " "	
120	R211	Resistor	MS35350	MF5C-D, 1%, 1/4W, 10 K	Electra	2	.5	" " " "	
121	R212	Resistor	MS35350	MF5C-D, 1%, 1/4W, F.A.	Electra		.5	" " " "	
122	R213	Resistor	MS35350	MF5C-D, 1%, 1/4W, 2.15 K	Electra	1	.5	" " " "	
123	R214	Resistor	MS35350	MF5C-D, 1%, 1/4W, 1.96 K	Electra	2	.5	" " " "	
124	R215	Resistor	MS35350	CB, 1/4W, 10%, 100 ohms	Allen Bradley	5	.2	" " " "	
125	R216	Resistor	MS35350	MF5C-D, 1%, 1/4W, 1.96 K	Electra		.5	" " " "	
126	R217	Resistor	MS35350	MF5C-D, 1%, 1/4W, 681 ohms	Electra	1	.5	" " " "	
127	R218	Resistor	MS35350	CB, 1/4W, 10%, 180 ohms	Allen Bradley	1	.2	" " " "	

*Spares for 1 unit per 10,000 hrs. con't. operation

DCS Model		GFD-13		Nomenclature: FM Subcarrier Demodulator		Manufacturer's		Manufacturer's	Qty/ Item	Spares Recm*	Qty/ Spk	Remarks
Item No.	Symbol No.	Part Description		Part Number	Name							
128	R219	Resistor	MS35350	CB, 1/4W, 10%, 4.7 K	Allen Bradley					.2		Used in Item #113
129	R220	Resistor	MS35350	MF5C-D, 1%, 1/4W, 511ohms	Electra		1			.5		" " " "
130	R221	Resistor	MS35350	MF5C-D, 1%, 1/4W, 10 K	Electra					.5		" " " "
131	R222	Resistor	MS35350	CB, 1/4W, 10%, 100 ohms	Allen Bradley					.2		" " " "
132	R223	Resistor	MS35350	MF5C-D, 1%, 1/4W, 1.47 K	Electra		1			.5		" " " "
133	R224	Resistor	MS35350	CB, 1/4W, 10%, 100 ohms	Allen Bradley					.2		" " " "
134	R225	Resistor	MS35350	CB, 1/4W, 10%, 100 ohms	Allen Bradley					.2		" " " "
135	R226	Resistor	MS35350	MF5C-D, 1%, 1/4W, 46.4ohms	Electra		1			.5		" " " "
136	R227	Resistor	MS35350	CB, 1/4W, 10%, 1.5 K	Allen Bradley		1			.2		" " " "
137	R228	Resistor	MS35350	CB, 1/4W, 10%, 100 ohms	Allen Bradley					.2		" " " "
138	R229	Resistor	MS35350	CB, 1/4W, 10%, 10 K	Allen Bradley		3			.2		" " " "
139	R230	Resistor	MS35350	CB, 1/4W, 10%, 1 K	Allen Bradley		1			.2		" " " "
140	R231	Resistor	MS35350	MF5C-D, 1%, 1/4W, F. A.	Electra					.5		" " " "
141	R232	Resistor	MS35350	CB, 1/4W, 10%, 10 K	Allen Bradley					.2		" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13

Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm* Spk	Remarks
142	R233	Resistor	MS35350	Allen Bradley		.2	Used in Item #113
			10%, 10 K				
143	R234	Resistor	MS35350	Allen Bradley		.2	" " " "
			10%, 2.2 K				
144	Q200	Transistor	2N3856A	G. E.	9	1	" " " "
145	Q201	Transistor	2N3856A	G. E.		1	" " " "
146	Q202	Transistor	2N3856A	G. E.		1	" " " "
147	Q203	Transistor	2N3856A	G. E.		1	" " " "
148	Q204	Transistor	2N3856A	G. E.		1	" " " "
149	Q205	Transistor	2N3856A	G. E.		1	" " " "
150	Q206	Transistor	2N3856A	G. E.		1	" " " "
151	Q207	Transistor	2N3856A	G. E.		1	" " " "
152	Q208	Transistor	2N3856A	G. E.		1	" " " "
153	CR200	Diode	CTP700A	Clevite	2	1	" " " "
154	CR201	Diode	CTP700A	Clevite		1	" " " "
155	CR202	Diode	28J2	G. E.	4	1	" " " "
156	CR203	Diode	28J2	G. E.		1	" " " "
157	CR204	Diode	28J2	G. E.		1	" " " "
158	CR205	Diode	28J2	G. E.		1	" " " "
159	CR206	Diode	IN3067	Cont. Devices	4	1	" " " "
160	CR207	Diode	IN3067	Cont. Devices		1	" " " "
161	CR208	Diode	IN3067	Cont. Devices		1	" " " "
162	CR209	Diode	IN3067	Cont. Devices		1	" " " "
163	C200	Capacitor	101DOS, 20V, +20%, -0%, 30 uf	Gentronics	5	.5	" " " "
164	C201	Capacitor	APS-54, 1.5V, EI		5	.5	" " " "
			25 uf				

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm* Spk	Qty/Spk	Remarks
165	C202	Capacitor	5C13, 25 V,	Sprague	2	.5		Used in Item #113
			1 uf					
166	C203	Capacitor	101DDS, 20V,	Gentronics		.5		" " " "
			+20%, -0%, 30 uf					
167	C204	Capacitor	DM10, 100V,	Durmica	2	.1		" " " "
			22 uuf					
168	C205	Capacitor	APS054, 15V,	IEI		.5		" " " "
			25 mf					
169	C206	Capacitor	DM-10, 12mmf	Durmica	1	.1		" " " "
170	C208	Capacitor	DM-10, 93mmf	Durmica	1	.1		" " " "
171	C209	Capacitor	101DDS, 30mf	Gentronics		.5		" " " "
			20V ^{+20%} ₋₀					
172	C210	Capacitor	APS054, 15V,	IEI		.5		" " " "
			25mf					
173	C211	Capacitor	5C11, 25V,	Sprague	1	.5		" " " "
			47 mf					
174	C212	Capacitor	BT, 100V,	RMC	3	.5		" " " "
			.1 mf					
175	C213	Capacitor	101DDS, 30mf	Gentronics		.5		" " " "
			20V ^{+20%} ₋₀					
176	C214	Capacitor	DM-10, 130mmf	Durmica	1	.1		" " " "
177	C215	Capacitor	DM-10, 22mmf	Durmica		.1		" " " "
178	C216	Capacitor	APS054, 15V,	IEI		.5		" " " "
			25 mf					
179	C217	Capacitor	BT, 100V,	RMC		.5		" " " "
			.1 mf					
180	C218	Capacitor	APS054, 15V,	IEI		.5		" " " "
			25 mf					

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

Nomenclature: FM Subcarrier Demodulator

DCS Model GFD-13

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk**	Remarks
181	C219	Capacitor	5C13, 25V, 1 mf	Sprague		.5		Used in Item #113
182	C220	Capacitor	APS067, 50V, 8 mf	IEI	3	.5		" " " "
183	C221	Capacitor	APS067, 50V, 8 mf	IEI		.5		" " " "
184	C222	Capacitor	APS067, 50V, 8 mf	IEI		.5		" " " "
185	C223	Capacitor	BT, 100V, .1 mf	RMC		.5		" " " "
186	C224	Capacitor	101DDS, 30mf +20% 20V -0	Gentronics		.5		" " " "
187	L200	Coil	2500-28, 1mh	Delevan	3	.5		" " " "
188	L201	Coil	2500-28, 1mh	Delevan		.5		" " " "
189	L202	Coil	2500-28, 1mh	Delevan		.5		" " " "
190		Assembly, Lower	BA-013643	DCS	1			
191	R600	Potentiometer, Output 500ohm	BD-007954	DCS (I. R. C.)	1	1	1	Used in Item #190
192	R601	Resistor	MF5C--D, 1/4 W, 1%, 316 OHMS	DCS	1	.2		" " " "
193		Board Assembly, VCO	GA-013547	DCS	1		1	
194	R500	Resistor	RN60C, 1/4W, 12.1KC, 1%	Ward Leonard	2	.5		Used in Item #193 (MS35350)
195	R501	Resistor	RN60C, 1/4W, 5.11K, 1%	Ward Leonard	2	.5		" " " " (MS35350)
196	R502	Resistor	CB, 1/4W, 10%, 100K	Allen Bradley	2	.2		" " " " (MS35350)
197	R503	Resistor	MF5C-D, 1/4W, 10K, 1%	Electra	2	.5		" " " " (MS35350)
198	R504	Resistor	RN60C, 1/4W, 5.62K, 1%	Ward Leonard	2	.5		" " " " (MS35350)
199	R505	Resistor	MF5C-D, 1/4W, 100K, 1%	Electra	3	.5		" " " " (MS35350)

*Spares for 1 unit per 10,000 hrs. con't. operation

**Qty. per 10 - 12 units

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Reem*	Qty/Spk	Remarks
200	R506	Resistor MF5C-D, 1/4W	1K, 1%	Electra	2	.5		Used in Item #193 (MS35350)
201	R507	Resistor RN60C, 1/4W	14K, 1%	Ward Leonard	3	.5		" " " " (MS35350)
202	R508	Resistor MF5C-D, 1/4W	FA, 1% ^{nom.} 147ohm	Electra	2	.5		" " " " (MS35350)
203	R509	Resistor RN60C, 1/4W	10K, 1%	Ward Leonard	2	.5		" " " " (MS35350)
204	R510	Resistor RN60C, 1/4W	10K, 1%	Ward Leonard		.5		" " " " (MS35350)
205	R511	Resistor MF5C-D, 1/4W	FA, 1% ^{nom.} 147ohm	Electra		.5		" " " " (MS35350)
206	R512	Resistor RN60C, 1/4W	14.0K, 1%	Ward Leonard		.5		" " " " (MS35350)
207	R513	Resistor MF5C-D, 1/4W	100K, 1%	Electra		.5		" " " " (MS35350)
208	R514	Resistor RN60C, 1/4W	5.62K	Ward Leonard		.5		" " " " (MS35350)
209	R515	Resistor MF5C-D, 1/4W	10K, 1%	Electra		.5		" " " " (MS35350)
210	R516	Resistor CB, 1/4W, 10%	100K	Allen Bradley		.2		" " " " (MS35350)
211	R517	Resistor MF5C-D, 1/4W	1K, 1%	Electra		.5		" " " " (MS35350)
212	R518	Resistor RN60C, 1/4W	14K, 1%	Ward Leonard		.5		" " " " (MS35350)
213	R519	Resistor RN60C, 1/4W	13.3K 1%	Ward Leonard	2	.5		" " " " (MS35350)
214	R520	Resistor MF5C-D, 1/4W	100K, 1%	Electra		.5		" " " " (MS35350)
215	R521	Resistor WLC60-T2, 1/4W	10K, 1%	Ward Leonard	2	.5		" " " " (MS35350)
216	R522	Resistor WLC60-T2, 1/4W	10K, 1%	Ward Leonard		.5		" " " " (MS35350)
217	R523	Resistor MF5C-D, 1/4W	13.3K, 1%	Electra		.5		" " " " (MS35350)
218	R524	Resistor RN60C, 1/4W	5.11K, 1%	Ward Leonard		.5		" " " " (MS35350)
219	R525	Resistor CB, 1/4W, 10%	1K	Allen Bradley	1	.2		" " " " (MS35350)
220	R526	Resistor RN60C, 1/4W	12.1K, 1%	Ward Leonard		.5		" " " " (MS35350)
221	R527	Resistor RN60C, 1/4W	33.2K, 1%	Ward Leonard	1	.5		" " " " (MS35350)
222	R528	Resistor RN60C, 1/4W	301K, 1%	Ward Leonard	1	.5		" " " " (MS35350)
223	R529	Resistor RN60C, 1/4W	619 OHMS, 1%	Ward Leonard	1	.5		" " " " (MS35350)
224	R530	Resistor RN60C, 1/4W	17.8K, 1%	Ward Leonard	1	.5		" " " " (MS35350)
225	R531	Resistor	Model 3067	Trimpot	1	1		" " " " (MS35350)
			2K	Bourns				

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model			GFD-13		Nomenclature: FM Subcarrier Demodulator						
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk	Remarks			
226	CR500	Diode	1N3067	Cont. Devices	2	1		Used in Item #193			
227	CR501	Diode	1N3067	Cont. Devices		1		" " " "			
228	Q500	Transistor	2N3856A	G.E.	20	1		" " " "			
229	Q501	Transistor	2N3856A	G.E.		1		" " " "			
230	Q502	Transistor	2N3856A	G.E.		1		" " " "			
231	Q503	Transistor	2N3856A	G.E.		1		" " " "			
232	Q504	Transistor	2N3856A	G.E.		1		" " " "			
233	Q505	Transistor	SPS1503	Motorola	8	1		" " " "			
234	Q506	Transistor	SPS1503	Motorola		1		" " " "			
235	Q507	Transistor	2N3856A	G.E.		1		" " " "			
236	Q508	Transistor	2N3856A	G.E.		1		" " " "			
237	Q509	Transistor	2N3856A	G.E.		1		" " " "			
238	Q510	Transistor	2N3856A	G.E.		1		" " " "			
239	Q511	Transistor	2N3856A	G.E.		1		" " " "			
240	Q512	Transistor	2N3856A	G.E.		1		" " " "			
241	Q513	Transistor	2N3856A	G.E.		1		" " " "			
242	Q514	Transistor	2N3856A	G.E.		1		" " " "			
243	Q515	Transistor	2N3856A	G.E.		1		" " " "			
244	Q516	Transistor	2N3856A	G.E.		1		" " " "			
245	Q517	Transistor	2N3856A	G.E.		1		" " " "			
246	Q518	Transistor	SPS1503	Motorola		1		" " " "			
247	Q519	Transistor	SPS1503	Motorola		1		" " " "			
248	Q520	Transistor	2N3856	G.E.		1		" " " "			
249	Q521	Transistor	SPS1503	Motorola		1		" " " "			
250	Q522	Transistor	SPS1503	Motorola		1		" " " "			
251	Q523	Transistor	SPS1503	Motorola		1		" " " "			
252	Q524	Transistor	SPS1503	Motorola		1		" " " "			

*Spares for 1 unit per 10,000 hrs. cont. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13

Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm* Sbk	Qty/ Sbk	Remarks
253	Q525	Transistor	2N3856A	G.E.		1		Used in Item #193
254	Q526	Transistor	2N3638	Fairchild	2	1		" " " "
255	Q527	Transistor	2N3638	Fairchild		1		" " " "
256	Q528	Transistor	2N3856A	G.E.		1		" " " "
257	Q529	Transistor	2N3856A	G.E.		1		" " " "
258	R300	Resistor	MF5C-D, 1/4W, 1%, 38.3ohms	Electra	1	.5		" " " " (MS35350)
259	R301	Resistor	MF5C-D, 1/4W, 1%, 12.1ohms	Electra	1	.5		" " " " (MS35350)
260	R302	Resistor	MF5C-D, 1/4W, 46.4 ohms, 1%	Electra	1	.5		" " " " (MS35350)
261	R303	Resistor	CB, 1/4W, 10%, 1K	Allen Bradley	3	.2		" " " " (MS35350)
262	R304	Resistor	CB, 1/4W, 10%, 4.7K	Allen Bradley	2	.2		" " " " (MS35350)
263	R305	Resistor	MF5C-D, 1/4W, 1%, 562ohms	Electra	1	.5		" " " " (MS35350)
264	R306	Resistor	CB, 1/4W, 10%, 100 ohms	Allen Bradley	2	.2		" " " " (MS35350)
265	R307	Resistor	CB, 1/4W, 10%, 5.6K	Allen Bradley	1	.2		" " " " (MS35350)
266	R308	Resistor	CB, 1/4W, 10%, 1.8K	Allen Bradley	1	.2		" " " " (MS35350)
267	R309	Resistor	CB, 1/4W, 10%, 1K	Allen Bradley	1	.2		" " " " (MS35350)
268	R310	Resistor	MF5C-D, 1/4W, 1%, 31.6 K	Electra	1	.5		" " " " (MS35350)
269	R311	Resistor	MF5C-D, 1/4W, 1%, 348ohms	Electra	2	.5		" " " " (MS35350)
270	R312	Resistor	MF5C-D, 1/4W, 1%, 348ohms	Electra		.5		" " " " (MS35350)
271	R313	Resistor	MF5C-D, 1/4W, 1%, 825ohms	Electra	1	.5		" " " " (MS35350)
272	R314	Resistor	MF5C-D, 1/4W, 1%, 4.22K	Electra	1	.5		" " " " (MS35350)
273	R315	Resistor	CB, 1/4W, 10%, 1 K	Allen Bradley		.2		" " " " (MS35350)
274	R316	Resistor	CB, 1/4W, 10%, 4.7K	Allen Bradley		.2		" " " " (MS35350)
275	R317	Resistor	CB, 1/4W, 10%, 100ohms	Allen Bradley		.2		" " " " (MS35350)
276	C300	Capacitor	101DDS, 30mf 20V ^{+20%} _{-60%}	Gentronics	1	.5		" " " "
277	C301	Capacitor	APS054, 15V, 25mf	IEI	2	.5		" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model		GFD-13	Nomenclature: FM Subcarrier Demodulator					
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Sok	Remarks
278	C302	Capacitor	APS054, 15V, 25 mf	IEI		.5		Used in Item #193
279	C303	Capacitor	APS065, 20V, 25 mf	IEI	1	.5		" " " "
280	CR300	Diode	28J2	G.E.	4	1		" " " "
281	CR301	Diode	28J2	G.E.		1		" " " "
282	CR302	Diode	28J2	G.E.		1		" " " "
283	CR303	Diode	28J2	G.E.		1		" " " "
284	Q300	Transistor	2N3856A	G.E.	5	1		" " " "
285	Q301	Transistor	2N3856A	G.E.		1		" " " "
286	Q302	Transistor	2N3856A	G.E.		1		" " " "
287	Q303	Transistor	2N3856A	G.E.		1		" " " "
288	Q304	Transistor	2N3856A	G.E.		1		" " " "
289	R400	Resistor	CB, 1/4W,10%, 100 ohms	Allen Bradley	3	.2		" " " " (MS35350)
290	R401	Resistor	CB, 1/4W,10%, 22K	Allen Bradley	2	.2		" " " " (MS35350)
291	R402	Resistor	CB, 1/4W,10%, 2.2K	Allen Bradley	2	.2		" " " " (MS35350)
292	R403	Resistor	MF5C-D, 1/4W 1%, 26.1K	Electra	1	.5		" " " " (MS35350)
293	R404	Resistor	MF5C-D, 1/4W 1%, 14.7K	Electra	2	.5		" " " " (MS35350)
294	R405	Resistor	MF5C-D, 1/4W 1%, 5.62K	Electra	1	.5		" " " " (MS35350)
295	R406	Resistor	MF5C-D, 1/4W 1%, 4.64K	Electra	1	.5		" " " " (MS35350)
296	R407	Resistor	CB, 1/4W,10%, 110 K	Allen Bradley	1	.2		" " " " (MS35350)
297	R408	Resistor	CB, 1/4W,10%, 21.5 K	Allen Bradley	2	.2		" " " " (MS35350)
298	R409	Resistor	MF5C-D, 1/4W, 7.5K, 1%	Electra	1	.5		" " " " (MS35350)
299	R410	Resistor	MF5C-D, 1/4W, 1%, 5.62K	Electra	1	.5		" " " " (MS35350)
300	R411	Resistor	CB, 1/4W, 10%, 2.2 K	Allen Bradley		.2		" " " " (MS35350)
301	R412	Resistor	CB, 1/4W, 10%, 12K	Allen Bradley	1	.2		" " " " (MS35350)
302	R413	Resistor	MF5C-D, 1/4W, 1%, 14.7K	Electra		.5		" " " " (MS35350)

*Spares for 1 unit per 10,000 hrs. con't. operation

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk	Remarks
303	R414	Resistor CB, 1/4W,10%,	1K	Allen Bradley	1	.2		Used in Item #193 (MS35350)
304	R415	Resistor MF5C-D, 1/4W	1%, 21.5K	Electra		.5		" " " " (MS35350)
305	R416	Resistor MF5C-D, 1/4W	1%, 46.4K	Electra	2	.5		" " " " (MS35350)
306	R417	Resistor CB, 1/4W,10%,	100 ohms	Allen Bradley		.2		" " " " (MS35350)
307	R418	Resistor MF5C-D, 1/4W	1%, 46.4K	Electra		.5		" " " " (MS35350)
308	R419	Resistor MF5C-D, 1/4W	1%, 5.11K	Electra	1	.5		" " " " (MS35350)
309	R420	Resistor	Model 3067	Trimpot	1	1		" " " " "
			2K	Bourns				
310	R421	Resistor CB, 1/4W,10%,	22K	Allen Bradley		.2		" " " " (MS35350)
311	R422	Resistor CB, 1/4W,10%,	100 ohms	Allen Bradley		.2		" " " " (MS35350)
312	R423	Resistor CB, 1/4W,10%,	47 ohms	Allen Bradley	1	.2		" " " " (MS35350)
313	C400	Capacitor	APS065, 20V,	IEI	2	.5		" " " " "
			25 mf					
314	C401	Capacitor	SMTU450,	Illinois	1	.5		" " " " "
			50 V, 4 uf					
315	C402	Capacitor	APS054, 15V,	IEI	1	.5		" " " " "
			25mf					
316	C403	Capacitor	DM-10, 10 pf	Durmica	1	.1		" " " " "
317	Q402A	Transistor	SPS1503	Motorola	4	.1		" " " " "
318	C405	Capacitor	101D, 20or25V,	Gentronics	1	.5		" " " " "
			30 mf					
319	C406	Capacitor	APS147, 50V,	IEI	1	.5		" " " " "
			20 mf					
320	C407	Capacitor	DM-10, 68mmf	Durmica	1	.1		" " " " "
321	C408	Capacitor	BT, .1mf	RMC	1	.5		" " " " "
322	C409	Capacitor	75V, 28 mf	MEC	1	.5		" " " " "
323	C410	Capacitor	APS065, 20V, 25 mf	IEI		.5		" " " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model										GFD-13										Nomenclature: FM Subcarrier Demodulator									
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm**	Qty/Spk**	Remarks																					
324	CR400	Diode	1N3067	Cont. Devices	7	1		Used in Item #193																					
325	CR401	Diode	1N3067	Cont. Devices		1		" " " "																					
326	CR402	Diode	1N3067	Cont. Devices		1		" " " "																					
327	CR403	Diode	1N3067	Cont. Devices		1		" " " "																					
328	CR404	Diode	1N3067	Cont. Devices		1		" " " "																					
329	CR405	Diode	1N3067	Cont. Devices		1		" " " "																					
330	CR406	Diode	1N3067	Cont. Devices		1		" " " "																					
331	CR407	Diode	1N708	Cont. Devices	1	1		" " " "																					
332	Q400	Transistor	2N3391A	G.E.	3	1		" " " "																					
333	Q401	Transistor	SPS1503	Motorola		1		" " " "																					
334	Q402	Transistor	SPS1503	Motorola		1		" " " "																					
335	Q403	Transistor	2N3856A	G.E.	9	1		" " " "																					
336	Q404	Transistor	2N3856A	G.E.		1		" " " "																					
337	Q405	Transistor	2N3391A	G.E.		1		" " " "																					
338	Q406	Transistor	2N3391A	G.E.		1		" " " "																					
339	Q407	Transistor	SPS1503	Motorola		1		" " " "																					
340	Q408	Transistor	2N3856A	G.E.		1		" " " "																					
341	Q409	Transistor	2N3856A	G.E.		1		" " " "																					
342	Q410	Transistor	2N3856A	G.E.		1		" " " "																					
343	Q411	Transistor	2N3856A	G.E.		1		" " " "																					
344	Q412	Transistor	2N3856A	G.E.		1		" " " "																					
345	Q413	Transistor	2N3856A	G.E.		1		" " " "																					
346	Q414	Transistor	2N3856A	G.E.		1		" " " "																					
347	C600	Capacitor	DM-10, 470mmf	Durmica	1	.1		" " " "																					
348	DS400	Lamp, Brite-Eye, red	62	Cal-Glo	1			" " " "																					
349		Board Assembly, Output	TA-013497	DCS	1		1																						
		Amplifier																											

*Spares for 1 unit per 10,000 hrs. con't. operation

**Qty. per 10 - 12 units

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm * Spk	Qty/ Spk	Remarks
350	R1600	Resistor	RN60C, T2,	Ward Leonard	1	.5		Used in Item #349
			61.9 ohms					
351	R1601	Resistor	CB, 1/4W, 10%,	Allen Bradley	2	.2		" " " "
352	R1602	Resistor	CB, 1/4W, 10%,	Allen Bradley	1	.2		" " " "
353	R1603	Resistor	CB, 1/4W, 10%,	Allen Bradley	2	.2		" " " "
354	R1604	Resistor	CB, 1/4W, 10%,	Allen Bradley	3	.2		" " " "
355	R1605	Resistor	CB, 1/4W, 10%,	Allen Bradley	3	.2		" " " "
356	R1607	Resistor	CB, 1/4W, 10%,	Allen Bradley		.2		" " " "
357	R1608	Resistor	CB, 1/4W, 10%,	Allen Bradley		.2		" " " "
358	R1609	Resistor	CB, 1/4W, 10%,	Allen Bradley		.2		" " " "
359	R1610	Resistor	1.5W, 1%, 27 ohms	MEPCO	2	.5		" " " "
360	R1611	Resistor	CB, 1/4W, 10%,	Allen Bradley	4	.2		" " " "
361	R1612	Resistor	EB, 1/2W, 10%, 10 ohms	Allen Bradley	2	.2		" " " " (MS35043)
362	R1613	Resistor	EB, 1/2W, 10%, 10 ohms	Allen Bradley		.2		" " " " (MS35043)
363	R1614	Resistor	1.5W, 1%, 27 ohms	MEPCO		.5		" " " "
364	R1615	Resistor	CB, 1/4W, 10%,	Allen Bradley	4	.2		" " " " (MS35350)
365	R1616	Resistor	CB, 1/4W, 10%,	Allen Bradley		.2		" " " " (MS35350)
366	R1617	Resistor	CB, 1/4W, 10%,	Allen Bradley	1	.2		" " " " (MS35350)
367	R1618	Resistor	CB, 1/4W, 10%,	Allen Bradley	1	.2		" " " " (MS35350)
368	R1619	Resistor	CB, 1/4W, 10%,	Allen Bradley		.2		" " " " (MS35350)
369	R1620	Resistor	CB, 1/4W, 10%,	Allen Bradley	1	.2		" " " " (MS35350)
370	R1621	Resistor	CB, 1/4W, 10%,	Allen Bradley	3	.2		" " " " (MS35350)
371	R1622	Resistor	CB, 1/4W, 10%,	Allen Bradley		.2		" " " " (MS35350)

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model			GFD-13		Nomenclature: FM Subcarrier Demodulator				
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk	Remarks	
372	R1623	Resistor CB, 1/4W,10%, 3.3K		Allen Bradley	1	.2		Used in Item #349 (MS35350)	
373	R1625	Resistor CB, 1/4W,10%, 22K		Allen Bradley	9	.2		" " " " (MS35350)	
374	R1627	Resistor CB, 1/4W,10%, 22K		Allen Bradley		.2		" " " " (MS35350)	
375	R1628	Resistor CB, 1/4W,10%, 2.2K		Allen Bradley		.2		" " " " (MS35350)	
376	R1629	Resistor CB, 1/4W,10%, 22K		Allen Bradley		.2		" " " " (MS35350)	
377	R1630	Resistor CB, 1/4W,10%, 1K		Allen Bradley		.2		" " " " (MS35350)	
378	R1631	Resistor CB, 1/4W,10%, 12K		Allen Bradley		.2		" " " " (MS35350)	
379	R1632	Resistor CB, 1/4W,10%, 5.6K		Allen Bradley	1	.2		" " " " (MS35350)	
380	R1633	Resistor CB, 1/4W,10%, 1M		Allen Bradley	1	.2		" " " " (MS35350)	
381	R1634	Resistor CB, 1/4W,10%, 82K		Allen Bradley		.2		" " " " (MS35350)	
382	R1635	Resistor CB, 1/4W,10%, 10K		Allen Bradley	1	.2		" " " " (MS35350)	
383	R1636	Resistor CB, 1/4W,10%, 47K		Allen Bradley	3	.2		" " " " (MS35350)	
384	R1637	Resistor CB, 1/4W,10%, 33K		Allen Bradley	3	.2		" " " " (MS35350)	
385	R1638	Resistor CB, 1/4W,10%, 1.8M FA		Allen Bradley	1	.2		" " " " (MS35350)	
386	R1639	Resistor CB, 1/4W,10%, 33K		Allen Bradley		.2		" " " " (MS35350)	
387	R1640	Resistor CB, 1/4W,10%, 33K		Allen Bradley		.2		" " " " (MS35350)	
388	R1641	Resistor CB, 1/4W,10%, 1K		Allen Bradley		.2		" " " " (MS35350)	
389	R1642	Resistor CB, 1/4W,10%, 15K		Allen Bradley	1	.2		" " " " (MS35350)	
390	R1643	Resistor CB, 1/4W,10%, 47 ohms		Allen Bradley	1	.2		" " " " (MS35350)	
391	R1644	Resistor CB, 1/4W,10%, 22K		Allen Bradley		.2		" " " " (MS35350)	
392	R1645	Resistor CB, 1/4W,10%, 18K		Allen Bradley	1	.2		" " " " (MS35350)	
393	R1646	Resistor CB, 1/4W,10%, 22K		Allen Bradley		.2		" " " " (MS35350)	
394	R1647	Resistor CB, 1/4W,10%, 220 ohms		Allen Bradley	1	.2		" " " " (MS35350)	
395	R1648	Resistor CB, 1/4W,10%, 39K		Allen Bradley	1	.2		" " " " (MS35350)	
396	R1649	Resistor CB, 1/4W,10%, 1K		Allen Bradley		.2		" " " " (MS35350)	
397	R1650	Resistor CB, 1/4W,10%, 12K		Allen Bradley	1	.2		" " " " (MS35350)	
398	R1651	Resistor CB, 1/4W,10%, 22K		Allen Bradley		.2		" " " " (MS35350)	

*Spares for 1 unit per 10,000 hrs. con't. operation

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Sok	Remarks
399	R1652	Resistor CB, 1/4W,10%, 47K	47K	Allen Bradley		.2		Used in Item #349 (MS35350)
400	R1653	Resistor CB, 1/4W,10%, 22K	22K	Allen Bradley		.2		" " " " (MS35350)
401	R1654	Resistor CB, 1/4W,10%, 6.8m	F.A.	Allen Bradley	1	.2		" " " " (MS35350)
402	R1655	Resistor CB, 1/4W,10%, 150K	150K	Allen Bradley	1	.2		" " " " (MS35350)
403	R1656	Resistor CB, 1/4W,10%, 470 ohms	470 ohms	Allen Bradley	1	.2		" " " " (MS35350)
404	R1657	Resistor CB, 1/4W,10%, 22K	22K	Allen Bradley		.2		" " " " (MS35350)
405	R1658	Resistor CB, 1/4W,10%, 22K	22K	Allen Bradley		.2		" " " " (MS35350)
406	R1659	Resistor CB, 1/4W,10%, 47K	47K	Allen Bradley		.2		" " " " (MS35350)
407	R1660	Resistor CB, 1/4W,10%, 3.9K	3.9K	Allen Bradley	1	.2		" " " " (MS35350)
408	R1661	Resistor	MF5C, 1/4W 1%, 12.10K	Electra	2	.5		" " " " (MS35350)
409	R1662	Resistor	MF5C, 1/4W 1%, 34.80K	Electra	1	.5		" " " " (MS35350)
410	R1663	Resistor	MF5C, 1/4W 1%, 12.10K	Electra		.5		" " " " (MS35350)
411	R1664	Resistor	MF5C, 1/4W 1%, 51.10K	Electra	1	.5		" " " " (MS35350)
412	CR1602	Diode	1N3067	Cont. Devices	15	1		" " " " "
413	CR1603	Diode	1N3067	Cont. Devices		1		" " " " "
414	CR1604	Diode	1N3067	Cont. Devices		1		" " " " "
415	CR1605	Diode	28J2	G.E.	2	1		" " " " "
416	CR1606	Diode	28J2	G.E.		1		" " " " "
417	CR1607	Diode	1N3067	Cont. Devices		1		" " " " "
418	CR1608	Diode	1N3067	Cont. Devices		1		" " " " "
419	CR1609	Diode	1N3067	Cont. Devices		1		" " " " "
420	CR1610	Diode	1N3067	Cont. Devices		1		" " " " "
421	CR1611	Diode	1N3067	Cont. Devices		1		" " " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm * Sbk	Qty/ Sbk	Remarks
422	CR1612	Diode	1N3067	Cont. Devices		1		Used in Item #349
423	CR1613	Diode	1N3067	Cont. Devices		1		" " " "
424	CR1614	Diode	1N3067	Cont. Devices		1		" " " "
425	CR1615	Diode	1N3067	Cont. Devices		1		" " " "
426	CR1616	Diode	1N3067	Cont. Devices		1		" " " "
427	CR1617	Diode	1N3067	Cont. Devices		1		" " " "
428	CR1618	Diode	1N3067	Cont. Devices		1		" " " "
429	CR1619	Diode	1N724	Cont. Devices		1		" " " "
430	C1600	Capacitor	DM-10, 221 mmf	Durmica	1	.1		" " " "
431	C1601	Capacitor	DM-10 100 mmf	Durmica	1	.1		" " " "
432	C1602	Capacitor	DM-15 562 mmf	Durmica	1	.1		" " " "
433	C1604	Capacitor	DM-10 150 mmf	Durmica	2	.1		" " " "
434	C1605	Capacitor	DM-10 150 mmf	Durmica		.1		" " " "
435	C1606	Capacitor	150D474 x 0020A2	Sprague	2	.5		" " " "
			35V, $\pm 20\%$, .47 mf					
436	C1607	Capacitor	150D474 x 0020A2	Sprague		.5		" " " "
			35V, $\pm 20\%$.47 mf					
437	C1608	Capacitor	BT 100V, .01 mf	RMC	3	.5		" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model GFD-13 Nomenclature: FM Subcarrier Demodulator

Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*/Spk	Remarks
438	C1609	Capacitor	APS066, 25V, 20 mf	IEI	5	.5	Used in Item #349
439	C1610	Capacitor	DM-10 15 mmf	Durmica	1	.1	" " " "
440	C1611	Capacitor	DM-10 22 mmf	Durmica	2	.1	" " " "
441	C1612	Capacitor	DM-10 33 mmf	Durmica	2	.1	" " " "
442	C1613	Capacitor	DM-10 33 mmf	Durmica	1	.1	" " " "
443	C1614	Capacitor	DM-10 47 mmf	Durmica	2	.1	" " " "
444	C1616	Capacitor	.01 mf BT	RMC		.5	" " " "
445	C1617	Capacitor	APS066, 25V 20 mf	IEI		.5	" " " "
446	C1618	Capacitor	DM-10, 33 mmf	Durmica		.1	" " " "
447	C1619	Capacitor	DM-10 47 mmf	Durmica		.1	" " " "
448	C1620	Capacitor	APS105, 20V 10 mf	IEI	1	.5	" " " "
449	C1621	Capacitor	DM-10 22 mmf	Durmica		.1	" " " "
450	C1622	Capacitor	APS066, 25V, 20 mf	IEI		.5	" " " "
451	C1623	Capacitor	BT, .005 mf	RMC	2	.5	" " " "
452	C1624	Capacitor	APS147, 20mf 50V	IEI	3	.5	" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model		GFD-13	Nomenclature: FM Subcarrier Demodulator		Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Spares Recm*	Qty/Spk	Remarks
Item No.	Symbol No.										
453	C1625	Capacitor				DM10, 62mmf	Durmica	1	.1		Used in Item #349
454	C1626	Capacitor				101DDS, 20V, +20%, -0, 30 uf	Gentronics	1	.5		" " " "
455	C1627	Capacitor				APS066, 25V, IEI	IEI		.5		" " " "
456	C1628	Capacitor				20 uf					
457	C1629	Capacitor				BT, .025 uf	RMC	1	.5		" " " "
						APS066, 25V, IEI	IEI		.5		" " " "
458	C1630	Capacitor				20 mf					
459	C1631	Capacitor				BT, .005 mf	RMC		.5		" " " "
						APS147, 50V, IEI	IEI		.5		" " " "
460	C1632	Capacitor				20 mf					
						50V, 20%, .15 mf	Semcor	1	.5		" " " "
461	C1633	Capacitor				BT, .01 mf	RMC		.5		" " " "
462	C1634	Capacitor				APS147, 50V, IEI	IEI		.5		" " " "
463	C1635	Capacitor				20 mf					
464	C1636	Capacitor				DM10, 100uuf	Durmica	2	.1		" " " "
465	C1637	Capacitor				DM10, 100uuf	Durmica		.1		" " " "
466	Q1602	Transistor			150D, 35V,	20%, 1 mf	Sprague	1	.5		" " " "
						2N3133	Motorola	2	1		" " " "
467	Q1603	Transistor				TN53	Sprague	2	1		" " " "
468	Q1604	Transistor				2N3133	Motorola		1		" " " "
469	Q1605	Transistor				2N2218	Motorola	1	1		" " " "
470	Q1606	Transistor				SPS1503	Motorola	2	1		" " " "
471	Q1607	Transistor				2N3856A	G.E.	2	1		" " " "
472	Q1608	Transistor				SPS1503	Motorola		1		" " " "
473	Q1609	Transistor				TN53	Sprague		1		" " " "

*Spares for 1 unit per 10,000 hrs. con't. operation

Table 5-5. Replacement Parts List (continued)

DCS Model		GFD-13		Nomenclature: FM Subcarrier Demodulator		Qty/		Spares		Qty/		Remarks	
Item No.	Symbol No.	Part Description	Manufacturer's Part Number	Manufacturer's Name	Qty/Item	Recm*	Qty/Sbk**	Recm*	Qty/Sbk**	Recm*	Qty/Sbk**	Remarks	Qty/Sbk**
474	Q1611	Transistor	2N3638	Fairchild	2	1	1	1	1	1	1	Used in Item #349	1
475	Q1612	Transistor	2N3856A	G. E.		1	1	1	1	1	1	" " " "	1
476	Q1613	Transistor	2N3391A	G. E.	3	1	1	1	1	1	1	" " " "	1
477	Q1614	Transistor	2N3391A	G. E.		1	1	1	1	1	1	" " " "	1
478	Q1615	Transistor	T2456	Sprague	2	1	1	1	1	1	1	" " " "	1
479	Q1616	Transistor	2N3877	G. E.	1	1	1	1	1	1	1	" " " "	1
480	Q1617	Transistor	2N3638	Fairchild		1	1	1	1	1	1	" " " "	1
481	Q1618	Transistor	2N3391A	G. E.		1	1	1	1	1	1	" " " "	1
482	Q1619	Transistor	T2456	Sprague		1	1	1	1	1	1	" " " "	1
483		Lower Chopper Bd. Ass'y.	BA-013467	DCS	1		1		1		1		
484	R1700	Resistor CB, 1/4W, 10%	39 K	Allen Bradley	1	.2		.2				Used in Item #483 (MS35350)	
485	R1701	Resistor CB, 1/4W, 10%	560 ohms	Allen Bradley	1	.2		.2				" " " " (MS35350)	
486	R1703	Resistor CB, 1/4W, 10%	6.8 K	Allen Bradley	2	.2		.2				" " " " (MS35350)	
487	R1710	Resistor CB, 1/4W, 10%	6.8 K	Allen Bradley		.2		.2				" " " " (MS35350)	
488	R1711	Resistor CB, 1/4W, 10%	22 K	Allen Bradley	1	.2		.2				" " " " (MS35350)	
489	C1700	Capacitor	150D, 15V,	Sprague	3	.5		.5				" " " " "	
			3.3 mf										
490	C1701	Capacitor	150D, 15V,	Sprague		.5		.5				" " " " "	
			3.3 mf										
491	C1704	Capacitor	150D, 15V,	Sprague		.5		.5				" " " " "	
			3.3 mf										
492	CR1702	Diode	IN3067	Cont. Devices	2	1		1				" " " " "	
493	CR1703	Diode	IN3067	Cont. Devices		1		1				" " " " "	
494		Upper Chopper Bd. Ass'y.	BA-013468	DCS	1		1		1				
495	R1702	Resistor CB, 1/4W, 10%	F. A.	Allen Bradley	1	.2		.2				Used in Item #494 (MS35350)	
496	R1704	Resistor CB, 1/4W, 10%	33 K	Allen Bradley	1	.2		.2				" " " " (MS35350)	
497	R1705	Resistor CB, 1/4W, 10%	2.2 K	Allen Bradley	4	.2		.2				" " " " (MS35350)	

*Spares for 1 unit per 10,000 hrs. con't. operation

**Qty. per 10 - 12 units

Table 5-5. Replacement Parts List (continued)

[illegible]

*Spares for 1 unit per 10,000 hrs. con't. operation

****Qty. per 10 - 12 units**

SECTION VI

DRAWINGS


6-1. GENERAL. The drawings listed in this section are furnished to supplement the information given in the text.

DO-013373	Outline Drawing, GFD-13
EW-013819	*Schematic Drawing, GFD-13
TW-013291	Schematic Drawing, Power Supply
BA-013332	Output Connector Ass'y., P. S. (2600)
GA-013334	P. S. Board Ass'y. (2800)
BA-013333	± 18 V P. S. Board Ass'y. (2900)
TA-013497	Output Amplifier Board Ass'y. (1600)
BA-013468	Chopper Board Ass'y., Upper (1700)
BA-013467	Chopper Board Ass'y., Lower (1700)
CA-013452	Master Board Ass'y.
DA-013506	Limiter & Input Meter (200)
GA-013547	VCO Board Ass'y.

*For Loop Filter (3400, 3500), Band Pass Filter (3100) and Low Pass Filter (4600) Schematics see Drawing EW-013819.

REFERENCE DEMODULATOR

51 SOCKET	
PIN NO	PIN CONNECTIONS
A	OUTPUT TAPE SPEED COMP SIGNAL
B	
C	OUTPUT GROUND
D	INPUT TAPE SPEED COMP SIGNAL
E	
F	INPUT MULTIPLEX
H	JUMPER TO M P D
J	WFF INPUT SHORTED BNC ON GMIN-13
K	
L	JUMPER TO R
M	JUMPER TO M P D
N	OUTPUT DELAYED MULTIPLEX
P	JUMPER TO M P H
R	JUMPER TO L
S	
T	
U	
V	
W	
X	
Y	
Z	
AA	
BB	115VAC INPUT
CC	
DD	115VAC INPUT

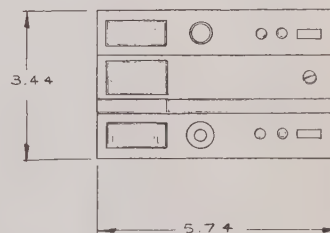

NOTE:
1. * WHEN WOVF FLUTTER USE SHORTED BNC.
2. PLUG PI 5 SOCKET S1 IN THE SAME MANNER DEMODULATOR OR D APPLICATION. SEE GA DO-013508 FOR EX FOR USE AS DATA OR

DATA DEMODULATOR

PI PLUG		SI SOCKET	
PIN NO.	PIN CONNECTIONS	PIN NO.	PIN CONNECTIONS
A	OUTPUT	A	OUTPUT
B	SUBCARRIER MONITOR	B	
C	OUTPUT GROUND	C	OUTPUT GROUND
D	SUBCARRIER INPUT	D	SUBCARRIER INPUT
E	AUTO-CAL	E	
F	V. C. O. OUTPUT	F	V. C. O. OUTPUT
H	FEEDBACK #1	H	JUMPER TO M & P
J	W & F INPUT	J	W & F INPUT *
K	AUTO-CAL	K	
L	CURRENT OUT (+)	L	JUMPER TO R
M	FEEDBACK #2	M	JUMPER TO H & P
N	EXT. ZERO	N	EXT. ZERO OFFSET SHORTED BNC ON GMMH-13
P	FEEDBACK	P	JUMPER TO M & N
R	CURRENT OUT (-)	R	JUMPER TO L
S	}	S	
T		T	
U		U	
V		V	
W	}	W	
X		X	
Y		Y	
Z		Z	
AA	}	AA	
BB		BB	115VAC INPUT
CC		CC	
DD		DD	115VAC INPUT



INPUT CONNECTOR
BURNDY MS-26P-1

R IS NOT USED
GMMH-13.
GMMH-13 IS WIRED
FOR REFERENCE
A DEMODULATOR
-13 OUTLINE DWG.
EXTERNAL CONNECTIONS
OF DEMODULATOR.

DECIMAL 3 PLACE $\pm .010$
DECIMAL 2 PLACE $\pm .020$
FRACTIONAL 1/32 AND ± 0.30
FLATNESS WITHIN .010
FRACTIONAL HOLES $\pm 1/64$
NOTE: BREAK ALL SHARP
CORNERS .005" DIA
SURFACE ROUGHNESS NOT
TO EXCEED

TOLERANCE		SCALE 1/2	DATE	TITLE	
DNC - 200		OWN W/S	2-11-65	MODEL GFD-13	
DNC - 200		CHKD 1/4	2-11-65	FM DEMODULATOR	
DNC - 200		PROCA 1/4	2-11-65	DO NOT SCALE DRAWING	
DNC - 200		ENG 1/4	2-11-65	FINISH	
NEXT ASSY		CH 1/4	2-11-65	MODEL	
		ENG 1/4	2-11-65	GFD-13	
				DO-013373	
				REV	
				B	


0 ELEC'D-00

REF	DESCRIPTION	QTY
-----	-------------	-----



- | | | | |
|---|--|---|---|
|  DATA CONTROL
SYSTEMS, INC. | | TITLE
SCHEMATIC - SUPPLY | |
| TOLERANCES: UNLESS
OTHERWISE SPECIFIED | | DWG PJH | DATE 12/2/65 |
| DECIMAL - 3 PLACE $\pm .005$
DECIMAL - 2 PLACE $\pm .010$
FRAC. $\pm 1/64$ ANG. $\pm 0^{\circ}30'$
FLATNESS WITHIN $\pm .011$
FRACTIONAL HOLES - $0 - 1/64$
NOTE: BREAK ALL SHARP
CORNERS .005" OIS*
SURFACE ROUGHNESS NOT
TO EXCEED 7 | | CHKD E. J. J.
ENG. E. J. J.
APP. [Signature] | DO NOT SCALE DRAWING
MAT'L _____
FINISH _____
TW-013291 |
| | | SCALE _____ | SHEET _____ |

REV	DESCRIPTION	DATE	OWN	CHK	APP.
-----	-------------	------	-----	-----	------

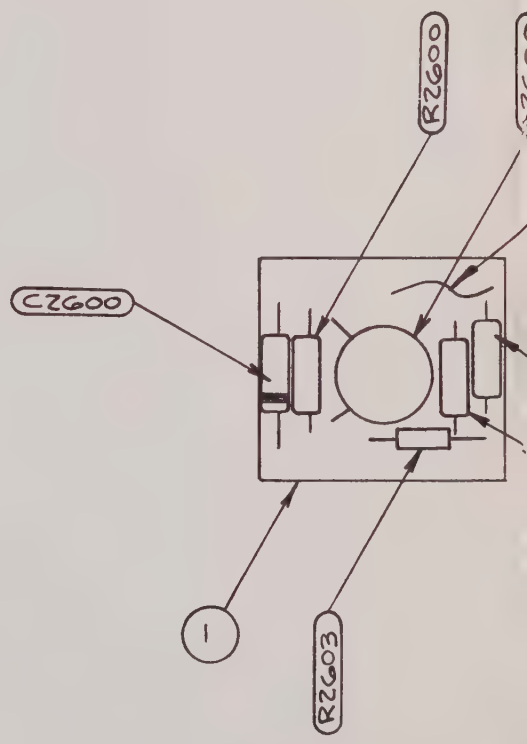

REF	DESCRIPTION	QTY
-----	-------------	-----

GFD-13	DA-0
--------	------

BA-013332

REV
A

ITEM	SYMBOL	DWG NO.	DESCRIPTION	QTY. / ASSY
1		BF-013305	BD FAB, OUTPUT CONN	1
	R2G00		RES. AB, EB, 1/2W, 5%, 15 Ω	1
	R2G01		RES. WL, RUGOC, 1/4W, 1%, 23T Ω	1
	R2G02		RES. $\downarrow$ 23T Ω	1
	R2G03		RES. WL, RUGOC, 1/4W, 1%, 1.33K	1
	C2G00		CAP. V84B, AEROVOL, 200V, .0033 μ F	1
	L2G00	BA-014062	INDUCTOR	1

STAMP D.C.S. PART NO.
IN 1/8 HIGH
CONTRASTING
CHARACTERS
APPROX. AS SHOWN

R2G02

R2G01



**DATA CONTROL
SYSTEMS, INC.**

TITLE

BD ASSY, OUTPUT CONN,
POWER SUPPLY (2G00)

TOLERANCES: UNLESS
OTHERWISE SPECIFIED

DECIMAL - 3 PLACE $\pm .005$
DECIMAL - 2 PLACE $\pm .010$
FRAC. $\pm 1/64$ ANG. $\pm 0^{\circ}30'$
FLATNESS WITHIN $\sim$ /IN.
FRACTIONAL HOLES $\cdot 0$ + 1/64
NOTE: BREAK ALL SHARP
CORNERS .005" .015"
SURFACE ROUGHNESS NOT
TO EXCEED $\sim$

DWN.

DH

DATE

5/21/65

CHKD

PH

7/8/65

ENG.

WY

7/9/65

APP

VY

7/9/65

SCALE FULL

DO NOT SCALE DRAWING

MAT'L

FINISH

BA-013332

REV.

A

SHEET


13970

QTY

/ ASSY

ASSEMBLY

REV	DESCRIPTION	DATE	DWN	CHK	APP
1	GA-013334	10/15/64	W		
2	REVISED	11/10/64	W		

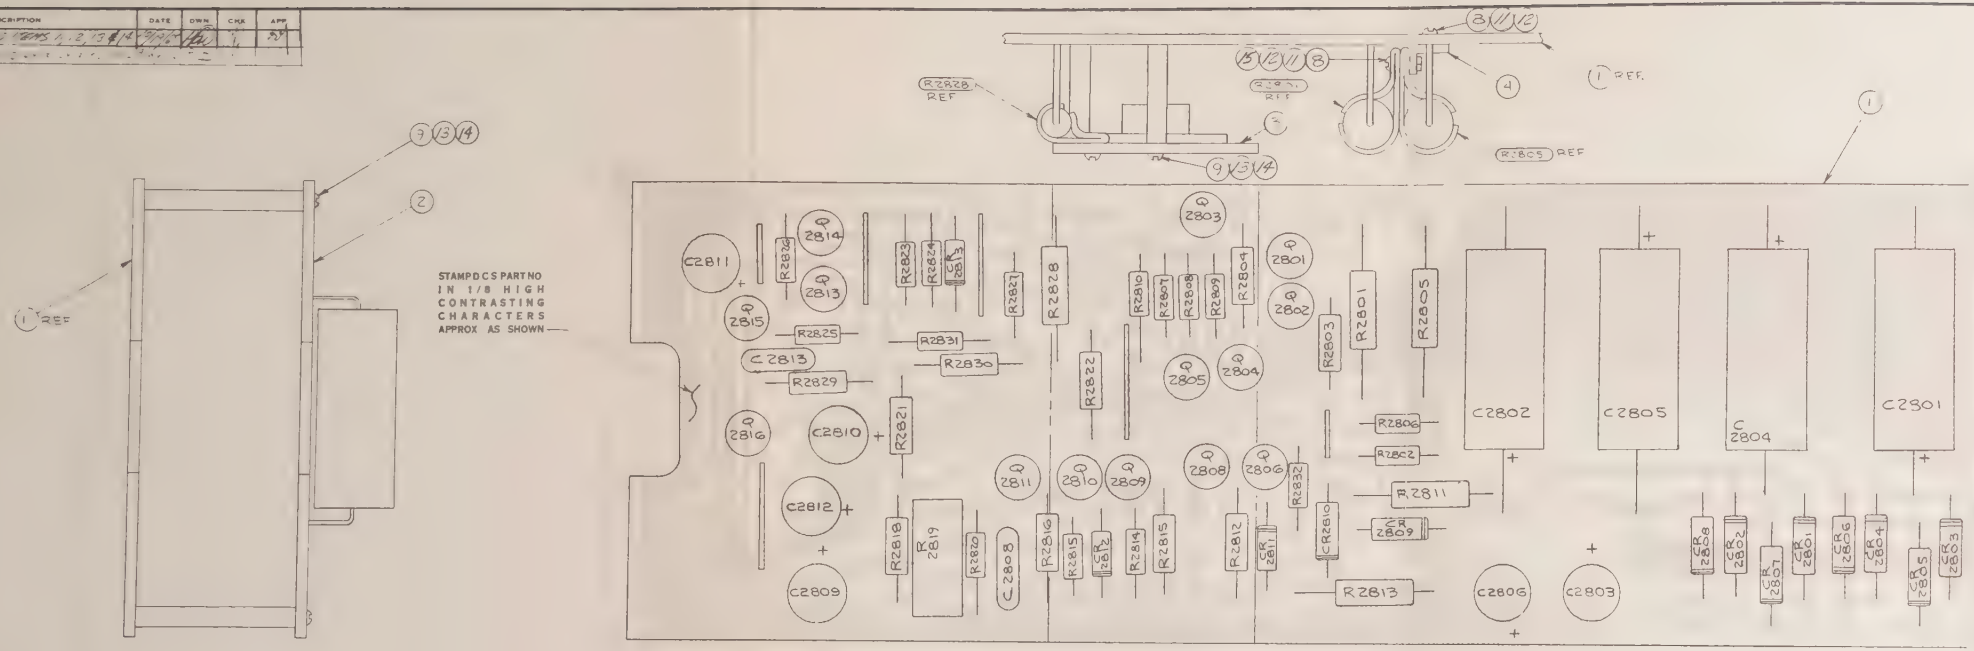

- NOTES
- ITEMS #3, R2828, Q2807 & Q2812 TO BE PREASSEMBLED PER DWG BA-013537, THEN MOUNTED TO ITEM #1.
 - ITEMS #4, R2801 & R2805 TO BE PREASSEMBLED THEN MOUNTED TO ITEM #1.
 - *LATEST REVISION.
 - *S - SCREW LENGTHS TO BE DETERMINED IN ACCORDANCE WITH DCS WORKMANSHIP MANUAL AS-832011.
 - ITEM 6 TO MOUNT UNDER TRANS. Q2801.
 - ITEM 7 TO MOUNT UNDER TRANS. Q2803, Q2805, Q2806, Q2808, Q2813, Q2814, Q2815, & Q2816.

REV	DESCRIPTION	DATE	DWN	CHK	APP
1	GA-013334	10/15/64	W		
2	REVISED	11/10/64	W		

ITEM	SYMBOL	DWG NO	DESCRIPTION	QTY
1		BA-013333	BRACKET ASSY	1
2		BA-013537	BRACKET ASSY	1
3		BA-013537	BRACKET ASSY	1
4		BA-013537	BRACKET ASSY	1
5		BA-013537	BRACKET ASSY	1
6		BA-013537	BRACKET ASSY	1
7		BA-013537	BRACKET ASSY	1
8		BA-013537	BRACKET ASSY	1
9		BA-013537	BRACKET ASSY	1
10		BA-013537	BRACKET ASSY	1
11		BA-013537	BRACKET ASSY	1
12		BA-013537	BRACKET ASSY	1
13		BA-013537	BRACKET ASSY	1
14		BA-013537	BRACKET ASSY	1
15		BA-013537	BRACKET ASSY	1
16		BA-013537	BRACKET ASSY	1
17		BA-013537	BRACKET ASSY	1
18		BA-013537	BRACKET ASSY	1
19		BA-013537	BRACKET ASSY	1
20		BA-013537	BRACKET ASSY	1
21		BA-013537	BRACKET ASSY	1
22		BA-013537	BRACKET ASSY	1
23		BA-013537	BRACKET ASSY	1
24		BA-013537	BRACKET ASSY	1
25		BA-013537	BRACKET ASSY	1
26		BA-013537	BRACKET ASSY	1
27		BA-013537	BRACKET ASSY	1
28		BA-013537	BRACKET ASSY	1
29		BA-013537	BRACKET ASSY	1
30		BA-013537	BRACKET ASSY	1
31		BA-013537	BRACKET ASSY	1
32		BA-013537	BRACKET ASSY	1
33		BA-013537	BRACKET ASSY	1
34		BA-013537	BRACKET ASSY	1
35		BA-013537	BRACKET ASSY	1
36		BA-013537	BRACKET ASSY	1
37		BA-013537	BRACKET ASSY	1
38		BA-013537	BRACKET ASSY	1
39		BA-013537	BRACKET ASSY	1
40		BA-013537	BRACKET ASSY	1
41		BA-013537	BRACKET ASSY	1
42		BA-013537	BRACKET ASSY	1
43		BA-013537	BRACKET ASSY	1
44		BA-013537	BRACKET ASSY	1
45		BA-013537	BRACKET ASSY	1
46		BA-013537	BRACKET ASSY	1
47		BA-013537	BRACKET ASSY	1
48		BA-013537	BRACKET ASSY	1
49		BA-013537	BRACKET ASSY	1
50		BA-013537	BRACKET ASSY	1
51		BA-013537	BRACKET ASSY	1
52		BA-013537	BRACKET ASSY	1
53		BA-013537	BRACKET ASSY	1
54		BA-013537	BRACKET ASSY	1
55		BA-013537	BRACKET ASSY	1
56		BA-013537	BRACKET ASSY	1
57		BA-013537	BRACKET ASSY	1
58		BA-013537	BRACKET ASSY	1
59		BA-013537	BRACKET ASSY	1
60		BA-013537	BRACKET ASSY	1
61		BA-013537	BRACKET ASSY	1
62		BA-013537	BRACKET ASSY	1
63		BA-013537	BRACKET ASSY	1
64		BA-013537	BRACKET ASSY	1
65		BA-013537	BRACKET ASSY	1
66		BA-013537	BRACKET ASSY	1
67		BA-013537	BRACKET ASSY	1
68		BA-013537	BRACKET ASSY	1
69		BA-013537	BRACKET ASSY	1
70		BA-013537	BRACKET ASSY	1
71		BA-013537	BRACKET ASSY	1
72		BA-013537	BRACKET ASSY	1
73		BA-013537	BRACKET ASSY	1
74		BA-013537	BRACKET ASSY	1
75		BA-013537	BRACKET ASSY	1
76		BA-013537	BRACKET ASSY	1
77		BA-013537	BRACKET ASSY	1
78		BA-013537	BRACKET ASSY	1
79		BA-013537	BRACKET ASSY	1
80		BA-013537	BRACKET ASSY	1
81		BA-013537	BRACKET ASSY	1
82		BA-013537	BRACKET ASSY	1
83		BA-013537	BRACKET ASSY	1
84		BA-013537	BRACKET ASSY	1
85		BA-013537	BRACKET ASSY	1
86		BA-013537	BRACKET ASSY	1
87		BA-013537	BRACKET ASSY	1
88		BA-013537	BRACKET ASSY	1
89		BA-013537	BRACKET ASSY	1
90		BA-013537	BRACKET ASSY	1
91		BA-013537	BRACKET ASSY	1
92		BA-013537	BRACKET ASSY	1
93		BA-013537	BRACKET ASSY	1
94		BA-013537	BRACKET ASSY	1
95		BA-013537	BRACKET ASSY	1
96		BA-013537	BRACKET ASSY	1
97		BA-013537	BRACKET ASSY	1
98		BA-013537	BRACKET ASSY	1
99		BA-013537	BRACKET ASSY	1
100		BA-013537	BRACKET ASSY	1

10	JUMPER #22 BUSS WIRE	1
11	WASHER, SPACER	1
12	WASHER, FLAT	1
13	WASHER, FLAT	1
14	WASHER, SPACER	1
15	NUT, W/LOCKWASHER	1

REV	DESCRIPTION	DATE	DWN	CHK	APP
1	GA-013334	10/15/64	W		
2	REVISED	11/10/64	W		

GA-013334	DA-013970	1
PRODUCT	NEXT ASSEMBLY	QTY
		1

TOLERANCES UNLESS OTHERWISE SPECIFIED	DO NOT SCALE DRAWING
DECIMAL - 3 PLACE ± .005	
FRACTIONAL - 1/16 ± .010	
FRACTIONAL - 1/32 ± .010	
FRACTIONAL - 1/64 ± .010	
FRACTIONAL - 1/128 ± .010	
FRACTIONAL - 1/256 ± .010	
FRACTIONAL - 1/512 ± .010	
FRACTIONAL - 1/1024 ± .010	
FRACTIONAL - 1/2048 ± .010	
FRACTIONAL - 1/4096 ± .010	
FRACTIONAL - 1/8192 ± .010	
FRACTIONAL - 1/16384 ± .010	
FRACTIONAL - 1/32768 ± .010	
FRACTIONAL - 1/65536 ± .010	
FRACTIONAL - 1/131072 ± .010	
FRACTIONAL - 1/262144 ± .010	
FRACTIONAL - 1/524288 ± .010	
FRACTIONAL - 1/1048576 ± .010	
FRACTIONAL - 1/2097152 ± .010	
FRACTIONAL - 1/4194304 ± .010	
FRACTIONAL - 1/8388608 ± .010	
FRACTIONAL - 1/16777216 ± .010	
FRACTIONAL - 1/33554432 ± .010	
FRACTIONAL - 1/67108864 ± .010	
FRACTIONAL - 1/134217728 ± .010	
FRACTIONAL - 1/268435456 ± .010	
FRACTIONAL - 1/536870912 ± .010	
FRACTIONAL - 1/1073741824 ± .010	
FRACTIONAL - 1/2147483648 ± .010	
FRACTIONAL - 1/4294967296 ± .010	
FRACTIONAL - 1/8589934592 ± .010	
FRACTIONAL - 1/17179869184 ± .010	
FRACTIONAL - 1/34359738368 ± .010	
FRACTIONAL - 1/68719476736 ± .010	
FRACTIONAL - 1/137438953472 ± .010	
FRACTIONAL - 1/274877906944 ± .010	
FRACTIONAL - 1/549755813888 ± .010	
FRACTIONAL - 1/1099511627776 ± .010	
FRACTIONAL - 1/2199023255552 ± .010	
FRACTIONAL - 1/4398046511104 ± .010	
FRACTIONAL - 1/8796093022208 ± .010	
FRACTIONAL - 1/17592186044416 ± .010	
FRACTIONAL - 1/35184372088832 ± .010	
FRACTIONAL - 1/70368744177664 ± .010	
FRACTIONAL - 1/140737488355328 ± .010	
FRACTIONAL - 1/281474976710656 ± .010	
FRACTIONAL - 1/562949953421312 ± .010	
FRACTIONAL - 1/1125899906842624 ± .010	
FRACTIONAL - 1/2251799813685248 ± .010	
FRACTIONAL - 1/4503599627370496 ± .010	
FRACTIONAL - 1/9007199254740992 ± .010	
FRACTIONAL - 1/18014398509481984 ± .010	
FRACTIONAL - 1/36028797018963968 ± .010	
FRACTIONAL - 1/72057594037927936 ± .010	
FRACTIONAL - 1/144115188075855872 ± .010	
FRACTIONAL - 1/288230376151711744 ± .010	
FRACTIONAL - 1/576460752303423488 ± .010	
FRACTIONAL - 1/1152921504606846976 ± .010	
FRACTIONAL - 1/2305843009213693952 ± .010	
FRACTIONAL - 1/4611686018427387904 ± .010	
FRACTIONAL - 1/9223372036854775808 ± .010	
FRACTIONAL - 1/18446744073709551616 ± .010	
FRACTIONAL - 1/36893488147419103232 ± .010	
FRACTIONAL - 1/73786976294838206464 ± .010	
FRACTIONAL - 1/147573952589676412928 ± .010	
FRACTIONAL - 1/295147905179352825856 ± .010	
FRACTIONAL - 1/590295810358705651712 ± .010	
FRACTIONAL - 1/1180591620717411303424 ± .010	
FRACTIONAL - 1/2361183241434822606848 ± .010	
FRACTIONAL - 1/4722366482869645213696 ± .010	
FRACTIONAL - 1/9444732965739290427392 ± .010	
FRACTIONAL - 1/18889465931478580854784 ± .010	
FRACTIONAL - 1/37778931862957161709568 ± .010	
FRACTIONAL - 1/75557863725914323419136 ± .010	
FRACTIONAL - 1/151115727451828646838272 ± .010	
FRACTIONAL - 1/302231454903657293676544 ± .010	
FRACTIONAL - 1/604462909807314587353088 ± .010	
FRACTIONAL - 1/1208925819614629174706176 ± .010	
FRACTIONAL - 1/2417851639229258349412352 ± .010	
FRACTIONAL - 1/4835703278458516698824704 ± .010	
FRACTIONAL - 1/9671406556917033397649408 ± .010	
FRACTIONAL - 1/19342813113834066795298816 ± .010	
FRACTIONAL - 1/38685626227668133590597632 ± .010	
FRACTIONAL - 1/77371252455336267181195264 ± .010	
FRACTIONAL - 1/154742504910672534362390528 ± .010	
FRACTIONAL - 1/309485009821345068724781056 ± .010	
FRACTIONAL - 1/618970019642690137449562112 ± .010	
FRACTIONAL - 1/1237940039285380274899124224 ± .010	
FRACTIONAL - 1/2475880078570760549798248448 ± .010	
FRACTIONAL - 1/4951760157141521099596496896 ± .010	
FRACTIONAL - 1/9903520314283042199192993792 ± .010	
FRACTIONAL - 1/19807040628566084398385987584 ± .010	
FRACTIONAL - 1/39614081257132168796771975168 ± .010	
FRACTIONAL - 1/79228162514264337593543950336 ± .010	
FRACTIONAL - 1/158456325028528675187087900672 ± .010	
FRACTIONAL - 1/316912650057057350374175801344 ± .010	
FRACTIONAL - 1/633825300114114700748351602688 ± .010	
FRACTIONAL - 1/1267650600228229401496703205376 ± .010	
FRACTIONAL - 1/2535301200456458802993406410752 ± .010	
FRACTIONAL - 1/5070602400912917605986812821504 ± .010	
FRACTIONAL - 1/10141204801825835211973625643008 ± .010	
FRACTIONAL - 1/20282409603651670423947251286016 ± .010	
FRACTIONAL - 1/40564819207303340847894502572032 ± .010	
FRACTIONAL - 1/81129638414606681695789005144064 ± .010	
FRACTIONAL - 1/162259276829213363391578010288128 ± .010	
FRACTIONAL - 1/324518553658426726783156020576256 ± .010	
FRACTIONAL - 1/649037107316853453566312041152512 ± .010	
FRACTIONAL - 1/1298074214633706907132624082305024 ± .010	
FRACTIONAL - 1/2596148429267413814265248164610048 ± .010	
FRACTIONAL - 1/5192296858534827628530496329220096 ± .010	
FRACTIONAL - 1/10384593717069655257060992658440192 ± .010	
FRACTIONAL - 1/20769187434139310514121985316880384 ± .010	
FRACTIONAL - 1/41538374868278621028243970633760768 ± .010	
FRACTIONAL - 1/83076749736557242056487941267521536 ± .010	
FRACTIONAL - 1/166153499473114484112975882535043072 ± .010	
FRACTIONAL - 1/332306998946228968225951765070086144 ± .010	
FRACTIONAL - 1/664613997892457936451903530140172288 ± .010	
FRACTIONAL - 1/1329227995784915872903807060280344576 ± .010	
FRACTIONAL - 1/2658455991569831745807614120560689152 ± .010	
FRACTIONAL - 1/5316911983139663491615228241121378304 ± .010	
FRACTIONAL - 1/10633823966279326983230456482242756608 ± .010	
FRACTIONAL - 1/21267647932558653966460912964485513216 ± .010	
FRACTIONAL - 1/42535295865117307932921825928971026432 ± .010	
FRACTIONAL - 1/85070591730234615865843651857942052864 ± .010	
FRACTIONAL - 1/170141183460469231731687303715884105728 ± .010	
FRACTIONAL - 1/340282366920938463463374607431768211456 ± .010	
FRACTIONAL - 1/680564733841876926926749214863536422912 ± .010	
FRACTIONAL - 1/1361129467683753853853498429727072845824 ± .010	
FRACTIONAL - 1/272225893536750770770699685945414569152 ± .010	
FRACTIONAL - 1/544451787073501541541399371890829138304 ± .010	
FRACTIONAL - 1/1088903574147003083082798743781658276608 ± .010	
FRACTIONAL - 1/2177807148294006166165597487563316553216 ± .010	
FRACTIONAL - 1/4355614296588012332331194975126633106432 ± .010	
FRACTIONAL - 1/8711228593176024664662389950253266212864 ± .010	
FRACTIONAL - 1/17422457186352049329324779900506524525728 ± .010	

/


/

/

/

AS

REV	DESCRIPTION	DATE	DWN	CHK	APP
-----	-------------	------	-----	-----	-----

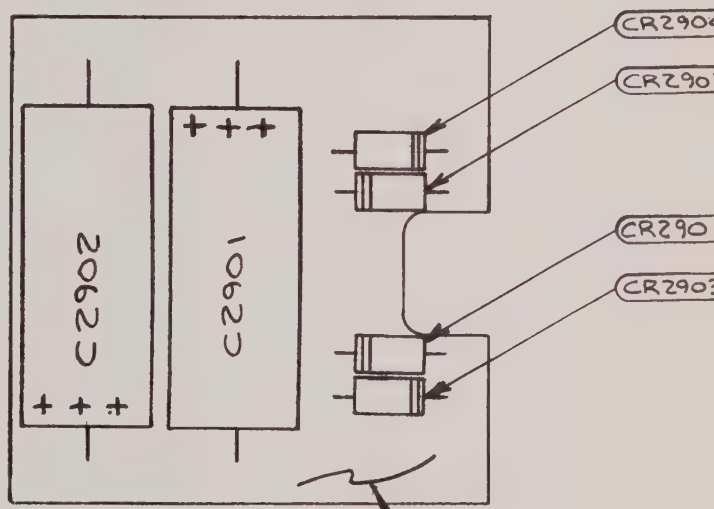

STAMP D.C.S. PART
IN 1/8 HIGH
CONTRAST
CHARACTER
APPROX. AS SHOWN

REF	DESCRIPTION	QTY
-----	-------------	-----

GFD-13	DA-0
DATE	NAME

BA-013333

REV
A

ITEM	SYMBOL	DWG. NO.	DESCRIPTION	QTY. ASSY.
1		BF-013300	BDFAB, 18V	1
	CR 2901		DIODE, SOLITRON, CERG9	1
	CR 2902		CERG9	1
	CR 2903		CERG9	1
	CR 2904		CERG9	1
	C2901		CAP, MEC, BT24, 30V, 800 μ f	1
	C2902		CAP MEC BT24, 30V, 800 μ f	1

DATA CONTROL
SYSTEMS, INC.

TITLE

BD ASSY, 18V,
POWER SUPPLYTOLERANCES: UNLESS
OTHERWISE SPECIFIED

DWN

DH

DATE

7/20/65

DO NOT SCALE DRAWING

DECIMAL - 3 PLACE $\pm$.005
DECIMAL - 2 PLACE $\pm$.010
FRAC. $\pm$ 1/64 ANG. $\pm$ 0°30'
FLATNESS WITHIN $\sim$ /IN.
FRACTIONAL HOLES - O. + 1/64
NOTE: BREAK ALL SHARP
CORNERS .005" .015"
SURFACE ROUGHNESS NOT
TO EXCEED $\sim$

CHKD.

PH

7/6/65

MAT'L

ENG.

M

7/6/65

FINISH

APP.

M

7/8/65

SCALE FULL

BA-013333

REV.

A

SHEET

Y ASSEMBLY

QTY

ASSY.

213970




[illegible]

		TA-C13497	
R1622	RES, AG CO, 1/4W, 10%, 82K		1
R1623		3.3K	1
R1625		10K	
R1627		10K	
R1628		10K	
R1629		10K	
R1630		10K	
R1631		10K	
R1632		5.6K	
R1633		1M	
R1634		10K	
R1635		10K	
R1636		47K	
R1637		33K	
R1638		10K	
R1639		10K	
R1640		33K	
R1641		10K	
R1642		10K	1
R1643		47K	1
R1644		22K	1
R1645		10K	
R1646		22K	1
R1647		22K	1
R1648		33K	1
R1649		10K	1
R1650		10K	1
R1651		10K	1
R1652		47K	1
R1653		22K	1
R1654		(6.8M) 150K	1
R1655		150K	1
R1656		470K	1
R1657		22K	1
R1658		22K	1
R1659		47K	1
R1660		3.9K	1
R1661	ELECTRA, 1/4W, 1%, 12.10K		
R1662	MF5C-D	34.80K	

 DATA CONTROL SYSTEMS, INC.	TITLE		BD. ASSY. OUTPUT AMPLIFIER	
	DWN <i>DR</i> DATE <i>5/10/65</i>		DO NOT SCALE DRAWING	
TOLERANCES: UNLESS OTHERWISE SPECIFIED CIMAL. 3 PLACE $\pm .005$ CIMAL. 2 PLACE $\pm .010$ ANG. $\pm 1/64$ ANG. $\pm 0^{\circ}30'$ FITS: WITHIN $\pm .001$ IN. ACTIONAL HOLES $\pm .001$ IN. TE: BREAK ALL SHARP CORNERS 005° . 015° SURFACE ROUGHNESS NOT EXCEED $\sqrt{\quad}$	CHKD. <i>FAE</i> <i>9/24/65</i> ENG. <i>EPH</i> <i>9/23/65</i> APP. <i>[Signature]</i> <i>9/26/65</i> SCALE <i>NONE</i>	MAT'L <i>---</i> FINISH <i>---</i>	TA-013497 SHEET 1 OF 2	

GFD-13	DA-013976	1
FIRST PRODUCT	NEXT ASSEMBLY	QTY ASSEMBLY

REF	DESCRIPTION	QTY
-----	-------------	-----

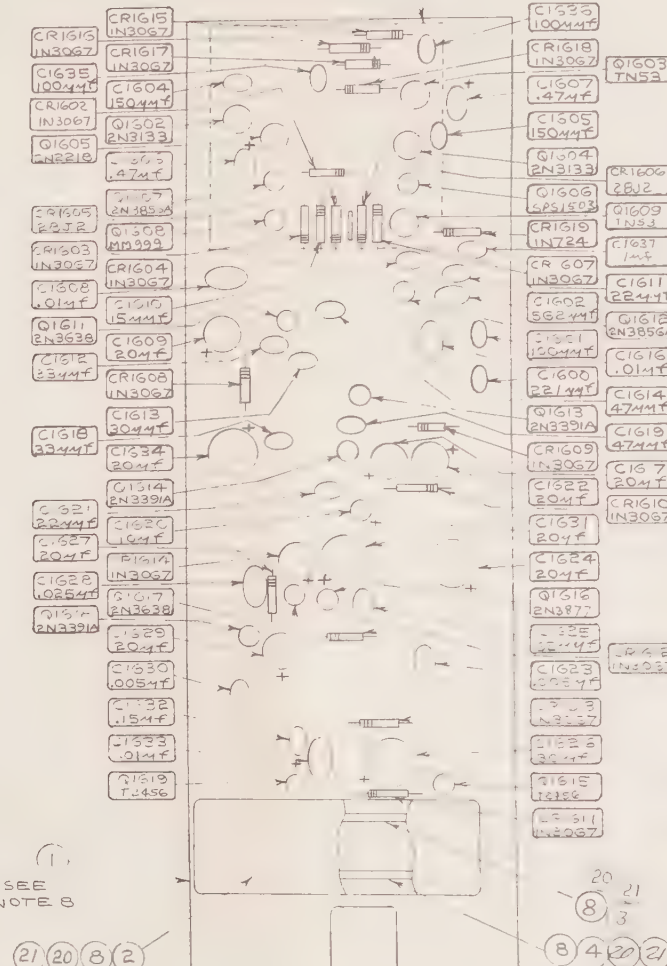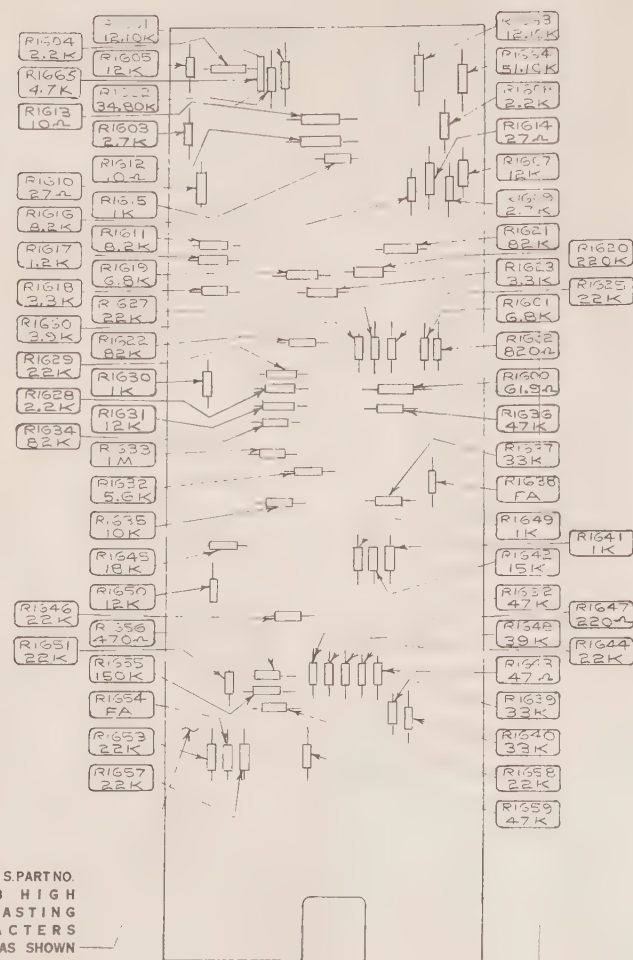


- 1) *-LATEST REVISION.
- 2) ** - SCREW LENGTHS TO BE DETERMINED IN ACCORDANCE WITH DCS WORKMANSHIP MANUAL AS-832011.
- 3) ITEM 11 TO MOUNT UNDER TRANS. Q1606, Q1608, Q1615, + Q1619.
- 4) ITEM 12 TO MOUNT UNDER TRANS. Q1602, Q1603, Q1604, Q1605, + Q1609.
- 5) ITEM 13 TO MOUNT UNDER TRANS. Q1607, Q1612, Q1613, Q1614, Q1616, + Q1618.
- 6) ITEM 14 TO MOUNT UNDER TRANS Q1611 + Q1617.
- 7) G.E. 2N385GA IS DIRECTLY INTERCHANGABLE WITH G.E. 1G164 + G.E. 2N3855A.
- 8) ITEMS 2, 3, + 4 TO BE PREASSEMBLED, THEN MOUNTED TO ITEM 1.
- 9) ITEMS 6 + 7 COME SUPPLIED WITH INSULATOR SHOULDER WASHERS + MOUNTING SCREWS. OMIT SCREWS AND SUBSTITUTE ITEMS 8 + 9.

PLACE ITEM 19 BETWEEN ITEMS 5 + 7 AS SHOWN IN VIEW A, PREASSEMBLE, BUT DO NOT TIGHTEN, ITEMS 5, 6, 7, 8, 9, + 19.

MOUNT ASSEMBLY ON TRANS. Q1602, Q1603, Q1604, Q1605, Q1606, Q1607, Q1608, + Q1609, THEN TIGHTEN SCREWS.
- 10) ITEM 17 CONSISTS OF THE FOLLOWING PARTS: RCDX-60-1, RMD 26L-1, RCDXB-055-1 AND YOC-074
- 11) ITEM 18 CONSISTS OF THE FOLLOWING PARTS: RMDX60-1 RFD 26L-1, RMDXB-055-1 AND YOC-074

 DATA CONTROL SYSTEMS, INC.		TITLE BD. ASSY., OUTPUT AMPLIFIER	
TOLERANCES: UNLESS OTHERWISE SPECIFIED		DWN <i>DR</i>	DATE <i>5/20/65</i>
DECIMAL - 3 PLACE $\pm .005$ DECIMAL - 2 PLACE $\pm .010$ FRAC. $\pm 1/64$ ANG. $\pm 0^{\circ}30'$ FLATNESS WITHIN $\sim$ /IN. FRACTIONAL HOLES - 0. + 1/64 NOTE BREAK ALL SHARP CORNERS .005" .015" SURFACE ROUGHNESS NOT TO EXCEED $\sim$		CHKD <i>TR</i> <i>5/22/65</i>	DO NOT SCALE DRAWING
		ENG <i>2/1/65</i> <i>5/24/65</i>	MAT'L
		APP <i>1/1</i> <i>5/24/65</i>	FIN SH
		SCALE <i>NONE</i>	TA - 013497
			SHEET 2 OF 2

REV	DESCRIPTION	DATE	DRAWN	CHECK	APP
B	CA-3161- CHANGED Q1700, Q1701	10/6/65	P.I	PD	CD

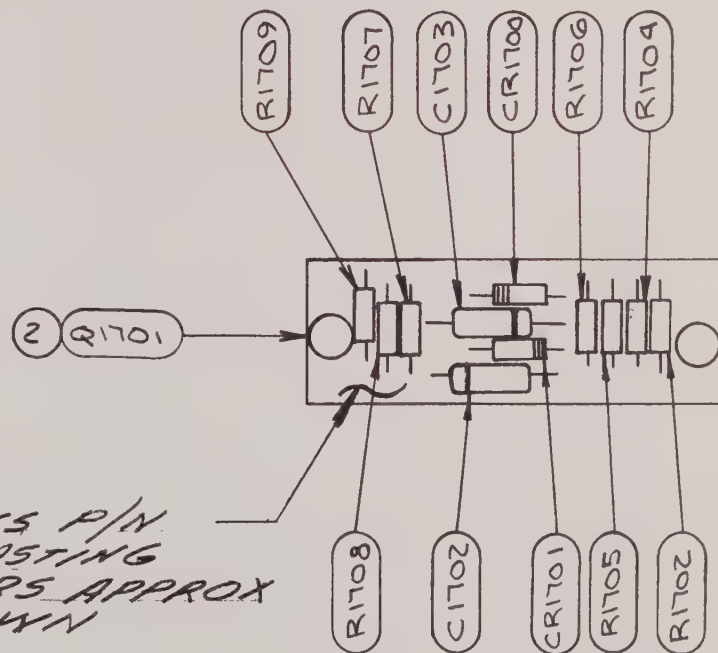

STAMP DCS P/N
IN CONTRASTING
CHARACTERS APPROX
AS SHOWN

REF	DESCRIPTION	QTY
-----	-------------	-----

GFD-13	GA-C
PRODUCT	NI

BA-013467

REV.

A

ITEM	SYMBOL	DWG. NO.	DESCRIPTION	QTY ASSY
1		BF-013329	BD FAB, CHOPPER	1
	R1700		RES, AB, CB, 1/4W, 10%, 39K	1
	R1701		560Ω	1
	R1703		6.8K	1
	R1710		6.8K	1
	R1711		22K	1
	C1700		CAP, SPRAGUE, 150Q, 15V, 3.3μf	1
	C1701		3.3μf	1
	C1704		3.3μf	1
	CR 1702		DIODE, CONT. DEVICE 1N3067	1
	CR 1703		1N3067	1

CR1702



C1704

R1711

STAMP DCS P/N IN CONTRASTING
CHARACTERS APPROX AS SHOWN



**DATA CONTROL
SYSTEMS, INC.**

TITLE

BD ASSY, CHOPPER (LOWER)

TOLERANCES: UNLESS
OTHERWISE SPECIFIED

DECIMAL - 3 PLACE ± .005
DECIMAL - 2 PLACE ± .010
FRAC. ± 1/64 ANG. ± 0°30'
FLATNESS WITHIN ~ /IN.
FRACTIONAL HOLES - 0. + 1/64
NOTE: BREAK ALL SHARP
CORNERS .005"-.015"
SURFACE ROUGHNESS NOT
TO EXCEED ~

DWN. DH

DATE 5/24/65

DO NOT SCALE DRAWING

CHKD. DWA

MAT'L

ENG. EPSH.

FINISH

APP.

BA-013467

REV.

A

SCALE FULL

SHEET




3497

1

QTY.
ASSY.

ASSEMBLY

REV.	DATE	DESCRIPTION	BY	CHK	APP
B	4/40	(F&E) 4-2054-1	WJ	LE	WJ
C	9/1/76	CA-2054-158 RMDX ITEM 3 & 4	WJ	LE	WJ
D	10/2/76	CA-2054-158 RMDX ITEM 3 & 4	WJ	LE	WJ

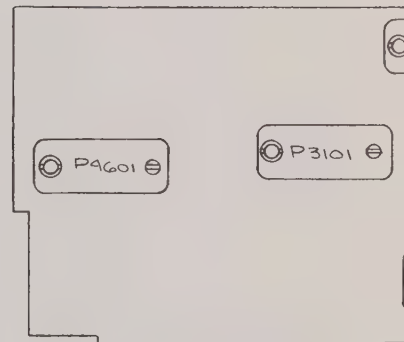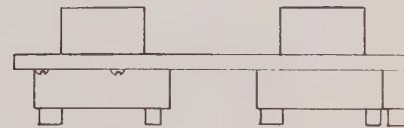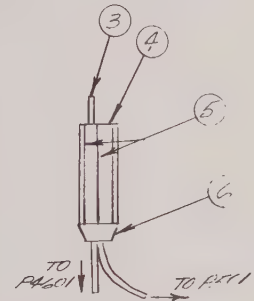




NOTES:

- 1) * = LATEST REVISION
- 2) ** = SCREW LENGTHS IN ACCORDANCE WITH WORKMANSHIP MANUAL

- 3) ITEM 3 CONSISTS OF RMDX60-1, RFD26L-1
- 4) ITEM 4 CONSISTS OF RCDX60-1, RMD-1

REV	DESCRIPTION	QTY.
-----	-------------	------

ITEM	SYMBOL	DWG. NO.	DESCRIPTION	QTY. / ASSY.
1		CF-013324	BD FAB, MASTER	1
	P4601		CONN, BURNDY, MS14RM-61	1
	P3101		MS 14 RM-61	1
	P201		MS 14 RM-61	1
	P3501		MS 20 RM-61	1
	P501		MS 26 RM-61	1
	P2801		CONN, BURNDY, MS 26 RM-61	1
2			STANDOFF, AMATOM, #8092-A-0440	2
3		(SEE NOTE 3)	CONTR, COAX BURNDY, MS 14	1
4		(SEE NOTE 4)	CONTR, COAX BURNDY, FEMALE	1
5			TUBING, SHARK, 1/4" ID - 2' L	2
6			SHEETWING, CLEM THERMOSET, 1/4"	9/2

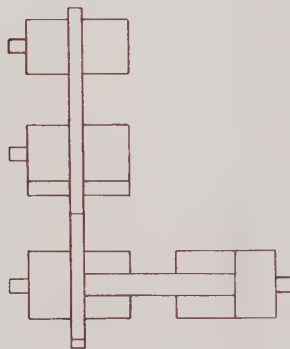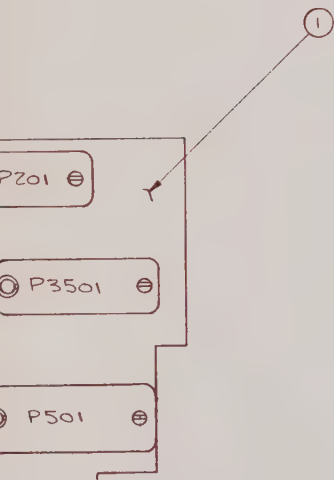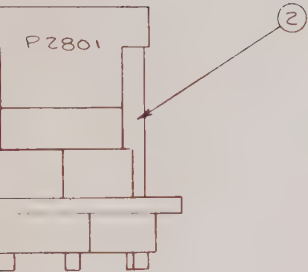

TO BE DETERMINED
WITH DCS
UAL #AS-832011.


THE FOLLOWING PARTS:
RMDXB-055-1, YOC-074
OF THE FOLLOWING PARTS:
62-1, RCDXB-055-1, YOC-074.

GFD-13	DA-013976	1
PRODUCT	NEXT ASSEMBLY	QTY. / ASSY.


DATA CONTROL SYSTEMS, INC.		TITLE BD ASSY, MASTER	
TOLERANCES: UNLESS OTHERWISE SPECIFIED DECIMAL - 3 PLACE ± .003 DECIMAL - 2 PLACE ± .010 FRAC. ± 1/64 ANG. ± 0°30' FLATNESS WITHIN ~ / IN. FRACTIONAL HOLES - 0, + 1/64 NOTE: BREAK ALL SHARP CORNERS .005"-.015"		DWN <i>DH</i> CHKD <i>1/1</i> PROJ. <i>1/1</i> ENG. <i>1/1</i> CH <i>1/1</i> ENG <i>1/1</i> SCALE FULL	DATE <i>3/13/65</i> DO NOT SCALE DRAWING MAT'L <i>~</i> FINISH <i>~</i> REV. <i>D</i>
PRODUCT		cA-013452	

CA-013452

REV. D

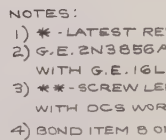

SION
DIRECTLY INTERCHANGABLE
4 + G.E. 2N3855A.
TH TO BE DETERMINED IN ACCORDANCE
MANSHIP MANUAL AS-832011
COPPER SIDE WITH ITEM 9 AS SHOWN.

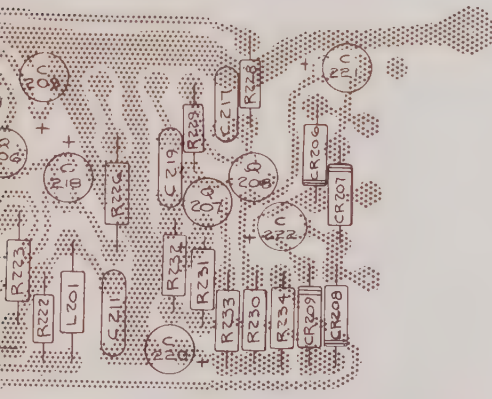

SEE NOTE 4

ITEM	SYMBOL	DWG. NO.	DESCRIPTION	QTY
1		CF-013280	BDFAB, LIMITER+INPUT METER	1
2		BD-013319	BRKT, RIGHT	1
3		BD-013320	BRKT, LEFT	1
4		AS-82602B*26	SCR, #2-56 FHMS. (**)	2
5			CONN., BURNDY, MS14PM-G1	1
R200			RES AB,CB,1/4W,10%, 3.3K	1
R201			AB,CB,1/4W,10%, 68K	1
R202			10%, F.A.	1
R203			AB,CB,1/4W,10%, 1.2K	1
R204			AB,CB,1/4W,10%, 22K	1
R205			ELECTRA, MFSC-D, 1/4W, 10%, 287Ω	1
R206			↑	1
R207			ELECTRA, MFSC-D, 1/4W, 10%, 237K	1
R208			AB,CB,1/4W,10%, 470Ω	1
R209			AB,CB,1/4W,10%, 4.7K	1
R210			ELECTRA, MFSC-D, 1/4W, 10%, 150Ω	1
R211			ELECTRA, MFSC-D, 1/4W, 10%, 10K	1
R212			10%, F.A.	1
R213			ELECTRA, MFSC-D, 1/4W, 10%, 215K	1
R214			ELECTRA, MFSC-D, 1/4W, 10%, 196K	1
R215			AB,CB,1/4W,10%, 100Ω	1
R216			ELECTRA, MFSC-D, 1/4W, 10%, 196K	1
R217			ELECTRA, MFSC-D, 1/4W, 10%, 681Ω	1
R218			AB,CB,1/4W,10%, 180Ω	1
R219			AB,CB,1/4W,10%, 4.7K	1
R220			ELECTRA, MFSC-D, 1/4W, 10%, 511Ω	1
R221			ELECTRA, MFSC-D, 1/4W, 10%, 10K	1
R222			AB,CB,1/4W,10%, 100Ω	1
R223			ELECTRA, MFSC-D, 1/4W, 10%, 141K	1
R224			AB,CB,1/4W,10%, 100Ω	1
R225			AB,CB,1/4W,10%, 100Ω	1
R226			ELECTRA, MFSC-D, 1/4W, 10%, 141K	1
R227			AB,CB,1/4W,10%, 1.5K	1
R228			100Ω	1
R229			10K	1
R230			AB,CB,1/4W,10%, 1K	1
R231			ELECTRA, MFSC-D, 1/4W, 10%, F.A.	1
R232			AB,CB,1/4W,10%, 10K	1
R233			↑	1
R234			AB,CB,1/4W,10%, 22K	1
Q200			TRANS., GE. 2N3856A	1
Q201			2N3856A	1
Q202			2N3856A	1
Q203			2N3856A	1
Q204			2N3856A	1
Q205			2N3856A	1
Q206			2N3856A	1
Q207			2N3856A	1
Q208			TRANS., GE. 2N3856A	1
CR200			DIODE CLEVITE, CTP700A	1
CR201			CLEVITE, CTP700A	1
CR202			GE. 28J2	1
CR203			↑	1
CR204			28J2	1
CR205			GE. 28J2	1
CR206			CONT. DEVICES IN 3067	1
CR207			↑	1
CR208			IN 3067	1
CR209			↑	1
C200			DIODE CONT. DEVICES IN 3067	1
C201			CAP, GENTRONICS, 20V, 20%, 30μF	1
C202			AP5054, 1E1, 15V, 25μF	1
C203			SC11, SPRAGUE, 25V, 1μF	1
C204			GENTRONICS, 20V, 20%, 30μF	1
C205			DURMICA, DM-10, 22μF	1
C206			AP5054, 1E1, 15V, 25μF	1
C207			DURMICA, DM-10, 12μF	1
C208			DURMICA, DM-10, 93μF	1
C209			GENTRONICS, 20V, 20%, 30μF	1
C210			AP5054, 1E1, 15V, 25μF	1
C211			SC11, SPRAGUE, 25V, 1μF	1
C212			BT, RMC, 100V, 1μF	1
C213			GENTRONICS, 20V, 20%, 30μF	1
C214			DURMICA, DM-10, 130μF	1
C215			DURMICA, DM-10, 22μF	1
C216			AP5054, 1E1, 15V, 25μF	1
C217			BT, RMC, 100V, 1μF	1
C218			AP5054, 1E1, 15V, 25μF	1
C219			SC11, SPRAGUE, 25V, 1μF	1
C220			AP5067, 1E1, 50V, 8μF	1
C221			AP5067, 1E1, 50V, 8μF	1
C222			↑	1
C223			BT, RMC, 100V, 1μF	1
C224			CAP, GENTRONICS, 20V, 20%, 30μF	1
L200			COIL, DELEVAN 2500-28, 1μH	1
L201			COIL, ↑	1
L202			COIL, DELEVAN 2500-28, 1μH	1
6		AS-826018*02	WASHER, SPLIT, #2	2
7		AS-826017*02	WASHER, #2	2
8		BD-014206	GUIDE RAIL	1
9			1/4" TRANSFER TAPE 9-916A A/R	1
10			PADS, TRANS., #7719-2N WHITE A/R	1

DATA CONTROL SYSTEMS, INC.		TITLE BD. ASSY, LIMITER & INPUT METER	
TOLERANCES: UNLESS OTHERWISE SPECIFIED		DO NOT SCALE DRAWING	
DECIMAL: 3 PLACE ± .008	DATE 9/2/65	CHKD. 5041	MAT'L 11/1/65
DECIMAL: 3 PLACE ± .008	PROV. ENG. 5041	FINISH 11/1/65	
FRAC: 1/64 ANG. ± 0°30'	SCALE NONE		
FLATNESS WITHIN .001			
FRACTIONAL HOLE D. ± 1/64			
NOTE: BREAK ALL SHARP CORNERS .008"-.010"			
GFD-13	BA-013642	1	REV B
FIRST PRODUCT	NEXT ASSEMBLY	QTY/ASBY	

